



Manuals.plus /

› EPOMAKER /

› EPOMAKER Ajazz AKP153 Studio Controller User Manual

EPOMAKER AKP153

EPOMAKER Ajazz AKP153 Studio Controller

USER MANUAL

Introduction

The EPOMAKER Ajazz AKP153 is a versatile studio controller designed to enhance productivity for various digital tasks, including video editing, music production, gaming, and live streaming. It features 15 customizable LCD macro keys and an integrated LCD screen, providing real-time insights and quick access to essential functions.

This manual provides detailed instructions on setting up, operating, and maintaining your AKP153 controller to ensure optimal performance and longevity.

What's in the Box

- 1 x Ajazz AKP153 Studio Controller
- 1 x Type-C USB Cable

Specifications


| | |
|-----------------------------|--------------------------------------------------------------|
| Model | Ajazz AKP153 |
| Keys | 15 Customizable LCD Macro Keys |
| Screen | 1 x LCD Screen |
| Connection | USB-C Wired Only |
| System Compatibility | Windows (Windows 7 and above), macOS (macOS 10.13 and above) |
| Item Weight | 11.7 ounces (approx. 331g) |
| Package Dimensions | 7.48 x 5.28 x 3.03 inches |

Setup

1. Connecting the Device

Connect the Ajazz AKP153 to your computer using the provided Type-C USB cable. Insert one end into the USB-C port on the controller and the other end into an available USB port on your Windows or macOS computer.

AKP153 Desktop Helper

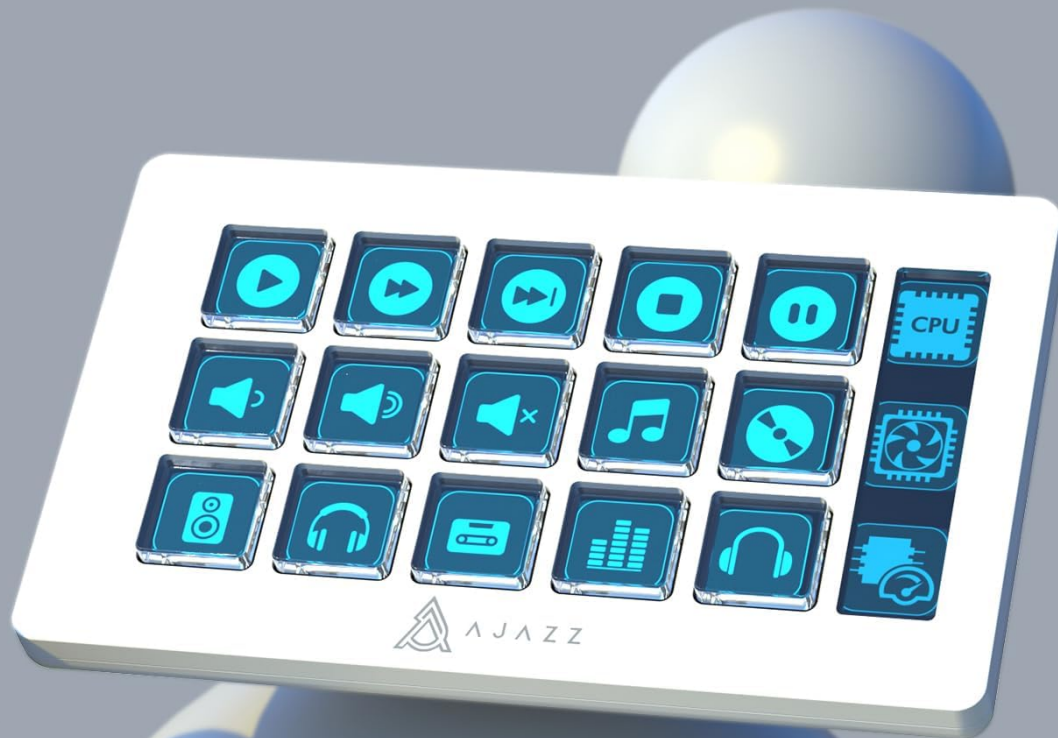

The Ajazz AKP153 is compatible with Windows 7 and above, and macOS 10.13 and above, ensuring broad system integration.

2. Software Installation

For full customization of the LCD macro keys and screen, download and install the dedicated software (often referred to as 'Desktop Helper' or similar) from the official EPOMAKER website. Follow the on-screen instructions for installation.


This software allows you to assign functions, macros, and custom icons to each of the 15 LCD keys and configure the integrated LCD screen.

Operating the AKP153

1. Customizable LCD Macro Keys

The 15 LCD keys can be programmed to perform a wide range of actions, including launching applications, executing complex macros, controlling media playback, and managing streaming functions. Use the companion software to:

- Assign single keypresses or multi-step macros.
- Upload custom icons or images to display on each key.
- Create different profiles for various applications (e.g., one for video editing, one for gaming, one for streaming).

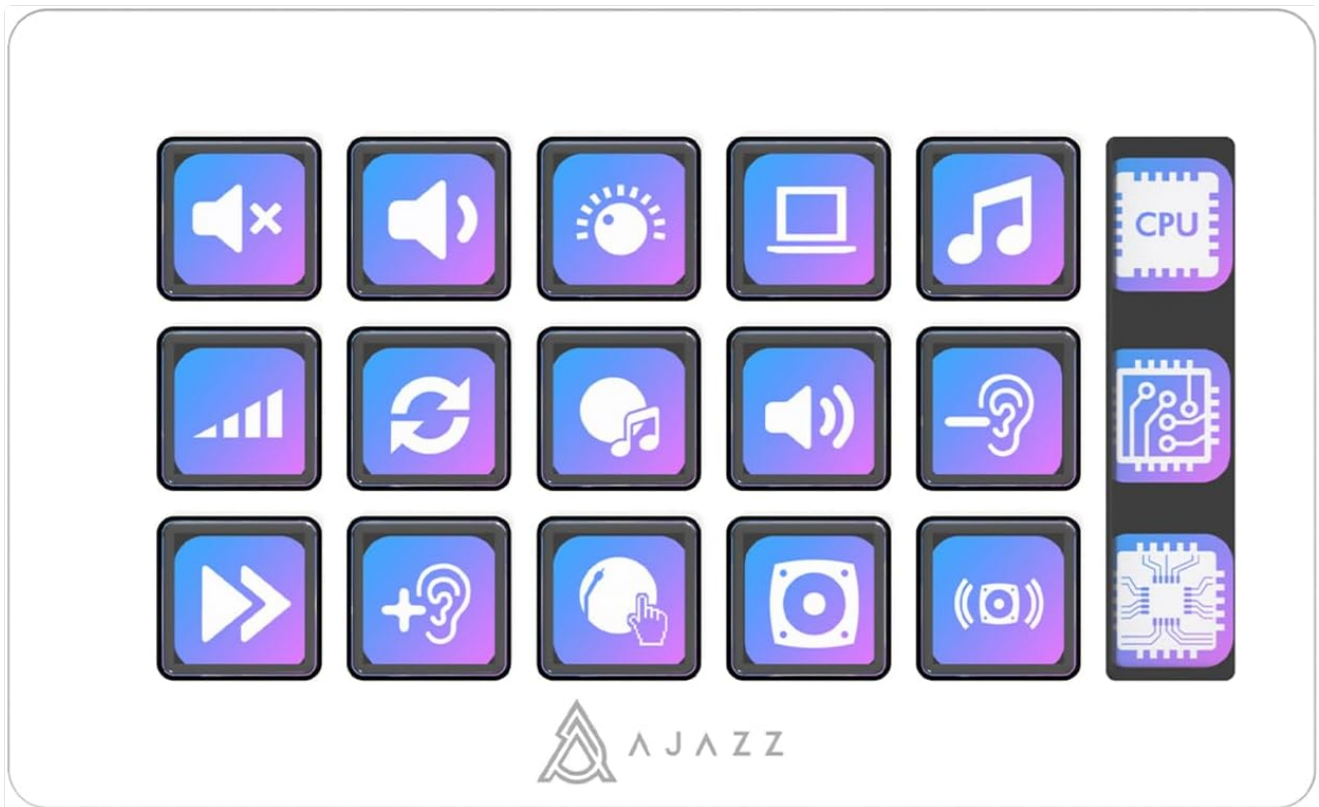

The 15 LCD keys can be customized with various functions and visual indicators for efficient workflow.

2. Integrated LCD Screen

The dedicated LCD screen provides real-time information, which can be configured through the software. This may include system performance metrics (CPU usage), time, or other relevant data depending on your setup and software capabilities.

3. Application-Specific Use

The AKP153 is highly effective for:

- **Video Editing:** Assign shortcuts for cutting, pasting, applying effects, or navigating timelines.
- **Music Production:** Control DAW functions, trigger samples, or manage audio tracks.
- **Gaming:** Execute complex combos, switch weapons, or activate abilities with a single press.
- **Live Streaming (YouTube/Twitch/OBS):** Manage scenes, mute microphones, start/stop streams, or trigger alerts.

Compatible with Mainstream Live Broadcast Software

Ready-made configuration files can be used to quickly set up, download plug-ins such as OBS Studio, Light Control and more to be ready for a live broadcast at any time.



The AKP153 integrates seamlessly with popular live broadcast software, allowing for quick setup and control.

Ready-made configuration files or plugins may be available for popular software like OBS Studio, Light Control, and others, allowing for quick setup and immediate use.

Maintenance

To ensure the longevity and proper functioning of your Ajazz AKP153, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the controller and the LCD screen. For stubborn smudges, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Avoid Liquids:** Do not spill liquids directly onto the device. If liquid enters the device, disconnect it immediately and allow it to dry completely before reconnecting.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Handle the USB-C cable gently. Avoid sharp bends or kinks that could damage the cable.

Troubleshooting

If you encounter issues with your Ajazz AKP153, refer to the following common troubleshooting steps:

- **Device Not Recognized:**

- Ensure the USB-C cable is securely connected to both the controller and your computer.
- Try connecting to a different USB port on your computer.
- Test with a different USB-C cable if available.
- Restart your computer.

- **Keys Not Responding/Incorrect Function:**

- Verify that the companion software is running and updated to the latest version.
- Check the key assignments within the software to ensure they are correctly configured.
- Ensure the correct profile is active for the application you are using.
- Reinstall the software if issues persist.

- **LCD Screen Not Displaying:**

- Ensure the device is properly connected and powered.
- Check software settings related to the LCD screen display.
- Restart the software and/or your computer.

If these steps do not resolve the issue, please refer to the support section for further assistance.

Warranty and Support

Warranty information for the EPOMAKER Ajazz AKP153 Studio Controller is typically provided with your purchase documentation or can be found on the official EPOMAKER website. Please retain your proof of purchase for warranty claims.

For technical support, software updates, or additional resources, please visit the official EPOMAKER website or their brand store:

Visit the EPOMAKER Store on Amazon