

Odoland OD0634A

Odoland Portable Camping Fan with Spray (Model OD0634A) - User Manual

Your comprehensive guide to operating and maintaining your Odoland Portable Camping Fan.

INTRODUCTION

Thank you for choosing the Odoland Portable Camping Fan with Spray. This versatile device is designed to provide cooling, misting, lighting, and emergency power in various outdoor and indoor settings. With its rechargeable battery and compact design, it is an ideal companion for camping, patios, beaches, RVs, and general summer use. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's lifespan.



Image: The Odoland Portable Camping Fan, highlighting its multi-functional design with fan blades, misting outlet, and integrated light, alongside a smartphone connected for charging.

SAFETY INSTRUCTIONS

- Do not immerse the fan in water or other liquids.
- Keep out of reach of children.
- Use only the provided charging cable or a certified equivalent.
- Do not block the fan's air inlet or outlet during operation.
- Avoid disassembling or modifying the device, as this may void the warranty and pose safety risks.
- Ensure the water tank is securely closed when the misting function is not in use to prevent leaks.
- Use only pure water for the misting function to prevent clogging of the spray port.

PACKAGE CONTENTS

Please check the package for the following items:

- Odoland Portable Misting Fan x 1
- User Manual x 1
- Type-C Charging Cable x 1

Package Included



Image: The Odoland Portable Misting Fan, its user manual, and a Type-C charging cable, as included in the product package.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Odoland Portable Camping Fan:

- **Fan Blades:** Located behind the front grille, responsible for air circulation.
- **Misting Nozzle:** Integrated into the fan grille for spray function.
- **Water Tank:** 250mL capacity, located at the top for misting.
- **Control Panel:** Buttons for fan speed, misting, light, and timer.
- **Battery Indicator:** Displays current battery level and wind speed.
- **USB-A Output Port:** For emergency charging of external devices.
- **USB-C Input Port:** For charging the fan's internal battery.
- **Portable Handle:** For easy carrying.
- **360° Rotation Hanging Hook:** For hanging the fan in tents or other locations.

SETUP

1. Initial Charging

Before first use, fully charge the fan. Connect the provided Type-C charging cable to the fan's USB-C input port and a suitable USB power adapter (not included). The battery indicator lights will show charging progress. A full charge typically takes 5-6 hours.

2. Filling the Water Tank (for Misting Function)

1. Locate the rubber stopper on the top of the fan.
2. Open the rubber stopper.
3. Carefully pour **pure water** into the 250mL water tank. Using pure water helps prevent clogging of the mist port.
4. Tighten the leak-proof cover securely.
5. Open the mist cover before activating the misting function.



Image: A visual guide demonstrating the four steps to properly fill the water tank for the misting function, emphasizing the use of clean water.

OPERATING INSTRUCTIONS

1. Fan Operation

Press the fan speed button on the control panel to cycle through the 4 available speeds. Each press will increase the speed. Pressing a fifth time will turn the fan off.

- **Speed 1:** Up to 20 hours of continuous operation.
- **Speed 2:** Up to 14 hours of continuous operation.
- **Speed 3:** Up to 10 hours of continuous operation.
- **Speed 4:** Up to 8 hours of continuous operation.

Powerful Fan

4 Speed Settings



Speed 1
20 Hours



Speed 2
14 Hours



Speed 3
10 Hours



Speed 4
8 Hours



Clear Wind/Battery Indicator



Image: The Odoland fan illustrating its four fan speed settings and their respective runtimes, along with the battery and wind indicator display.

2. Misting Function

Ensure the water tank is filled with pure water and the mist cover is open.

1. Press and hold the spray button until the red light illuminates. This indicates the misting function is ready.
2. Press the spray button again to activate the misting.
3. The fan offers two spray settings: continuous mode (approx. 40 minutes with full tank) and intermittent mode (approx. 70 minutes with full tank). Press the spray button to switch between modes.
4. To turn off the misting function, press and hold the spray button again.

Important: If hanging the fan, ensure the water tank is positioned upwards to allow the misting function to work correctly. Cover the spray cap when the misting function is not in use.

Portable Misting Humidifier

Hold the spray button until the red light is on,
then press to spray

250mL
Water Tank

Continuous Mode
(150ml/H): 40mins

Discontinuous Mode
(100ml/H): 70mins



Please cover the spray cap when the fan is not in use

Image: The Odoland fan in misting operation, showing the water vapor being emitted, with details on the 250mL water tank and the duration of continuous and discontinuous misting modes.

3. Light Function

The fan features 7 fixed lighting colors. Press the light button on the control panel to cycle through the different colors. Pressing the button again after the last color will turn the light off.

Color Your Camping



Image: The Odoland fan with its internal LED lights glowing in multiple colors, illustrating the 7 fixed lighting options available.

4. Emergency Power Bank Function

The fan's built-in 10400mAh battery can serve as an emergency power bank. Connect your phone, GPS, or other USB-powered devices to the fan's USB-A output port using your device's charging cable. This provides convenient charging when away from power outlets.

10400mAh Emergency Power Bank

Can be a emergency power to charge your phone



3 Timing Modes: 2H/4H/8H

Image: The Odoland fan charging a smartphone via its USB port, set in a camping environment, demonstrating its emergency power bank capability.

5. Timer Function

The fan includes a timer function for automatic shut-off. Press the timer button to set the fan to turn off after 2, 4, or 8 hours. The corresponding indicator light will illuminate to confirm the selected timer setting.

CHARGING THE FAN

To charge the fan, connect the provided Type-C charging cable to the fan's USB-C input port and a compatible USB power source. The fan can operate while charging. A full charge takes approximately 5-6 hours.

MAINTENANCE

Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- For the misting nozzle, if clogging occurs, gently clean with a cotton swab or a soft brush. Only use pure water to prevent mineral buildup.
- Empty and dry the water tank when the misting function is not in use for extended periods to prevent mold or mildew growth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery; Power button not pressed correctly.	Charge the fan; Ensure the power button is pressed firmly.
Misting function not working.	Water tank empty; Spray port clogged; Fan hung upside down; Spray button not activated correctly.	Refill water tank with pure water; Clean spray port; Ensure water tank is upwards if hanging; Press and hold spray button until red light comes on, then press again.
Light function not working.	Low battery; Light button not pressed.	Charge the fan; Press the light button to cycle through colors.
Phone not charging via USB.	Low fan battery; Incorrect cable; Device not compatible.	Charge the fan; Use a functional USB cable; Ensure your device supports USB charging.

SPECIFICATIONS

- **Brand:** Odoland
- **Model Name:** OD0634A
- **Color:** Green
- **Electric Fan Design:** Table Fan
- **Power Source:** Battery Powered (10400mAh Rechargeable Battery)
- **Special Feature:** Portable, Misting, Light, Emergency Power Bank
- **Recommended Uses:** Air Circulation, Cooling
- **Wattage:** 14 watts
- **Number of Blades:** 3
- **Voltage:** 12 Volts (DC)
- **Switch Type:** Push Button
- **Indoor/Outdoor Usage:** Indoor, Outdoor
- **Control Method:** Touch
- **Efficiency:** High Efficiency
- **Cordless:** Yes
- **Number of Power Levels:** 4 (Fan Speeds)

- **Product Dimensions:** 9.05 x 11.2 x 4.72 inches
- **Item Weight:** 2.68 pounds
- **Water Tank Capacity:** 250mL
- **Misting Modes:** Continuous (40 mins), Intermittent (70 mins)
- **Lighting:** 7 Fixed Colors
- **Timer Settings:** 2H, 4H, 8H

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Odoland customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Odoland. All rights reserved.