

## BIUSIKAN HY-BW-01

# BIUSIKAN Music and Lights 6-in-1 Baby Walker (Model HY-BW-01) Instruction Manual

Your comprehensive guide to assembly, operation, and care.

## INTRODUCTION

The BIUSIKAN Music and Lights 6-in-1 Baby Walker, Model HY-BW-01, is designed to support your child's development through various stages. This versatile product functions as a walker, activity center, and bouncer, offering multiple modes to engage and assist babies aged 6-18 months. It features an ergonomic backrest, interactive music and lights, and adjustable settings to ensure comfort and safety.

## Key Features:

- **6-in-1 Multi-Purpose Design:** Offers Bounce, Toddler, Push, Bounce Music, Music Game, and Tray modes to adapt to your child's growth and activity needs.
- **Enhanced Safety:** Equipped with 4 anti-slip pads (assisted brakes), 4 double-tier wheels, and 2 speed-adjustable wheels. Certified by ASTM and CPSIA for peace of mind.
- **Interactive Music and Lights:** A music light disk promotes auditory development and includes various interactive game elements for hand-eye coordination and cognitive skill enhancement.
- **Ergonomic Comfort:** Features an ergonomic backrest for excellent support, reducing strain during extended use, and swivel wheels for easy maneuverability.
- **Adjustable Height:** Four height levels ensure the walker grows with your baby, providing the correct posture for walking development.

## IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before using this product. Failure to follow these instructions could result in serious injury.

- **Never leave your child unattended** in the walker. Always keep your child in view while using the walker.
- Use the walker only on **flat, level surfaces**. Avoid stairs, steps, uneven floors, or any elevated surfaces.
- Ensure all locking mechanisms are securely engaged before placing your child in the walker.
- Keep the walker away from heat sources, open flames, and electrical appliances.
- Regularly inspect the walker for any loose parts, damage, or wear. Discontinue use if any damage is found.

- The walker is designed for children who can sit unaided, typically from 6 months, and up to 18 months or a maximum weight of 26 lbs (12 kg).
- The walker is equipped with 4 anti-slip pads (assisted brakes) and 4 double-tier wheels for stability and safety.

## PACKAGE CONTENTS

Before assembly, please ensure all parts are present and undamaged. Refer to the image below for a visual guide.



*Image: All components of the BIUSIKAN 6-in-1 Baby Walker laid out on a wooden floor, including the main frame, platform parts, wheels, bouncing mat, bounce pedal, brake pads, and music platform.*

- Main Part (Walker Frame)
- Platform Parts (Side supports)
- Wheels (4 double-tier wheels)
- Bouncing Mat
- Bounce Pedal
- Brake Pads (4 anti-slip pads)
- Music Platform (Activity Tray)
- Backrest/Seat Cushion
- Jump Switch Knob

## SETUP INSTRUCTIONS

Follow these steps to assemble your BIUSIKAN 6-in-1 Baby Walker. For a visual guide, please refer to the 'Baby Walker Installation & Function Video' below.

*Video: A detailed guide demonstrating the assembly and various functions of the BIUSIKAN 6-in-1 Baby Walker. This video covers installing components, switching modes, and adjusting settings.*


1. **Install Wheels and Brake Pads:** Attach the 4 double-tier wheels and 4 anti-slip brake pads to the designated slots on the main walker frame. Ensure they click securely into place.
2. **Install Jump Switch Knob:** Insert the jump switch knob into its slot on the frame. This knob controls the bouncing function.

3. **Install Top Platform:** Securely attach the top platform (where the seat and activity tray will sit) to the main frame. Ensure all connection points are firm.
4. **Install Bouncing Mat:** Place the bouncing mat onto the lower frame, ensuring it is properly aligned and secured at all attachment points.
5. **Install Bounce Pedal:** If using the bounce pedal, attach it to the designated area on the lower frame, over the bouncing mat.
6. **Link Music Platforms:** Connect the wires from the play parts to the main music platform. Ensure the connections are secure.
7. **Install Play Platform:** Attach the assembled music and play platform to the top platform of the walker. Rotate 90 degrees to secure the tray.
8. **Install Backrest:** Secure the backrest/seat cushion to the seat area on the top platform. Ensure all clips are fastened. The backrest features a thickened design and breathable mesh.
9. **Battery Installation (for Music and Lights):**
  - Please use 1.5 V AA non-rechargeable battery accessories.
  - Do not mix different types of accessories, and do not use old and new batteries at the same time.
  - Make sure the positive and negative poles are aligned correctly.
  - Batteries are not included with this product.

## OPERATING INSTRUCTIONS

The BIUSIKAN 6-in-1 Baby Walker offers multiple modes and adjustable features to cater to your child's developmental needs.

### Modes of Operation:

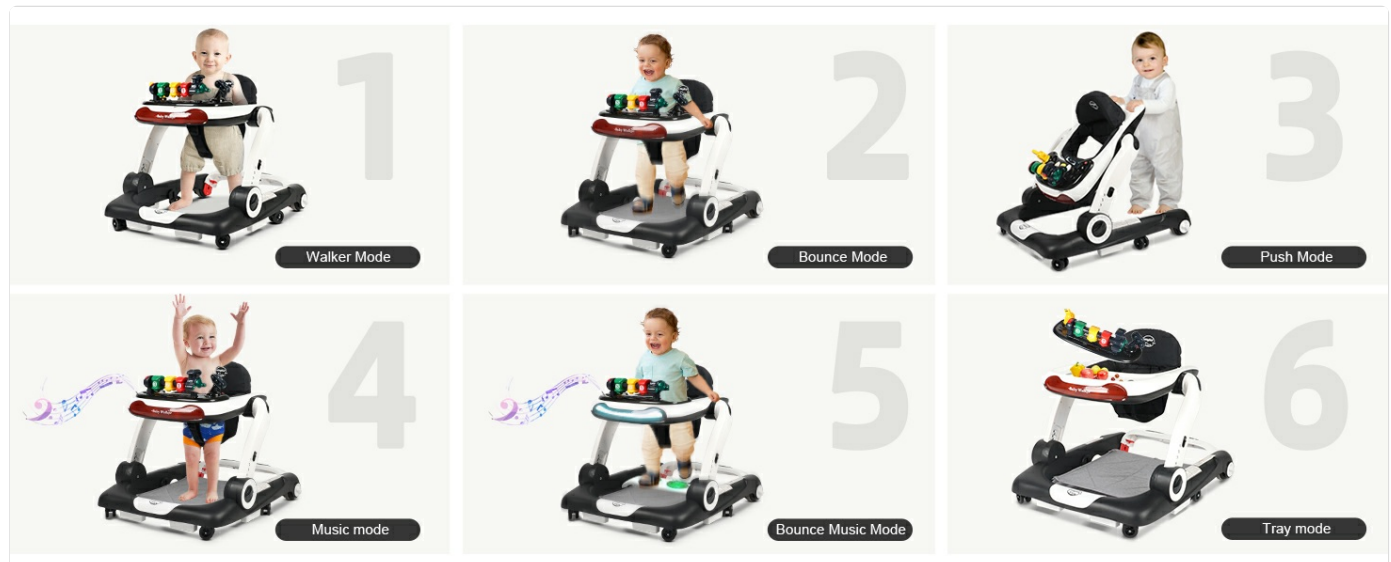

*Image: A visual representation of the six distinct modes available with the BIUSIKAN baby walker, illustrating how the product transforms for different activities.*

- **Walker Mode:** Allows your child to move freely and practice walking with support.
- **Bounce Mode:** Engage the bouncing mat by unlocking the jump switch knob for a fun bouncing experience.
- **Push Mode:** Adjust the walker to a push-behind configuration, allowing older toddlers to use it as a push toy.
- **Bounce Music Pedal Mode:** Combines bouncing with interactive music and lights activated by foot pedals.
- **Music Game Mode:** The activity tray provides various interactive elements with music and lights to stimulate sensory

- **Tray Mode:** The activity tray can be converted into a simple feeding or play tray by removing the interactive play parts.

# Crawling to Carefree Running

Crotch height



babies.

The walker features 4 adjustable height levels. To adjust, locate the height adjustment buttons on the side supports. Press the buttons and slide the top platform up or down to the desired height. Ensure both sides are adjusted evenly and click into place. Proper height ensures your child's feet touch the floor correctly for safe and effective walking practice.

## Adjusting Push Speed:



*Image: A close-up of the wheel with a knob that allows for adjustment of the push speed, providing resistance for different stages of walking development.*

The rear wheels have an adjustable push speed mechanism. Rotate the knob on the wheels to increase or decrease resistance. This feature helps control the walker's speed, providing more stability for beginners and less resistance as your child gains confidence.

## Interactive Activity Tray:



*Image: A detailed view of the interactive activity tray, highlighting the colorful sliding and rotating carriages, a rotatable control lever, and buttons for music and lights, including a glowing train engine.*

The activity tray features a rotatable control lever, sliding and rotating carriages, and music and lights buttons. Press the buttons and manipulate the toys to activate sounds and lights, promoting sensory engagement and fine motor skills.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe down plastic parts with a damp cloth and mild soap. Do not use abrasive cleaners. The fabric seat cushion can be removed and hand-washed with mild detergent. Allow all parts to air dry completely before reassembly or use.
- **Storage:** When not in use, the walker can be folded for compact storage. To fold, release the side locks and collapse the frame. Store in a dry, cool place away from direct sunlight.
- **Battery Replacement:** Replace batteries in the music platform as needed. Ensure correct polarity and use only 1.5 V AA non-rechargeable batteries.

## TROUBLESHOOTING

### Music and Lights Not Working:

#### Pyramid Design for Anti-tip Stability

Wide base with multiple  
points of support



Image: A visual reminder of battery installation guidelines and troubleshooting tips for the music and light features.

- **Check Batteries:** Ensure batteries are installed correctly with the positive and negative poles aligned.
- **Replace Batteries:** If the music and lights are still not working, replace with new 1.5 V AA non-rechargeable batteries. Insufficient power will prevent the features from operating.
- **Avoid Mixing Batteries:** Do not mix different types of batteries or old and new batteries.

### Walker Not Moving Smoothly:

- **Check Wheels:** Ensure wheels are free of debris and can rotate freely.
- **Adjust Push Speed:** Verify the push speed adjustment knobs are set to the desired resistance level.
- **Surface Check:** Ensure the walker is being used on a smooth, flat surface.

## SPECIFICATIONS

| Feature | Detail   |
|---------|----------|
| Brand   | BIUSIKAN |

|                       |                       |
|-----------------------|-----------------------|
| Model Number          | HY-BW-01              |
| Age Range Description | Infant (6-18 Months)  |
| Item Weight           | 6.78 Kilograms        |
| Maximum Height        | 0.5 Feet              |
| Color                 | A-Black               |
| Material Type         | Plastic, Fabric, Foam |
| Unit Count            | 1.0 Count             |

## WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact BIUSIKAN customer service through your original point of purchase or visit the official BIUSIKAN store online. Please retain your proof of purchase for any warranty claims.

We are committed to providing high-quality products and excellent customer service. If you have any questions or concerns, do not hesitate to reach out to our support team.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

