

coucheta Shoe Rack Storage Cabinet

coucheta 4 Flip Drawers Shoe Storage Cabinet User Manual

Model: Shoe Rack Storage Cabinet

1. PRODUCT OVERVIEW

The coucheta 4 Flip Drawers Shoe Storage Cabinet is a freestanding furniture piece designed for organizing footwear in entryways, living rooms, or bedrooms. It features a natural rattan design with four flip-door drawers and metal legs, offering both functionality and aesthetic appeal.

Key Features:

- **Natural Rattan Design:** Constructed from sturdy medium-density fiberboard and hand-woven natural rattan for an elegant and classic appearance.
- **Multi-functional Storage:** Four flip-door drawers with adjustable and removable internal shelves. The top surface can be used for decorative items or small essentials.
- **Adjustable Shelves:** Three-gear adjustment for internal shelves to accommodate various shoe types, from flat shoes and sports shoes to mid-calf boots.
- **Safety Features:** Includes an anti-tilt device to secure the cabinet to a wall, enhancing stability and safety.
- **Durable Construction:** Made with high-quality particleboard and iron legs for strong support, stability, and durability.



Image 1.1: Front view of the coucheta 4 Flip Drawers Shoe Storage Cabinet in Oak Color, showcasing its rattan design and four flip doors.

2. SAFETY INFORMATION

Please read and adhere to all safety guidelines to ensure safe installation and use of your shoe storage cabinet.

- Always follow the provided installation instructions carefully.
- Use caution when adjusting or disassembling the flip-door drawers to prevent injury.
- Do not overload the cabinet. Exceeding weight limits can compromise stability and lead to tipping.
- Install the anti-tilt device as instructed to secure the cabinet to a wall, especially in households with children or pets.
- Keep the cabinet away from direct heat sources, open flames, and excessive moisture to prevent damage to materials.
- Ensure the cabinet is placed on a flat, stable surface.

3. COMPONENTS LIST

Before beginning assembly, verify that all components and hardware are present. Refer to the included hardware bag and parts list in your packaging.

Typical components include:

- Cabinet panels (top, bottom, sides, back)
- Flip-door drawer assemblies
- Adjustable shelves
- Metal legs
- Hardware bag (screws, dowels, cam locks, anti-tilt kit, etc.)
- Assembly tools (e.g., Allen wrench)

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two individuals and approximately 1-2 hours. Follow the step-by-step instructions provided in your product packaging. All necessary tools are included.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out. Compare them against the parts list in the manual to ensure everything is present and undamaged.
2. **Assemble the Main Frame:** Connect the side panels to the top and bottom panels using the provided hardware. Ensure all connections are secure.
3. **Attach Metal Legs:** Securely fasten the metal legs to the bottom of the cabinet frame.
4. **Install Flip-Door Mechanisms:** Attach the flip-door hardware to the cabinet frame according to the diagrams.
5. **Insert Flip Drawers:** Carefully insert the flip-door drawers into their respective compartments.
6. **Install Adjustable Shelves:** Place the internal shelves into the flip drawers. These can be adjusted later.
7. **Attach Back Panel:** Secure the back panel to the cabinet frame.
8. **Install Anti-Tilt Device:** For safety, attach the anti-tilt device to the top rear of the cabinet and secure it to a wall stud using appropriate wall anchors.



Image 4.1: Dimensional diagram of the shoe cabinet, including height, width, and depth, along with an illustration of the anti-tilt device installation.

5. OPERATING INSTRUCTIONS

The coucheta shoe cabinet is designed for easy access and versatile storage.

5.1 Using the Flip Drawers

Each of the four compartments features a flip-down door. Gently pull the handle to open the door, revealing the internal shoe storage area. Push the door back up until it clicks into place to close it securely.



Image 5.1: The shoe cabinet with the top two flip doors open, demonstrating how shoes are stored within the compartments.

5.2 Adjusting and Removing Shelves

The internal shelves within each flip drawer can be adjusted to three different height settings or completely removed to accommodate various shoe sizes and types.

- **To Adjust:** Locate the adjustment points on the side brackets of the shelf. Lift the shelf slightly, align it with the desired height setting (1, 2, or 3), and gently lower it until it locks into place.
- **To Remove:** Lift the shelf from its current position and carefully slide it out of the drawer. This is ideal for storing taller footwear like boots.



Three-position Adjusted and Removable Shelf

Suitable for various types of shoes



High Heels



Slipper



Sneakers



Martin Boots


Image 5.2: A close-up view illustrating the three-position adjustable and removable shelf mechanism, suitable for various shoe types.



Image 5.3: A visual comparison showing how removing an internal shelf allows for the storage of taller items like boots.

5.3 Top Surface Usage

The flat top surface of the cabinet can be utilized for placing decorative items, small potted plants, alarm clocks, books, or photo frames, enhancing its multi-functional utility.

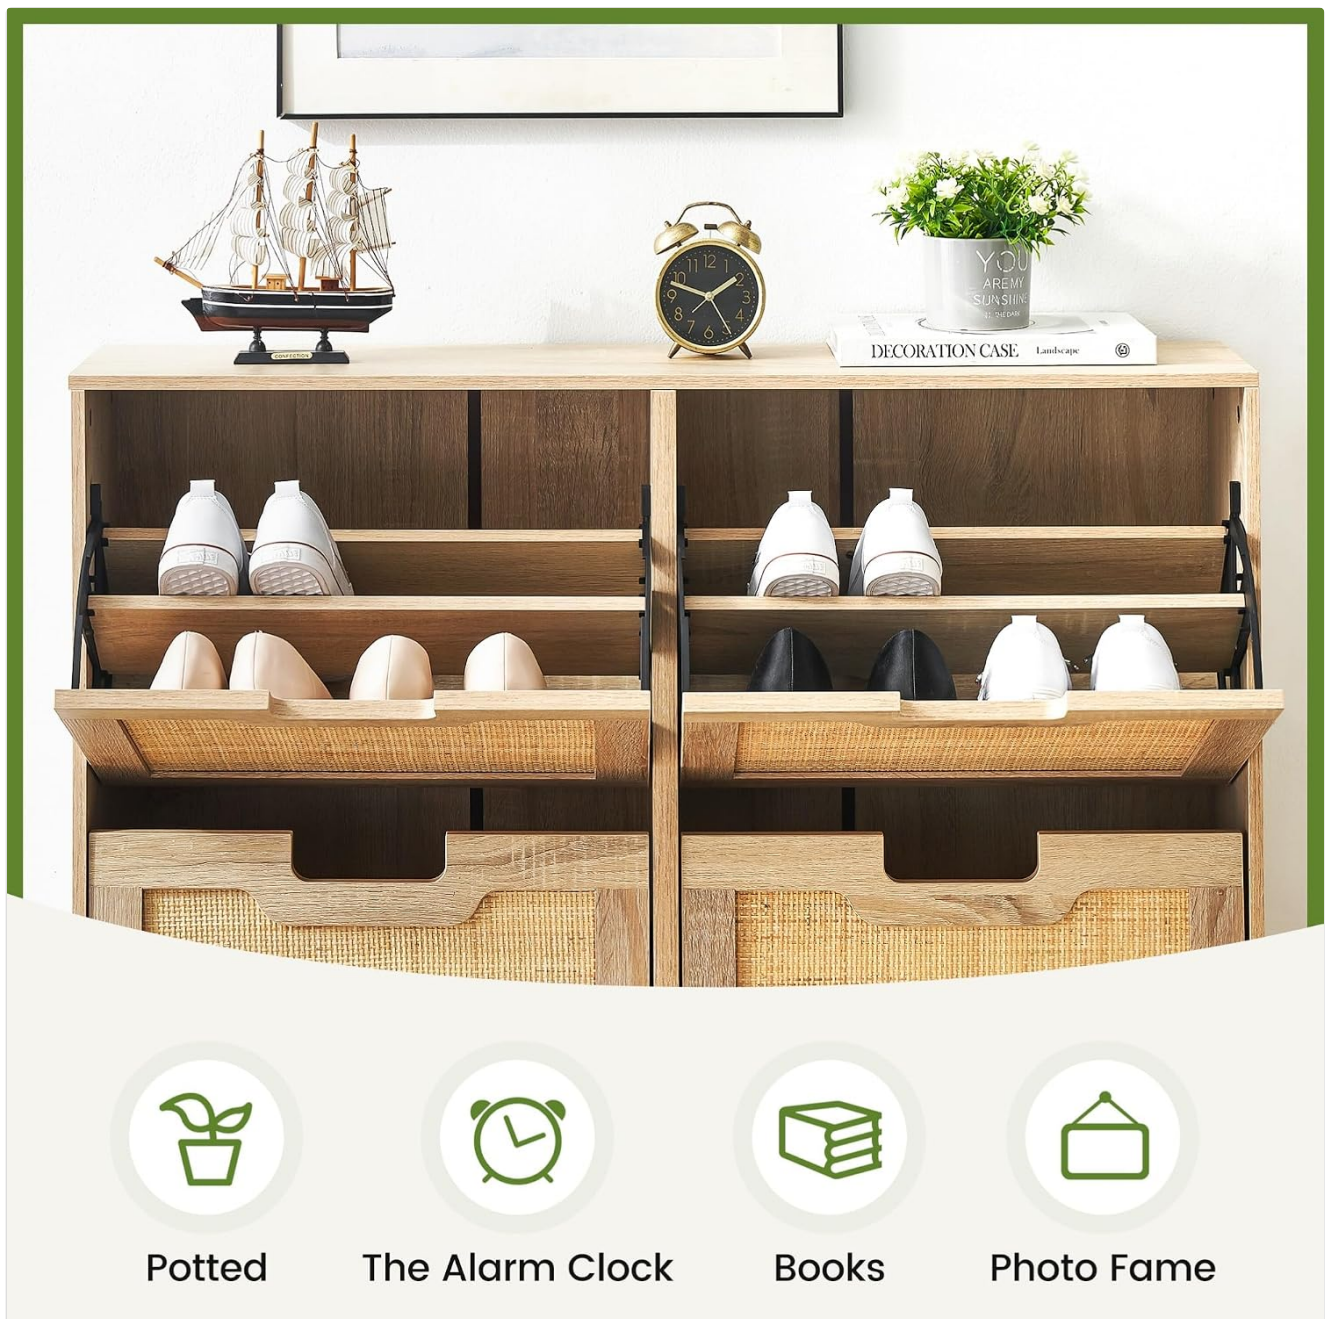

Potted



The Alarm Clock



Books



Photo Fame

Image 5.4: The top surface of the cabinet displaying various items such as a potted plant, an alarm clock, and books, highlighting its versatility.



Image 5.5: The shoe cabinet effectively organizing footwear, demonstrating its ability to hide shoe piles and maintain a tidy space.

6. MAINTENANCE

To ensure the longevity and appearance of your coucheta shoe storage cabinet, follow these simple maintenance guidelines:

- **Cleaning:** If any part of the cabinet becomes dirty, wipe it clean with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish or rattan.
- **Dusting:** Regularly dust the cabinet with a soft, dry cloth to prevent buildup.
- **Rattan Care:** For the natural rattan elements, avoid prolonged exposure to direct sunlight to prevent fading or drying out.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your shoe storage cabinet, refer to the following common solutions:

- **Cabinet Instability:** Ensure the cabinet is placed on a level surface. Verify that all assembly screws are tightened. If the anti-tilt device is not installed, secure the cabinet to a wall as instructed in Section 4.
- **Flip Drawer Not Closing/Opening Smoothly:** Check for any obstructions inside the drawer or along the mechanism. Ensure shoes are not overfilling the compartment. Verify that the drawer hardware was installed correctly during assembly.
- **Damaged or Missing Parts:** If you received damaged parts or are missing components, please contact customer support immediately for assistance.

For further assistance, please refer to the Warranty & Support section.

8. SPECIFICATIONS

Attribute	Detail
Brand	coucheta
Model Name	Shoe Cabinet
Item Model Number	Shoe Rack Storage Cabinet
Color	Oak Color
Product Dimensions	9.4"D x 39.4"W x 34.6"H
Item Weight	55 Pounds
Material	Engineered Wood, Rattan
Mounting Type	Floor Mount
Installation Type	Freestanding
Number of Flip Doors	4
Assembly Required	Yes

9. WARRANTY & SUPPORT

For any questions regarding assembly, operation, maintenance, or if you encounter any issues with your coucheta 4 Flip Drawers Shoe Storage Cabinet, please contact coucheta customer service. Refer to your purchase documentation for specific warranty details and contact information.

We are committed to providing high-quality products and support to ensure your satisfaction.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question