

Cocoarm Portable Washing Machine

Cocoarm Portable Washing Machine User Manual

Model: Portable Washing Machine

INTRODUCTION

Thank you for choosing the Cocoarm Portable Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This manual washing machine is designed for quick and efficient laundering of small items such as underwear, socks, and towels. Its compact and user-friendly design makes it ideal for home use or dorm living.

PRODUCT OVERVIEW



Figure 1: Cocoarm Portable Washing Machine, showing its compact design and manual handle.

Key Features:

- **Versatile Use:** Ideal for small clothes, underwear, socks, and towels.
- **Superior Performance:** Achieves up to 1200rpm for effective washing and drying.
- **Durable Construction:** Made from high-quality ABS material for longevity.

- **Easy Cleanup:** Features a detachable dehydration basket to prevent secondary pollution.
- **Compact & Stable:** Designed for small spaces with a comfort grip handle and four suction cups for stability.

SETUP

Included Components:

- 1 x Washing Machine Unit
- 1 x Handle
- 1 x Instruction Manual (this document)

Washing Machine

With a detachable dehydration basket, avoid secondary pollution of clothing.



Figure 2: The detachable dehydration basket, which can be easily removed for cleaning.

Assembly:

1. Unpack all components from the packaging.
2. Ensure the main washing machine unit is placed on a stable, flat surface. The four suction cups on the

base provide stability.

Can wash small clothes, underwear, socks, towels, etc.



Figure 3: View of the base with four suction cups for secure placement.

3. Insert the manual handle into the designated slot on the top cover of the washing machine. Ensure it is securely fitted.

4 sucker pads, can be placed on the ground steadily without moving.



Figure 4: Close-up of the manual handle, designed for effort-saving operation.

4. Confirm the inner barrel (dehydration basket) is correctly seated within the main bucket.

OPERATING INSTRUCTIONS

Washing Process:

1. Open the cover and turn the inner barrel a few times in a counterclockwise direction to confirm the alignment of the base.
2. Place the appropriate amount of clothes and detergent into the inner barrel.
3. Add an appropriate amount of water.
4. Close the cover and insert the handle into the hole in the center of the cover.
5. Turn the handle in the direction of the arrows indicated on the cover. During the washing process, the pulsator at the bottom of the cleaning bucket and the body of the cleaning bucket will rotate in opposite directions, generating water flow impact for effective cleaning.



Figure 5: User demonstrating the manual operation of the washing machine handle.

6. For best cleaning results, allow clothes to soak for a period of time, then rotate the handle 3-5 times in the positive direction and 3-5 times in the reverse direction, repeating as necessary.

Draining Process:

1. Locate and open the drain plug on the outside of the bottom of the barrel.
2. Allow all water to drain completely.
3. Once drained, securely plug the drain back in.

Rinsing/Dehydration Process:

1. First, arrange the clothes evenly around the inner bucket.
2. Close the cover and ensure the buckles on both sides are locked.
3. Step on the foot pedal with both feet to stabilize the unit.
4. Insert the handle into the outer hole on the cover.
5. Quickly rotate the handle counterclockwise for approximately 30 seconds. The faster the rotation, the more effective the dehydration. The machine can achieve a rotation speed of up to 1200rpm.

Your browser does not support the video tag.

Video 1: Demonstration of the Cocoarm Portable Washing Machine's operation, including assembly and use of the manual handle for washing and spinning. (Duration: 1 minute 6 seconds)

Important Notes:

- Do not place the product in direct sunlight.
- Refer to your detergent's instructions for the appropriate amount to use. Excessive detergent can generate too much foam, potentially overflowing and affecting dissolution.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Cocoarm Portable Washing Machine.

- **After Each Use:** After washing, please wipe all cleaned parts or dry them thoroughly to prevent odor buildup inside the product over time.
- **Cleaning the Basket:** The detachable dehydration basket can be easily removed for thorough cleaning. Rinse it with clean water and allow it to air dry completely before reassembling.
- **Exterior Cleaning:** Wipe the exterior of the washing machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the ABS material.
- **Storage:** Store the washing machine in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

If you encounter any issues with your Cocoarm Portable Washing Machine, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine is unstable during operation.	Not placed on a flat surface; suction cups not engaged.	Ensure the machine is on a flat, stable surface. Press down firmly to engage the suction cups.
Poor washing performance.	Too many clothes; insufficient water/detergent; improper rotation.	Do not overload the machine. Use appropriate amounts of water and detergent. Ensure consistent and vigorous rotation of the handle.
Water not draining.	Drain plug is closed or obstructed.	Check if the drain plug is fully open. Clear any obstructions if present.

Problem	Possible Cause	Solution
Clothes not dehydrating effectively.	Insufficient rotation speed; clothes unevenly distributed.	Ensure clothes are evenly distributed in the inner basket. Rotate the handle faster and for the recommended duration (30 seconds).
Unpleasant odor from the machine.	Residual moisture or detergent buildup.	Thoroughly clean and dry all parts of the machine after each use, especially the inner bucket and basket.

SPECIFICATIONS

Product Dimensions	15.7 x 15.67 x 13 inches
Item Weight	7.37 pounds
Material	High-quality ABS
Max Spin Speed	1200 rpm
Manufacturer	Cocoarm
Country of Origin	China



Figure 6: Diagram illustrating the dimensions of the Cocoarm Portable Washing Machine.

WARRANTY AND SUPPORT

For warranty information and customer support, please contact the seller or refer to the product listing on Amazon. The manufacturer is Cocoarm.

Additional protection plans may be available for purchase. Please check the product page for details.

ASIN: B0CPSWVQWL

