

[Manuals.plus](#) /

> [Nutricook](#) /

> Nutricook 3.5qt Air Fryer Mini Instruction Manual

Nutricook AFM033KUS

Nutricook 3.5qt Air Fryer Mini Instruction Manual

Model: AFM033KUS

INTRODUCTION

Welcome to your new Nutricook 3.5qt Air Fryer Mini. This appliance is designed for efficient and convenient cooking, offering a compact solution for preparing a variety of meals with less oil. Its intuitive controls and versatile functions make healthy cooking accessible for everyday use.

Key Features

- **Convenient 3.5-Quart Capacity:** The nonstick basket is sized to maximize counter space while accommodating up to 1.8 lbs of French fries or meals for up to 4 people.
- **8 Preset Cooking Functions:** Enjoy simple time and temperature controls, plus dedicated presets for Air Fry, Bake, Roast, Reheat, Fries, Chicken, Burger, and Steak.
- **Modern Design:** Features a sleek tempered glass interface and a brushed finish exterior, designed to complement any kitchen aesthetic.
- **Easy to Clean:** The BPA-free air fryer basket and cooking tray are dishwasher-safe, simplifying cleanup.
- **Preheat Options:** Offers the flexibility to skip the preheating cycle, allowing you to start cooking immediately.



nutricook

AIR FRYER MINI

**Compact Size,
Big on Taste**

Don't let its size deceive you. This compact yet powerful air fryer can cook for up to 4 people at a time.

The Nutricook 3.5qt Air Fryer Mini shown with a variety of meals it can prepare, highlighting its compact size and versatility.

SETUP

Unpacking and Initial Preparation

1. Carefully remove the air fryer and all its components from the packaging. Ensure all packing materials, including any protective films or stickers, are removed.
2. Place the main unit on a stable, level, and heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
3. Wash the air fryer basket and cooking tray thoroughly with warm, soapy water. Rinse them well and dry completely before first use. The main unit should be wiped with a damp cloth; never immerse it in water.
4. Insert the cooking tray into the air fryer basket, ensuring it sits securely at the bottom.
5. Slide the assembled basket back into the air fryer unit until it clicks into place.
6. Plug the power cord into a grounded electrical outlet. The display will illuminate briefly.

What's Inside



Internal components of the Nutricook Air Fryer Mini: the main unit, 3.5qt basket, and cooking tray.

OPERATING INSTRUCTIONS

Control Panel Overview

The Nutricook 3.5qt Air Fryer Mini features a user-friendly tempered glass touch control panel. This panel allows you to select preset functions, adjust temperature and time, and monitor cooking progress.



The tempered glass digital control panel for easy operation.

Basic Operation Steps

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly into the air fryer unit until it is fully closed.
3. **Power On:** Press the power button () to activate the control panel.
4. **Select Function:** Choose one of the 8 preset cooking functions (Air Fry, Bake, Roast, Reheat, Fries, Chicken, Burger, Steak) by tapping its icon. Alternatively, manually set the desired temperature and time using the temperature (**TEMP**) and time (**TIME**) adjustment arrows.
5. **Preheat (Optional):** If the selected function includes preheating, the display will show "PREHEAT". You can press the "SKIP PREHEAT" button to bypass this step if desired.
6. **Start Cooking:** Press the "START" button to begin the cooking cycle.
7. **Shake Reminder:** For certain foods, the air fryer may beep and display "SHAKE" halfway through the cooking cycle. Carefully remove the basket, shake or flip the food, and reinsert the basket to resume cooking.
8. **Completion:** Once the cooking time is complete, the air fryer will beep and display "ENJOY". Carefully remove the basket and transfer your cooked food.

Preset Cooking Functions

The air fryer comes with 8 convenient preset functions, each optimized for specific food types:

- Air Fry
- Bake
- Roast
- Reheat
- Fries
- Chicken
- Burger
- Steak

8 Cooking Functions

One-touch selection for perfectly cooked food every single time.



Air Fry



Bake



Roast



Reheat



Fries



Chicken



Burger



Steak

The 8 preset cooking functions available on the Nutricook Air Fryer Mini.

Shake Reminder

Tells you when to shake or flip your food for even frying.



The 'Shake Reminder' feature prompts users to shake or flip food for even cooking.

MAINTENANCE

Cleaning and Care

1. Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. The air fryer basket and cooking tray are dishwasher-safe for convenient cleaning.
3. For manual cleaning, wash the basket and cooking tray with warm, soapy water and a non-abrasive sponge. Avoid using metal scouring pads or harsh detergents.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water or any other liquid.
5. Ensure all parts are thoroughly dry before reassembling or storing the appliance.

Easy to Clean

The non-stick air fryer basket and cooking tray are dishwasher-safe making clean up quick and easy.



The non-stick air fryer basket and cooking tray are dishwasher-safe for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your Nutricook 3.5qt Air Fryer Mini, please refer to the following common troubleshooting steps:

- **Appliance does not turn on:** Check that the power cord is securely plugged into a functional, grounded electrical outlet. Ensure the air fryer basket is fully inserted into the main unit.
- **Food is not cooked evenly:** Avoid overloading the basket. For best results, shake or flip food halfway through the cooking cycle, especially for items like fries or chicken wings.
- **White smoke coming from the appliance:** This can occur when cooking very fatty foods. Ensure the basket and cooking tray are clean and free of excess grease from previous uses.
- **Unusual smell during first use:** A slight odor may be present during the initial few uses as manufacturing residues burn off. This is normal and will dissipate with continued use. Ensure adequate ventilation.
- **Display shows an error code:** Consult the detailed user manual provided with your product for specific error code meanings and recommended solutions. If the issue persists, contact customer support.

PRODUCT SPECIFICATIONS

Model Name	Air Fryer Mini
Model Number	AFM033KUS

Capacity	3.5 Quarts
Product Dimensions (D x W x H)	11.61"D x 9.45"W x 14.17"H
Wattage	1500 Watts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Material	Plastic, Stainless Steel
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket, Cooking Tray)
Special Features	Programmable

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please refer to the official documentation included with your Nutricook 3.5qt Air Fryer Mini. You may also visit the official Nutricook website for FAQs and additional assistance.

