

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nutricook](#) /

› [Air Fryer 3 Vision, 6qt Large Airfryer, 12 Preset Functions, Air Fry, Roast, Bake, Dehydrate, Reheat and More, Quiet, Non-Stick, Easy to Clean, Black](#)

Nutricook AF357VUS

Nutricook Air Fryer 3 Vision User Manual

Model: AF357VUS

Brand: Nutricook

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Nutricook Air Fryer 3 Vision. Please read this manual thoroughly before first use and retain it for future reference.



Make your every day better.

Image: The Nutricook Air Fryer 3 Vision, a sleek black appliance, positioned on a kitchen counter, showcasing its modern design and clear viewing window.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer basket and cooking tray are properly inserted before operation.
- Always ensure adequate ventilation around the appliance during use.

WHAT'S INCLUDED

Your Nutricook Air Fryer 3 Vision package includes the following components:

- 1700W Air Fryer Main Unit
- 6qt Air Fryer Basket
- Cooking Tray (9.64 in X 9.17 in)

Family Meals, Simplified!



Image: A visual representation of the Nutricook Air Fryer 3 Vision and its detachable components, including the main unit, 6qt air fryer basket, and cooking tray.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and promotional labels from your air fryer.
- Initial Cleaning:** Before first use, wash the air fryer basket and cooking tray with hot, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Burn-Off Cycle (Recommended):** To eliminate any manufacturing odors, perform a burn-off cycle.
 - Insert the clean basket and cooking tray into the air fryer.
 - Plug in the appliance.

- Set the temperature to 400°F (200°C) and the time to 10-15 minutes.
- Run the cycle. A slight odor may be present during this initial use; this is normal. Ensure the area is well-ventilated.
- Once complete, unplug the unit and allow it to cool down completely before wiping it down again.

OPERATING INSTRUCTIONS

Control Panel Overview

The Nutricook Air Fryer 3 Vision features an intuitive digital control panel with capacitive touch controls for ease of use.



Image: A detailed view of the air fryer's digital control panel, highlighting its touch-sensitive buttons and display for temperature and time settings.

Basic Operation

- 1. Prepare Food:** Place your ingredients into the air fryer basket, ensuring not to overfill.
- 2. Insert Basket:** Slide the air fryer basket firmly into the main unit.
- 3. Power On:** Press the power button () to turn on the appliance.
- 4. Select Function:** Choose from 11 versatile cooking functions: Air Fry, Roast, Bake, Dehydrate, Reheat, Fries, Chicken, Burger, Steak, Fish, or Samosa. Press the corresponding icon on the control panel.
- 5. Adjust Settings:** Use the temperature (**TEMP**) and time (**TIME**) arrows to adjust the cooking parameters as needed.
- 6. Start Cooking:** Press the **START** button to begin the cooking process.
- 7. Monitoring Progress:** The clear see-through window allows you to monitor your food's cooking progress without opening the basket. The cooking status indicator on the display will show "PREHEAT", "COOKING", "SHAKE", and "DONE".
- 8. Shake Reminder:** For certain foods, the air fryer will prompt you with a "SHAKE" reminder to ensure even cooking. Carefully remove the basket, shake the contents, and reinsert.
- 9. Completion:** Once cooking is complete, the unit will beep, and the display will show "DONE". Carefully remove the basket and transfer your cooked food.

11 One-Touch Cooking Programs

The air fryer offers a variety of preset programs for common dishes:



11 Cooking Modes

Image: The air fryer's display showing icons for its 11 cooking modes, including Air Fry, Bake, Roast, Reheat, Dehydrate, Fries, Chicken, Burger, Steak, Fish, and Samosa.

- **Main Programs:** Air Fry, Roast, Bake, Dehydrate, Reheat.
- **Presets:** Fries, Chicken, Burger, Steak, Fish, Samosa.

Favorite Buttons

Customize and save up to three of your favorite recipes for one-touch access. Adjust the temperature and time, then press the **SAVE** button and select one of the three favorite slots **FAVORITE 1, 2, or 3** to store your settings.

Save your Favourite Recipe.



Image: A close-up of the air fryer's control panel, highlighting the "Favorite 1, 2, 3" buttons, which allow users to save custom cooking settings for quick recall.

SmartTemp Technology

This exclusive technology automatically adjusts the temperature during the cooking cycle to ensure perfectly cooked food every time.

Quiet Cooking

The Nutricook Air Fryer 3 Vision operates at a low noise level of 55dB, providing a peaceful cooking experience.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and benefits of the Nutricook Air Fryer 3 Vision, including its clear window, multiple cooking functions, and ease of use.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- 2. Basket and Tray:** The BPA-free, non-stick air fryer basket and cooking tray are dishwasher safe for easy cleanup. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
- 3. Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- 4. Interior:** For the interior, wipe with a damp cloth. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth.
- 5. Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



EASY TO CLEAN

Dishwasher-safe cooking tray and air fryer basket
make clean up quick and easy

Image: The air fryer basket and cooking tray, designed for easy cleaning, being placed into a dishwasher, demonstrating their dishwasher-safe feature.

TROUBLESHOOTING

If you encounter any issues with your Nutricook Air Fryer 3 Vision, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully inserted.
Food is not cooked evenly.	Basket is overfilled; food not shaken or flipped.	Do not overfill the basket. Shake or flip food halfway through cooking, especially for items like fries.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and cooking tray thoroughly after each use. For fatty foods, drain excess oil during cooking.
Food is not crispy.	Too much moisture; not enough oil; incorrect temperature/time.	Pat food dry before air frying. Lightly coat with oil. Adjust temperature and time as per recipe recommendations.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Nutricook
Model Name	AF3 Vision
Item Model Number	AF357VUS
UPC	860009202207
Color	Black
Capacity	6 Quarts (1.3 Kilograms)
Product Dimensions	11.61"D x 9.45"W x 14.17"H
Item Weight	16.96 pounds (7.71 Kilograms)
Material	Plastic (Inner and Outer)
Output Wattage	1700 Watts
Control Method	Touch
Special Feature	Programmable

Feature	Detail
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket and Cooking Tray)
Recommended Uses	Roast, Bake, Reheat, Air Fry, Dehydrate
Country of Origin	China

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Nutricook website. If you require technical support or have questions regarding your Air Fryer 3 Vision, please contact Nutricook customer service.

You may also consider purchasing extended protection plans for additional coverage, such as the 3-Year or 4-Year Protection Plans available at the time of purchase.

Manufacturer: Nutricook

Seller: Nutricook World