

[Manuals.plus](#) /

› [Morphy Richards](#) /

› Morphy Richards Iris Juicer 450 Watt User Manual

Morphy Richards Iris

Morphy Richards Iris Juicer 450 Watt User Manual

Model: Iris | Power: 450W

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can cause potential damage to the appliance or injury to the user.

- This appliance is for **INDOOR USE ONLY**. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Always unplug the appliance from the power supply before assembling, disassembling, cleaning, or when not in use.
- Keep hands and utensils away from moving parts during operation to prevent injury and damage to the appliance.
- Never push food with your fingers. Always use the provided fruit pusher.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Place the appliance on a stable, flat, and dry surface.

PRODUCT OVERVIEW

The Morphy Richards Iris Juicer is designed for efficient juicing of various fruits and vegetables. It features a powerful 450-watt motor and a durable ABS moulded stainless steel juicer mesh for optimal juice extraction.



Image of the Morphy Richards Iris Juicer, a white appliance with a clear juicing chamber and a collection jug.

Included Components:

- Juicer Unit
- Fruit Pusher
- Warranty Card
- User Manual

SETUP

Follow these steps to assemble your juicer before first use:

1. Place the motor unit on a stable, flat surface.
2. Insert the juicer mesh assembly onto the motor unit, ensuring it is securely seated.
3. Place the pulp collector and juice collector in their designated positions.
4. Position the lid onto the juicer assembly, aligning it correctly and locking it into place. Ensure all safety locks are engaged.
5. Insert the fruit pusher into the feeding chute.
6. Ensure all parts are correctly assembled and locked before plugging the appliance into a power

outlet.

OPERATING INSTRUCTIONS

Preparation:

- Wash fruits and vegetables thoroughly.
- Cut larger items into smaller pieces that fit easily into the feeding chute. Remove hard seeds, pits, and thick peels (e.g., pineapple, citrus fruits).
- Place a suitable container under the juice spout to collect the extracted juice.

Juicing Process:

1. Plug the juicer into a power outlet.
2. Turn the appliance ON using the control knob.
3. Gradually feed the prepared fruits or vegetables into the feeding chute.
4. Use the fruit pusher to gently guide the produce down. Do not apply excessive force.
5. The juice will flow into your container, and pulp will collect in the pulp collector.
6. Once juicing is complete, turn the appliance OFF and unplug it from the power outlet.

Speed Control:

The juicer features **2 speed control** settings and an **incher function** for different types of produce:

- **Speed 1 (Low):** Ideal for softer fruits and vegetables like tomatoes, grapes, or berries.
- **Speed 2 (High):** Suitable for harder fruits and vegetables such as carrots, apples, or beetroot.
- **Incher Function:** Provides short bursts of power, useful for dislodging stubborn pieces or for quick mixing.

Overload Protector:

For your safety and to protect the motor, the juicer is equipped with an **overload protector**. If the motor overheats or is overloaded (e.g., by feeding too much produce too quickly), the appliance will automatically shut off.

If this occurs:

1. Turn off and unplug the juicer.
2. Remove any excess produce from the feeding chute and clear any blockages in the mesh.
3. Allow the motor to cool down for approximately 15-20 minutes.
4. Plug in and restart the appliance.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your juicer.

Cleaning:

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: fruit pusher, lid, juicer mesh, pulp collector, and juice collector.
3. Wash these removable parts immediately after use under running water with a mild detergent and a brush to remove pulp residue.

- 4. **Important:** The motor unit should never be immersed in water or any other liquid. Wipe the motor unit with a damp cloth.
- 5. Dry all parts thoroughly before reassembling or storing.

Care Instructions:

- The product care instructions state to **dry clean only except juicer jug**. This implies that the main motor unit and potentially other non-washable parts should be wiped clean and kept dry.
- **Dishwasher Safety:** This item is **not dishwasher safe**. All parts must be washed by hand.
- Do not use abrasive cleaning agents or scourers, as they may damage the surfaces.

TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

- **Appliance does not start:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check that all parts are correctly assembled and the safety locks are engaged. The juicer will not operate if not properly assembled.
- **Inefficient juicing or no juice extracted:**
 - Ensure fruits and vegetables are cut into appropriate sizes and are not too large for the feeding chute.
 - Do not overload the juicer. Feed produce gradually.
 - Check the juicer mesh for blockages. Clean the mesh thoroughly if clogged.
 - Ensure the pulp collector is not full, which can impede juice flow.
- **Motor stops during operation (Overload Protector activated):**
 - This indicates the motor has been overloaded or overheated. Refer to the 'Overload Protector' section under Operating Instructions for steps to reset the appliance.
- **Excessive vibration or noise:**
 - Ensure the juicer is placed on a stable, flat surface.
 - Check that all components are correctly assembled and securely locked.

SPECIFICATIONS

Brand	Morphy Richards
Model Name	Iris
Colour	White
Maximum Power	450 Watts
Product Dimensions (D x W x H)	34D x 24.7W x 32H Centimeters
Material	Plastic (ABS Moulded SS mesh)
Number of Speeds	2
Special Feature	Indicator Light, Overload Protector
Recommended Uses	INDOOR USE ONLY

Dishwasher Safe	No
-----------------	----

WARRANTY AND SUPPORT

Warranty:

The Morphy Richards Iris Juicer comes with a **2 Year Warranty** from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

Customer Support:

For any product-related queries, service requests, or warranty claims, please contact the manufacturer's customer support. The manufacturer contact information is **BAJAJ ELECTRICAL**.

Refer to your warranty card or the official Morphy Richards website for the most up-to-date contact details and service center locations.