



## Voice Remote Control

# Voice Remote Control User Manual

For TCL TV Models: 49S6500FS, 49S6510FS, 49S6800, 49S6800FS, 50C715, 50C716, 50C717, 50P715, 50P717, 50P8, 50P8S

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your new Voice Remote Control, compatible with various TCL TV models. This remote is designed to enhance your television viewing experience with convenient voice search capabilities and intuitive button layouts.

Please read this manual carefully before using the remote control to ensure proper functionality and to avoid any issues.

## 2. PRODUCT OVERVIEW

---

The Voice Remote Control features a sleek, ergonomic design with a brushed black finish. It includes dedicated buttons for common functions and popular streaming services, alongside a central navigation pad and a built-in microphone for voice commands.



Figure 2.1: Front view of the Voice Remote Control, showing all buttons including the voice microphone, navigation pad, volume, channel, and dedicated app buttons for Netflix, Prime Video, YouTube, TCL Channel, TCL Home, and Apple TV.



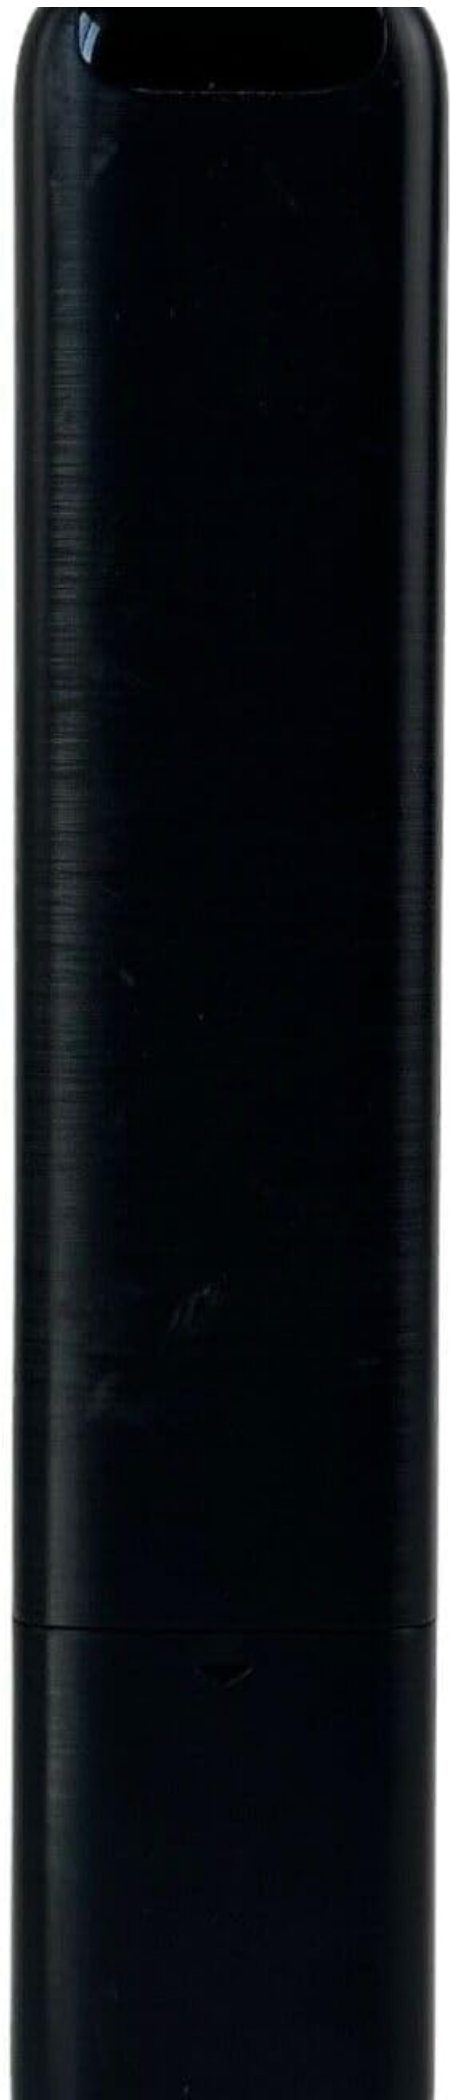




Figure 2.2: Back view of the Voice Remote Control, showcasing its smooth, curved design and battery compartment cover.



Figure 2.3: Detailed view of the upper section of the remote, highlighting the power, settings, user profile, and microphone buttons, along with the central OK button and directional pad.

### 3. SETUP

---

#### 3.1 Battery Installation

The remote control requires two AAA (LR3) batteries. **Batteries are not included** and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: View of the open battery compartment, showing the slots for two AAA batteries and the FCC ID information.

### 3.2 Pairing the Remote Control with Your TV

This is a voice search remote and must be paired with your TCL TV before use. Follow these steps to pair the remote:

1. Ensure your TCL TV is turned on.
2. Hold the remote control within 1 meter (approximately 3 feet) from your TV.
3. Simultaneously press and hold the **OK button** (center of the navigation pad) and the **Home button** (house icon) for more than 2 seconds.
4. The remote control will automatically enter the code alignment (pairing) state. Follow any on-screen prompts that may appear on your TV.
5. Once successfully paired, a confirmation message should appear on your TV screen.

If pairing fails, ensure the batteries are correctly installed and try the process again. You may also need to restart your TV.

## 4. OPERATING INSTRUCTIONS

---

Once paired, your Voice Remote Control provides intuitive control over your TCL TV.

### 4.1 Button Functions

- **Power Button** (*red circle with line*): Turns the TV on or off.
- **Microphone Button** (*microphone icon*): Activates voice search or voice commands. Press and hold while speaking your command.
- **Navigation Pad & OK Button** (*circular pad with OK in center*): Use directional arrows to navigate menus and select items with the OK button.
- **Home Button** (*house icon*): Returns to the TV's home screen.
- **Back Button** (*left arrow*): Returns to the previous screen or menu.
- **Volume Buttons** (*VOL +/-*): Adjusts the TV volume.
- **Channel Buttons** (*CH +/-*): Changes TV channels.
- **Dedicated App Buttons** (*Netflix, Prime Video, YouTube, TCL Channel, TCL Home, Apple TV*): Provides quick access to these streaming applications.
- **Settings Button** (*gear icon*): Opens the TV's settings menu.
- **Mute Button** (*speaker with cross*): Mutes or unmutes the TV audio.

### 4.2 Using Voice Search

The voice search feature allows you to quickly find content, launch apps, or control your TV using your voice.

1. Press and hold the **Microphone Button** on the remote control.
2. Speak clearly into the microphone, holding the remote close to your mouth.
3. Release the Microphone Button when you have finished speaking.
4. Your TV will process the command and display relevant results or perform the requested action.

*Examples of voice commands:* "Open Netflix", "Search for action movies", "What's the weather?", "Turn up the volume".

## 5. MAINTENANCE

---

### 5.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly.

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

## 5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Low or dead batteries. Remote not paired. Obstruction between remote and TV.	Replace batteries. Re-pair the remote (see Section 3.2). Ensure clear line of sight to TV's IR receiver (if applicable, though this is a voice remote, it might still use IR for basic functions).
Voice search not working.	Remote not paired correctly for voice function. Microphone blocked. Speaking too softly/loudly.	Ensure remote is paired for voice (Section 3.2). Check if anything is covering the microphone. Speak clearly and at a normal volume.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote (see Section 5.1).

## 7. SPECIFICATIONS

Feature	Detail
Product Type	Voice Remote Control
Brand	Generic (OEM Part)
Compatible Devices	TCL Televisions (Models: 49S6500FS, 49S6510FS, 49S6800, 49S6800FS, 50C715, 50C716, 50C717, 50P715, 50P717, 50P8, 50P8S)
Power Source	2 x AAA (LR3) Batteries (not included)
Special Feature	Voice Search, Ergonomic Design
Color	Black
Max Number of Supported Devices	1 (one TV)
Country of Origin	USA

## 8. WARRANTY AND SUPPORT

As an OEM (Original Equipment Manufacturer) part, specific warranty details may vary. Please refer to the original seller or the manufacturer of your TCL TV for information regarding warranty coverage and technical support for this remote control.

For further assistance or troubleshooting beyond this manual, it is recommended to contact the customer support of the retailer from whom you purchased this remote or the official TCL support channels for your TV model.

