

[Manuals.plus](#) /

› [Energizer](#) /

› Travel Essential Bundle User Manual

Energizer UE10026, 3BH02S

Travel Essential Bundle User Manual

Energizer Powerbank UE10026 & MOJUE 3BH02S Portable Bluetooth Speaker

INTRODUCTION

This user manual provides comprehensive instructions for the Travel Essential Bundle, which includes the Energizer Powerbank UE10026 and the MOJUE 3BH02S Portable Bluetooth Speaker. Please read this manual carefully before using the products to ensure proper operation and longevity.

PRODUCT OVERVIEW

Energizer Powerbank UE10026

The Energizer Powerbank UE10026 is a high-capacity portable charger designed to provide reliable power on the go. It features a 10,000mAh battery, dual output ports (USB-A and USB-C), and dual input options (Micro-USB and USB-C) for convenient recharging. Its PowerSafe Management system ensures protection against various electrical hazards.

- **Capacity:** 10,000mAh, providing extended power for smartphones and tablets.
- **Dual Outputs:** Charge two devices simultaneously via USB-A and USB-C ports.
- **Dual Inputs:** Recharge the power bank using either Micro-USB or USB-C cables.
- **Safety Features:** Built-in PowerSafe Management protects against short circuit, overcurrent, overcharge, and overdischarge.

MOJUE 3BH02S Portable Bluetooth Speaker

The MOJUE 3BH02S is a compact and portable Bluetooth speaker, ideal for enjoying audio wirelessly. Its unique and fashionable design, combined with its lightweight nature, makes it suitable for various environments. It connects to your devices via Bluetooth for seamless audio streaming.

- **Portability:** Compact and lightweight design for easy transport.
- **Wireless Connectivity:** Connects to devices via Bluetooth.
- **Design:** Features a unique and fashionable aesthetic.



Image: The Travel Essential Bundle, showing the black Energizer Powerbank UE10026 on the left and the black MOJUE 3BH02S Portable Bluetooth Speaker on the right.

SETUP

Energizer Powerbank UE10026

1. **Initial Charge:** Before first use, fully charge the power bank. Connect a Micro-USB or USB-C cable to the power bank's input port and the other end to a USB wall adapter (not included). The indicator lights will show charging progress.
2. **Connecting Devices:** Use a compatible charging cable to connect your device (smartphone, tablet, etc.) to either the USB-A output port or the USB-C output port on the power bank.

MOJUE 3BH02S Portable Bluetooth Speaker

1. **Initial Charge:** Ensure the speaker is charged before first use. Connect a compatible charging cable (usually Micro-USB or USB-C, depending on the model) to the speaker's charging port and a USB power source.
2. **Power On:** Press and hold the power button (usually marked with a power icon) for a few seconds until you hear an audible cue or see an indicator light.
3. **Pairing Mode:** The speaker will typically enter pairing mode automatically upon first power-on, indicated by a blinking LED light. If not, press and hold the Bluetooth pairing button (often marked with a Bluetooth symbol).
4. **Connect to Device:** On your smartphone or audio device, go to Bluetooth settings, turn on Bluetooth, and select "MOJUE 3BH02S" from the list of available devices. Once connected, the indicator light will become solid, and you may hear a confirmation sound.

OPERATING INSTRUCTIONS

Energizer Powerbank UE10026

- **Charging Devices:** Connect your device to the power bank using a USB-A or USB-C cable. The power bank will automatically begin charging your device.
- **Checking Battery Level:** Press the power button once to check the remaining battery level, indicated by the LED lights.
- **Recharging the Power Bank:** Connect the power bank to a USB wall adapter or computer using either a Micro-USB or USB-C cable. The LED indicators will show charging progress.

MOJUE 3BH02S Portable Bluetooth Speaker

- **Power On/Off:** Press and hold the power button to turn the speaker on or off.
- **Volume Control:** Use the volume buttons (+/-) on the speaker or your connected device to adjust the audio volume.
- **Play/Pause:** Press the play/pause button (often marked with a triangle or || symbol) to play or pause audio.

- **Skip Tracks:** Use the next/previous track buttons (often marked with arrows) to skip songs.
- **Answering Calls:** If connected to a smartphone, some speakers allow you to answer calls via a dedicated button. Refer to the speaker's specific button layout.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of both the power bank and the speaker. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** For optimal battery life, avoid fully discharging the power bank or speaker frequently. Recharge them regularly, even if not in use for extended periods (e.g., every 3-6 months).
- **Avoid Drops and Impacts:** Protect both devices from physical shocks, as this can damage internal components.
- **Water Exposure:** Keep both devices away from water and liquids unless explicitly stated as waterproof by the manufacturer.

TROUBLESHOOTING

Energizer Powerbank UE10026

- **Power bank not charging:**
 - Ensure the charging cable is securely connected to both the power bank and the power source.
 - Try a different charging cable or wall adapter.
 - Verify the power source is active.
- **Device not charging from power bank:**
 - Check if the power bank has sufficient charge.
 - Ensure the charging cable connecting the device to the power bank is functional and securely connected.
 - Try a different output port on the power bank.
 - Restart the device you are trying to charge.

MOJUE 3BH02S Portable Bluetooth Speaker

- **Speaker not turning on:**
 - Ensure the speaker is fully charged.
 - Press and hold the power button for a longer duration (5-10 seconds).
- **Speaker not pairing with device:**
 - Ensure the speaker is in pairing mode (blinking LED).
 - Make sure Bluetooth is enabled on your device and it's within range (typically 10 meters).
 - Forget the speaker from your device's Bluetooth list and try pairing again.
 - Turn off and on both the speaker and your device.
 - Ensure no other devices are currently connected to the speaker.
- **No sound from speaker:**
 - Check the volume level on both the speaker and your connected device.

- Ensure the speaker is successfully paired and connected to your device.
- Try playing audio from a different application or source.

SPECIFICATIONS

Energizer Powerbank UE10026

Battery Capacity	10000 Milliamp Hours (mAh)
Battery Cell Composition	Lithium Ion
Input (Micro-USB)	5V, 2A (Typical)
Input (USB-C)	5V, 2A (Typical)
Output (USB-A)	5V, 2.1A (Max)
Output (USB-C)	5V, 2.1A (Max)
Voltage	5 Volts
Output Current	1 Amps (as per product data, typically higher for power banks)
Compatible Devices	Smartphones, Tablets, and other USB-powered devices
Color	Multi (typically black for this bundle)

MOJUE 3BH02S Portable Bluetooth Speaker

Connectivity	Bluetooth
Power Source	Battery Powered
Color	Black
Design	Unique and fashionable, suitable weight
Material	High quality material

Note: Specific technical specifications for the MOJUE 3BH02S speaker were not fully detailed in the provided product information. General specifications are listed.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Energizer and MOJUE websites. Keep your proof of purchase for warranty claims.

For Energizer Powerbank UE10026 support, visit: www.energizer.com

For MOJUE 3BH02S Portable Bluetooth Speaker support, refer to the manufacturer's contact information provided with the speaker or search for MOJUE official support online.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPVPT5QN>

More documents and user manuals: **<https://manuals.plus/>**