

[manuals.plus](#) /› [realme](#) /› [realme C67 5G Smartphone User Manual](#)**realme RMX3782**

## realme C67 5G Smartphone User Manual

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your realme C67 5G smartphone (Model: RMX3782).

## 1. INTRODUCTION

Thank you for choosing the realme C67 5G smartphone. This device combines advanced 5G connectivity with a user-friendly interface, designed to enhance your mobile experience. Please read this manual carefully to ensure proper usage and to maximize the performance of your device.

## 2. DEVICE SETUP

### 2.1. Package Contents

Ensure your package contains the following items:

- realme C67 5G Smartphone
- Adapter
- Phone Case
- SIM Tray Ejector
- Quick Start Guide (not included in this digital manual)
- Safety Information (not included in this digital manual)

### 2.2. Inserting SIM Card and Powering On

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the tray with the gold contacts facing down. Ensure they are correctly seated.
4. Carefully reinsert the tray into the phone.
5. Press and hold the Power button (located on the right side of the device) until the realme logo appears.
6. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.



*Image: Side view of the realme C67 5G, illustrating the location of the SIM card tray and power button for setup.*

## 2.3. Charging the Device

Before first use, it is recommended to fully charge your realme C67 5G. Connect the provided adapter to the charging port (USB-C) at the bottom of the phone and plug it into a power outlet. The device supports 33W fast charging.

## 3. OPERATING YOUR DEVICE

### 3.1. Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Power Button:** Press to wake/sleep the screen. Press and hold to power off or restart.
- **Volume Buttons:** Adjust media volume, call volume, and notification volume.



*Image: Angled front view of the realme C67 5G, highlighting the display for user interaction.*

### **3.2. Making Calls and Sending Messages**

- **Calls:** Open the Phone app, enter the number or select a contact, then tap the call icon.
- **Messages:** Open the Messages app, tap 'Start chat', enter recipient(s) and your message, then tap send.

### **3.3. Camera Usage**

The realme C67 5G features a dual camera setup with a 50MP main sensor and a 2MP depth sensor, along with an 8MP front selfie camera.

1. Open the Camera app.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture an image or start/stop video recording.
4. Tap the camera switch icon to toggle between the front and rear cameras.



*Image: Rear view of the realme C67 5G, highlighting the dual camera system.*

### 3.4. Connectivity

- **Wi-Fi:** Go to Settings > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Bluetooth to pair with other devices.
- **5G Network:** Ensure your SIM card supports 5G and your area has 5G coverage. The device will automatically connect to the fastest available network.

## 4. MAINTENANCE

### 4.1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials. Do not expose the device to excessive moisture.

### 4.2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to Settings > About device > realme UI version to check for updates.

## 4.3. Battery Care

- Avoid extreme temperatures.
- Do not let the battery drain completely frequently.
- Use the original charger and cable for optimal charging.

## 4.4. Storage Management

Periodically clear unnecessary files, apps, and cache to free up storage space and maintain device speed. You can also expand storage using a microSD card.

# 5. TROUBLESHOOTING

## 5.1. Common Issues and Solutions

Issue	Solution
Device not turning on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force a restart.
Apps crashing or freezing	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the device. Update the app.
Poor Wi-Fi/5G connectivity	Restart your router/modem. Toggle Wi-Fi/Mobile Data off and on. Forget and reconnect to the network. Ensure you are within network range.
Battery drains quickly	Check battery usage in Settings to identify power-hungry apps. Reduce screen brightness. Disable unnecessary features like GPS or Bluetooth when not in use.

## 5.2. Factory Reset

If you encounter persistent issues, a factory reset may resolve them. **Warning: This will erase all data on your phone. Back up important data before proceeding.**

1. Go to Settings > System > Reset options.
2. Select "Erase all data (factory reset)".
3. Confirm your decision and enter your PIN/password if prompted.
4. The device will restart and restore to its factory settings.

# 6. SPECIFICATIONS

Feature	Detail
Model Number	RMX3782
Operating System	Android 13 with realme UI 4.0
Processor	MediaTek Dimensity 6020 Octa-core
RAM	4 GB
Display	6.5-inch LCD, HD+ resolution (1600 x 720 pixels)
Rear Camera	50MP Main Sensor + 2MP Depth Sensor

Feature	Detail
Front Camera	8MP Selfie Camera
Battery Capacity	5000 mAh
Charging	33W Fast Charging
Connectivity	5G, Wi-Fi, Bluetooth, USB
Package Dimensions	17.6 x 9 x 5.4 cm
Weight	182 g

*Note: Specifications are subject to change without prior notice.*

## 7. WARRANTY AND SUPPORT

### 7.1. Product Warranty

Your realme C67 5G comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and limitations. Additional protection plans may be available for purchase separately:

- 1 Year Screen protection by Acko (Optional)
- 1 Year Total Protection by Acko (Optional)
- 1 Year Extended Warranty by OneAssist (Optional)

### 7.2. Customer Support

For further assistance, technical support, or service inquiries, please visit the official realme support website or contact their customer service. You can find contact details on the realme official website or in your product documentation.

Official realme Store: [realme Store on Amazon.in](#)