

**Cshidworld HP1012023**

# Cshidworld Wireless Earbuds

## Instruction Manual

Model: HP1012023

### INTRODUCTION

Thank you for choosing Cshidworld Wireless Earbuds. These TWS (True Wireless Stereo) Bluetooth 5.0 headphones are designed to provide a high-fidelity audio experience with convenience and durability. Featuring IPX8 waterproofing, a built-in microphone, and a portable charging case, they are ideal for sports, daily commutes, and general use. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your earbuds to ensure optimal performance.

### WHAT'S IN THE Box

Upon opening your Cshidworld Wireless Earbuds package, you should find the following components:

- Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Type-C Charging Cable (not explicitly listed but implied for charging case)
- Multiple sizes of ear tips (not explicitly listed but implied for comfortable fit)
- User Manual (this document)



Image: The Cshidworld Wireless Earbuds securely placed within their charging case, illustrating the compact design and charging indicators.

## PRODUCT OVERVIEW

The Cshidworld Wireless Earbuds are designed for comfort and high-quality audio. They feature an ergonomic in-ear design and come with different sizes of skin-friendly rubber ear-tips to ensure a secure and comfortable fit during various activities. The earbuds and charging case are equipped with advanced technology for durability and ease of use.

## IP-X8 Waterproof Rating

Resistant to sweat, water and rain



Image: A person exercising in the rain, demonstrating the IPX8 waterproof rating of the earbuds, which are resistant to sweat, water, and rain.

The earbuds incorporate CVC 8.0 advanced call noise reduction technology, which helps filter ambient sound and echo, enhancing the clarity of your calls. This ensures that your voice is captured clearly even in noisy environments.

# Clear Voice Capture

## CVC 8.0

Advanced call noise reduction technology to **filter ambient sound and echo** to enhance the call experience



Image: A visual representation of the Clear Voice Capture (CVC) 8.0 technology, showing how it reduces noise and enhances voice clarity during calls.

## SETUP

### Charging the Earbuds and Case

Before first use, it is recommended to fully charge both the earbuds and the charging case. The charging case provides extended battery life for your earbuds, allowing for up to 21 hours of total playtime.

1. Place the earbuds into the charging case. Ensure they are correctly seated in their respective slots.
2. Connect the charging case to a power source using a USB Type-C cable.
3. The charging case typically takes about 1 hour to fully charge.
4. A single charge of the earbuds provides approximately 4.5 hours of playtime.

# 21-HOUR LONG BATTERY LIFE

**21 Hrs**  
with charging case

**4.5 Hrs**  
playing time per charge

**1 Hrs**  
charging the case



Image: An infographic detailing the battery life: 21 hours total with the charging case, 4.5 hours of playtime per single earbud charge, and 1 hour for the case to fully charge.

## Pairing with Your Device

The Cshidworld Wireless Earbuds feature one-step auto-pairing for quick and easy connection to your smartphone or laptop.

1. **Step 1:** Remove both earbuds from the charging case. They will automatically power on and connect to each other.
2. **Step 2:** On your smartphone or laptop, go to the Bluetooth settings.
3. **Step 3:** Search for available devices and select "T8" (or similar model name) from the list to pair the earbuds.
4. Once paired, the earbuds will automatically connect to your device whenever you take them out of the charging case, provided Bluetooth is enabled on your device.

# One-step Auto Pairing

- ① Remove the earbuds from charging case.
- ② Activate Bluetooth Setting, search & click "T8" to connect.

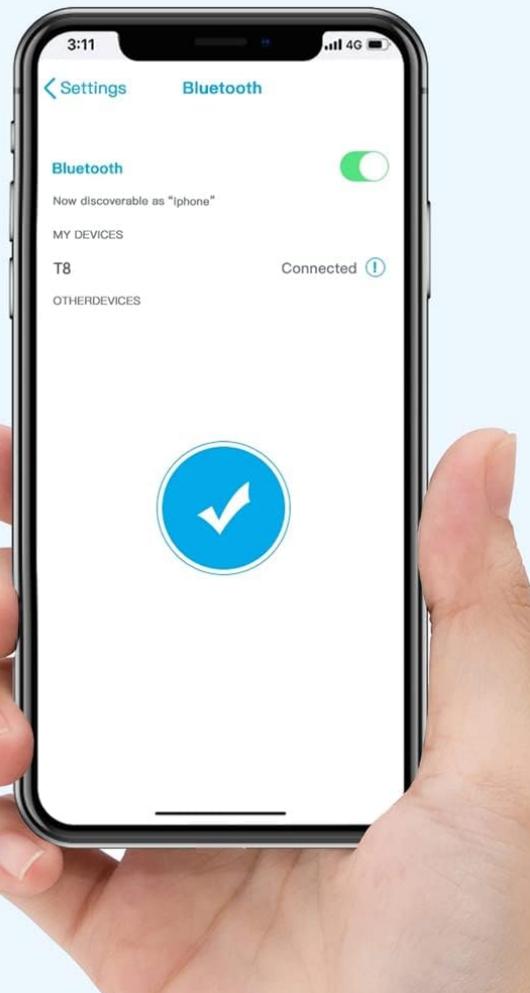


Image: A visual guide demonstrating the one-step auto-pairing process, showing the earbuds being removed from the case and the Bluetooth settings on a smartphone.

## OPERATING INSTRUCTIONS

The earbuds are equipped with smart touch controls, allowing you to manage music playback, calls, and voice assistants with simple taps.



Previous Song



Next Song



Play / Pause



Siri

X3



Activate Siri



Answer / Hang up



Hold

Volume Down



Hold

Volume Up

Image: A detailed diagram illustrating the touch control functions on the earbuds, including commands for music playback, calls, and voice assistant activation.

## Music Control

- **Play/Pause:** Single tap (x1) on either earbud.
- **Next Song:** Double tap (x2) on the right earbud.
- **Previous Song:** Double tap (x2) on the left earbud.
- **Volume Up:** Hold the right earbud.
- **Volume Down:** Hold the left earbud.

## Call Control

- **Answer/Hang Up Call:** Double tap (x2) on either earbud.
- **Reject Call:** Hold either earbud for 2 seconds.

## Voice Assistant

- **Activate Siri (or other voice assistant):** Triple tap (x3) on either earbud.

## WEARING INSTRUCTIONS

For optimal sound quality and comfort, ensure the earbuds are properly seated in your ears. The ergonomic design and multiple ear-tip sizes help achieve a secure fit.

1. Select the ear-tip size that best fits your ear canal. A snug fit is crucial for noise isolation and bass performance.
2. Gently insert each earbud into your ear, twisting slightly until it feels secure and comfortable.
3. Adjust the earbud until the sound is clear and balanced.



Image: Two scenarios showing individuals comfortably wearing the Cshidworld Wireless Earbuds, emphasizing their ergonomic design suitable for extended use.

## MAINTENANCE

Proper maintenance will extend the lifespan of your Cshidworld Wireless Earbuds.

### Cleaning

- Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry, lint-free cloth.
- If necessary, use a cotton swab lightly dampened with rubbing alcohol to clean earwax or debris from the ear tips and speaker mesh. Ensure no liquid enters the speaker opening.

- Clean the charging contacts on both the earbuds and the charging case to ensure proper charging.

## Waterproofing

The earbuds feature an IPX8 waterproof rating, meaning they are protected against prolonged immersion in water. However, this rating does not mean they are suitable for swimming or diving. Avoid exposing the charging case to water, as it is not waterproof.

- After exposure to sweat or rain, wipe the earbuds dry before placing them back into the charging case to prevent damage to the charging contacts.
- Do not use the earbuds in saunas, steam rooms, or while showering with hot water, as steam and high temperatures can compromise the waterproof seals.

## TROUBLESHOOTING

If you encounter issues with your Cshidworld Wireless Earbuds, try the following troubleshooting steps:

- **Earbuds not pairing with each other:** Place both earbuds back into the charging case, close the lid for a few seconds, then take them out again. They should automatically connect.
- **Earbuds not connecting to device:**
  - Ensure Bluetooth is enabled on your device.
  - Forget the earbuds from your device's Bluetooth list and try pairing again.
  - Ensure the earbuds are charged.
  - Restart your device.
- **No sound from one earbud:**
  - Check if both earbuds are charged.
  - Place both earbuds back in the case and take them out again to re-establish the connection between them.
  - Clean the charging contacts on both earbuds and the case.
- **Charging issues:**
  - Ensure the charging cable is securely connected to both the case and the power source.
  - Try a different charging cable or power adapter.
  - Clean the charging contacts on the earbuds and inside the case.
- **Poor sound quality:**
  - Ensure the earbuds are properly seated in your ears and you are using the correct ear-tip size.
  - Clean any debris from the speaker mesh.
  - Move closer to your connected device to avoid interference.

## SPECIFICATIONS

Feature	Specification
Model Name	Cshidworld TWS Earbuds, Bt 5.0 Headphones, IPX8, Built-in Mic, Charging Case & 21 Hrs Playtime

Feature	Specification
Bluetooth Version	V5.0+DSR
Connectivity Technology	Wireless (Bluetooth)
Water Resistance Level	IPX8 Waterproof
Playtime (Single Charge)	Approx. 4.5 hours
Total Playtime (with Charging Case)	Up to 21 hours
Charging Time (Case)	Approx. 1 hour
Charging Case Battery Capacity	500mAh
Working Distance	More than 10 meters
Noise Control	Sound Isolation (CVC 8.0 for calls)
Control Method	Touch
Material	Rubber
Color	Black
Item Weight	1 pound
Item Model Number	HP1012023

## WARRANTY AND SUPPORT

Specific warranty details for Cshidworld Wireless Earbuds are not provided in this manual. For warranty claims, technical support, or further assistance, please refer to the product packaging or contact the retailer or manufacturer directly through their official support channels. Please retain your proof of purchase for any warranty-related inquiries.