

Manuals.plus /

› km5 /

› km5 Bluetooth CD Player Instant Disk Audio CP2 User Manual

km5 CP2

km5 Bluetooth CD Player Instant Disk Audio CP2 User Manual

Model: CP2

INTRODUCTION

The km5 Instant Disk Audio CP2 is a portable CD player designed for convenient audio playback. It features integrated speakers and Bluetooth 5.1 connectivity, allowing for versatile listening options. The device is battery-powered, offering extended playback time, and includes a unique design that allows CD jackets to be displayed, enhancing its aesthetic appeal.



Image: Two km5 CP2 CD players, one white and one black, displayed together.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items are present:

- km5 Instant Disk Audio CP2 CD Player
- Instructions Manual
- Warranty Card
- USB-C Charging Cable (not explicitly listed but implied by 'Connector Type: USB-C')

PRODUCT OVERVIEW

The CP2 player integrates several key features for an enhanced audio experience:

- **Integrated Speakers:** A 27mm-thin speaker with a passive radiator is included for balanced sound reproduction.
- **Bluetooth 5.1 Connectivity:** Allows wireless connection to earbuds and external Bluetooth speakers.
- **Rechargeable Battery:** Provides 6-7 hours of continuous playback with speakers or 7-8 hours with Bluetooth.
- **CD Jacket Display:** Features a design that allows CD jackets to be displayed, functioning as an art

piece.

- **Wall Mountable:** Can be hung on a wall (wall bracket sold separately).



Image: Two km5 CP2 CD players, one white and one black, mounted on a wall, showcasing their ability to display CD jacket art.



Image: A white km5 CP2 CD player positioned on an optional aluminum stand.

SETUP

1. Charging the Device

Before initial use, fully charge the CP2 player. Connect the provided USB-C cable to the charging port on the device and plug the other end into a compatible USB power adapter (not included). The battery level indicator will show charging status.

2. Inserting a CD

1. Gently open the CD compartment lid.
2. Place the CD onto the spindle with the label side facing up. Ensure the CD is seated correctly.
3. Close the CD compartment lid securely.



Image: Several white km5 CP2 CD players with their lids open, illustrating the CD insertion process.

3. Powering On/Off

Locate the power button on the device. Press and hold the power button for a few seconds to turn the player on or off.

OPERATING INSTRUCTIONS

1. CD Playback

1. After inserting a CD and powering on the device, the player will typically begin playback automatically.
2. Use the Play/Pause button to start or temporarily stop playback.
3. Use the Skip Forward/Backward buttons to navigate between tracks.
4. Adjust the volume using the dedicated volume controls.

2. Bluetooth Connection

To connect the CP2 to wireless earbuds or a Bluetooth speaker:

1. Ensure the CP2 player is powered on.
2. Activate Bluetooth pairing mode on your external audio device.
3. Press and hold the Bluetooth button on the CP2 player until the Bluetooth indicator light flashes, indicating pairing mode.
4. Select "km5 CP2" (or similar) from the list of available devices on your external audio device.
5. Once connected, the Bluetooth indicator light on the CP2 will become solid.

3. Displaying CD Jacket Art

The transparent window allows you to insert a CD lyric card or jacket art to personalize the player's appearance. This feature is designed to integrate the player as an interior item.



Image: A close-up view of the white km5 CP2 CD player, highlighting its control buttons and display area.

MAINTENANCE

Cleaning the Device

To maintain the appearance and functionality of your CP2 player:

- Wipe the exterior with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals.
- Keep the CD compartment free of dust and debris.

CD Handling

Handle CDs by their edges to avoid fingerprints and scratches, which can affect playback quality.

TROUBLESHOOTING

- **No Power:** Ensure the device is charged. Connect the USB-C cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **CD Skipping/Not Playing:** Check if the CD is clean and free of scratches. Ensure the CD is inserted correctly and the lid is fully closed.
- **Bluetooth Not Connecting:** Ensure the CP2 is in pairing mode (flashing indicator). Make sure your external device is also in pairing mode and within range. Try restarting both devices.
- **Poor Sound Quality:** For internal speakers, ensure the device is placed on a stable surface. If using Bluetooth, check the connection and volume levels on both the player and the connected device.

SPECIFICATIONS

Brand	km5
Model Name	Bluetooth CD Player Instant Disk Audio
Model Number	CP2-001(B)
Color	Black
Connectivity Technology	Bluetooth
Bluetooth Version	5.1
Special Feature	Battery Level Indicator
Number Of Discs	1
Supported Audio Format	MP3, Audio CD
Connector Type	USB-C
Number of Channels	2
Compatible Devices	Speaker
Headphones Jack	No headphones jack
MP3 player	Yes
Number of Batteries	1 Lithium Ion (included)
Continuous Playback (Speakers)	6-7 hours
Continuous Playback (Bluetooth)	7-8 hours
Item Dimensions (L x W x H)	8.86" x 5.51" x 1.06" (225mm x 140mm x 27mm)
Item Weight	735 Grams



Image: A visual summary of the km5 CP2's main specifications, including disc format, size, wireless connectivity, performance, and dimensions.

WARRANTY INFORMATION

The km5 Instant Disk Audio CP2 comes with a **1 Year Warranty** from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions regarding coverage and claims.

SUPPORT

For further assistance, technical support, or inquiries regarding your km5 Instant Disk Audio CP2, please refer to the contact information provided on your Warranty Card or visit the official km5 store on Amazon: [km5 Official Store](#)