

ECONTROLLY BN59-01432A

ECONTROLLY BN59-01432A Voice Remote Control

USER MANUAL

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY BN59-01432A Voice Remote Control. This remote is designed as a replacement for specific Samsung Smart TV models, offering voice control functionality.





Figure 1: ECONTROLLY BN59-01432A Voice Remote Control

PACKAGE CONTENTS

- 1 x ECONTROLLY BN59-01432A Voice Remote Control

Note: AAA ALKALINE batteries are required for operation and are not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Open the battery compartment cover.
3. Insert two (2) new AAA ALKALINE batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Important: Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or may damage the remote control.

2. Pairing the Remote Control with Your TV

This remote control requires pairing with your Samsung TV before use. Follow these steps to establish a connection:

1. Ensure your Samsung TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Return** button (⏮) and the **Play/Pause** button (⏮) simultaneously for 3 seconds or more.
4. A pairing message should appear on your TV screen, indicating successful pairing.

If pairing is unsuccessful, ensure the batteries are fresh and correctly installed, then repeat the pairing process.

OPERATING THE REMOTE

Basic Functions

The remote control provides standard functions for navigating your Samsung TV, including power on/off, volume control, channel selection, and menu navigation. Specific buttons for popular streaming services may also be present.

Voice Control

To use the voice control feature, press and hold the **Microphone** button (🎤) and speak clearly into the remote. Release the button when you have finished your command.

Important Notes

- This remote control is designed for use with compatible Samsung TVs only.
- It does not function with cable boxes or other external devices.
- This remote does not feature a solar panel for charging.



Figure 2: Remote control in use with a Samsung TV

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, replace the AAA ALKALINE batteries. Refer to the Battery Installation section for detailed steps.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

Remote Not Responding

- Check if the batteries are correctly inserted with the proper polarity.
- Replace old batteries with new AAA ALKALINE batteries.

- Ensure there are no obstructions between the remote control and the TV's sensor.

Pairing Issues

- Confirm that your TV is a compatible Samsung Smart TV model.
- Repeat the pairing process as described in the "Pairing the Remote Control with Your TV" section.
- Ensure the remote is within close proximity to the TV during pairing.

SPECIFICATIONS



6.0 inch

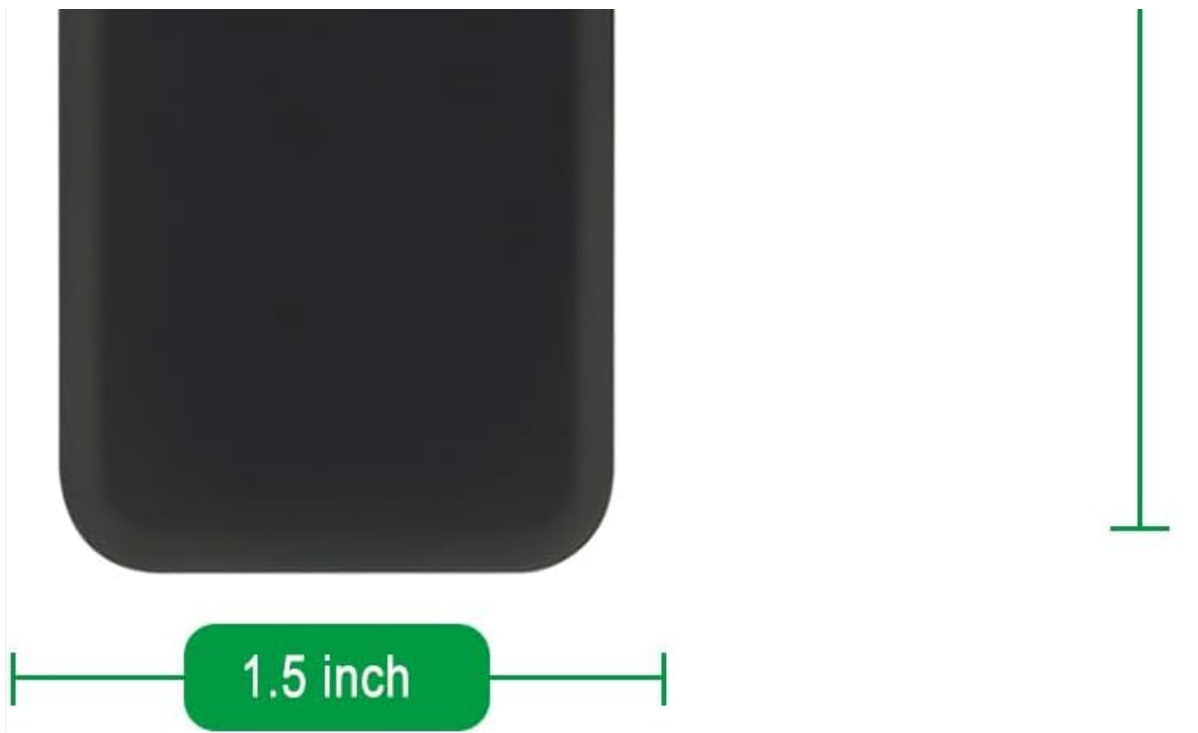


Figure 3: Remote Control Dimensions

Model Number	BN59-01432A
Brand	ECONTROLLY
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Batteries Required	2 x AAA ALKALINE batteries (not included)
Special Feature	Voice Search
Color	Black
Compatible Devices	Television

COMPATIBLE SAMSUNG TV MODELS

This remote control is compatible with the following Samsung TV models:

QN43Q60CAFXZA, QN55Q70CAFXZA, QN75QN90CAFXZA, QN65QN85CAFXZA, QN85Q60CAFXZA, QN65Q80CAFXZA, QN65Q70CAFXZA, QN85Q80CAFXZA, QN65QN90CAF, QN50Q80CAFXZA, QN55Q80CAF, QN65QN90CAFXZA, QN50Q60CAF, QN50Q60CAFXZA, QN65QN85CAF, QN75QN85CAF, QN75QN85CAFXZA, QN43QN90CAF, QN75Q70CAF, QN75Q70CAFXZA, QN85Q70CAF, QN43QN90CAFXZA, QN75Q80CAF, QN75Q80CAFXZA, QN85Q80CAF, QN50QN90CAF, QN50QN90CAFXZA, QN75Q60CAFXZA, QN85Q60CAF, QN55QN90CAF, QN85QN90CAF, QN85QN90CAFXZA, QN65Q70CAF, QN85Q70CAFXZA, QN55QN85CAF, QN55QN85CAFXZA, QN85QN85CAF, QN85QN85CAFXZA, QN32Q60CAF, QN32Q60CAFXZA, QN43Q60CAF, QN55Q60CAF, QN55Q60CAFXZA, QN55Q70CAF, QN50Q80CAF, QN55Q80CAFXZA, QN65Q80CAF, QN65Q60CAF, QN65Q60CAFXZA, QN75Q60CAF, QN55QN90CAFXZA, QN75QN90CAF.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact the seller directly. Specific warranty terms and support channels are managed by the point of purchase or the manufacturer.