

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AKB74475448 Replacement Remote Control User Manual for LG TVs

ECONTROLLY AKB74475448

ECONTROLLY AKB74475448 Replacement Remote Control User Manual

For LG TV Models

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your ECONTROLLY AKB74475448 replacement remote control. This remote is designed to be compatible with a wide range of LG TV models, offering a direct replacement for your original remote without the need for programming.

SETUP

Battery Installation

To begin using your remote control, you must first install the batteries. Follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or may damage the remote control.



Image: Rear view of the ECONTROLLY AKB74475448 remote control, illustrating the location of the battery compartment. The compartment is designed for easy access to insert or replace batteries.

OPERATING YOUR REMOTE CONTROL

The ECONTROLLY AKB74475448 remote control is pre-programmed and ready to use with compatible LG TV models immediately after battery installation. Point the remote directly at your television's infrared receiver.





Image: Front view of the ECONTROLLY AKB74475448 remote control, displaying all buttons and their labels. This image provides a clear overview of the remote's layout for operational reference.

Basic Functions

- **Power ():** Turns the TV on or off.
- **TV/Input:** Switches between different input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Page Up/Down):** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.
- **Settings:** Accesses the TV's main settings menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back:** Returns to the previous menu or screen.
- **Exit:** Exits the current menu or function.

Advanced Functions

- **Caption:** Toggles closed captions on or off.
- **AV Mode:** Adjusts the audio/video mode (e.g., Cinema, Sport, Game).
- **Ratio:** Changes the screen aspect ratio.
- **List:** Displays the channel list.
- **Q.View:** Returns to the previously viewed channel.
- **FAV:** Accesses favorite channels list.
- **Guide:** Opens the electronic program guide (if supported by TV).
- **Info:** Displays information about the current program.
- **Sound:** Accesses sound settings.
- **Q.Menu:** Opens the quick menu for common settings.
- **Sleep:** Sets the TV to turn off automatically after a set period.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications, as indicated on screen.

COMPATIBLE LG TV MODELS

This ECONTROLLY AKB74475448 replacement remote control is compatible with the following LG TV models:

- 32LF510B
- 43LF5100
- 32LF550D
- 32LF550B
- 39LN5400
- 40LF5700
- 32LW340C
- 32LF565B
- 50LF5650
- 43LW340C
- 43LF5700
- 32LN5400

- 32LN540B
- 42LN5400
- 43LW540H
- 60LF5650
- 49LW540H
- 47LN5400
- 50LN5400
- 55LN5400
- 49LF5500
- 43LW540S
- 32LW300C
- 43LF5400
- 49LF5400
- 55LN5400-SB
- 32LW340C-SA
- 32LF550B-SD
- 32LF550D-DD
- 42LN5400-SA
- 47LN5400-SB
- 49LF5500-SD
- 49LF5100
- 43LF5410
- 49LF5410
- 49LW540S
- 55LW540S
- 55LF5650
- 32LN540B-SA
- 32LN540B-SH
- 32LN5400-SA
- 32LN5400-SB
- 50LN5400-SA
- 50LN5400-SB
- 55LN5400-SA
- 43LW300C
- 49LW300C
- 32LW540S
- 42LN5400-SB
- 47LN5400-SA
- 39LN5400-SA
- 39LN5400-SB

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA ALKALINE batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Check battery orientation. Replace with fresh AAA ALKALINE batteries.
Remote only works intermittently.	Low battery power; Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's infrared receiver.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Gently clean the remote surface. Avoid spilling liquids on the remote.
Remote does not control TV functions.	TV model not compatible; Remote's infrared emitter is blocked or damaged.	Verify your TV model is listed in the compatibility section. Ensure the front of the remote is not blocked.

SPECIFICATIONS

- **Model:** AKB74475448
- **Brand:** ECONTROLLY
- **Compatibility:** Specific LG TV models (refer to compatibility list)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA ALKALINE batteries (not included)
- **Special Feature:** Pre-programmed, no setup required
- **Color:** Black
- **Product Dimensions:** Approximately 3.94 x 1.57 x 0.59 inches
- **Item Weight:** Approximately 1.76 ounces (without batteries)

WARRANTY INFORMATION

Specific warranty details for this product are not provided within this manual. Please refer to the product packaging, the seller's terms and conditions, or contact the seller directly for information regarding warranty coverage and claims.

SUPPORT

For further assistance or if you have questions not covered in this manual, please contact the seller or manufacturer through the platform where the product was purchased. Provide your product model number (AKB74475448) and a detailed description of your issue for efficient support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPX4W1Q8>

More documents and user manuals: <https://manuals.plus/>