

ECONTROLLY Skyworth Clarus S1, UE7600, UD7300, TD7300 Series Google TV Remote Control

ECONTROLLY Voice Remote Control Instruction Manual

Compatible with Skyworth Clarus S1, UE7600, UD7300, TD7300 Series Google TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ECONTROLLY Voice Remote Control. This remote is designed to be compatible with various Skyworth Google TV models, including the Clarus S1, UE7600, UD7300, and TD7300 series. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

2. PRODUCT OVERVIEW

The ECONTROLLY Voice Remote Control features a user-friendly layout with dedicated buttons for essential functions and quick access to popular streaming services. Its ergonomic design ensures comfortable handling.





Image 1: Front view of the ECONTROLLY Voice Remote Control, showcasing its button layout including power, Google Assistant, settings, navigation, volume, mute, home, back, input, Netflix, Prime Video, and YouTube buttons.

Key Buttons and Functions:

- **Power Button (⏻):** Turns the TV on or off.
- **Google Assistant Button (🗨️):** Activates voice control for commands and searches.
- **Settings Button (⚙️):** Accesses TV settings menu.

- **Navigation Pad (Circular):** Used to move through menus and content.
- **OK Button (Center of Navigation Pad):** Confirms selections.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (⬇):** Returns to the main home screen of the Google TV interface.
- **Input/Source Button (⏏):** Changes the TV input source.
- **Volume Up/Down Buttons (+/-):** Adjusts the TV volume.
- **Mute Button (⏏):** Mutes or unmutes the TV audio.
- **Netflix Button:** Direct access to the Netflix application.
- **Prime Video Button:** Direct access to the Prime Video application.
- **YouTube Button:** Direct access to the YouTube application.

3. SETUP

3.1. Battery Installation

Your ECONTROLLY Voice Remote Control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not supported and should not be used.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

3.2. Pairing the Remote Control

The voice control functionality of this remote requires pairing with your Skyworth Google TV. The specific pairing steps may vary slightly depending on your TV model. Please refer to your TV's user manual for exact instructions if these general steps do not work.

1. Ensure your TV is powered on and you are able to navigate its menus (you may need to use your original TV remote or the TV's physical buttons initially).
2. On your Skyworth Google TV, navigate to the **Settings** menu. This is typically accessible from the Home screen or by pressing the Settings button on your original remote.
3. Within the Settings menu, look for options such as **Remotes & Accessories**, **Bluetooth & Devices**, or similar. Select this option.
4. Choose **Add accessory** or **Pair new device**. Your TV will now enter a search mode for new Bluetooth devices.
5. On your ECONTROLLY Voice Remote Control, simultaneously press and hold the **Home button** (⬇) and the **Back button** (←) for approximately 3-5 seconds. A small indicator light on the remote (if present) may flash to indicate it is in pairing mode.
6. Once the remote appears in the list of available devices on your TV screen, select it to complete the pairing process.
7. A confirmation message should appear on your TV screen once the pairing is successful.

Note: If pairing fails, ensure the remote is close to the TV, batteries are fresh, and no other devices are interfering with the Bluetooth signal. You may need to repeat the pairing steps.

4. OPERATING THE REMOTE CONTROL

4.1. Basic Navigation

- Use the **Navigation Pad** (up, down, left, right) to move the cursor or highlight items on the screen.
- Press the **OK button** in the center of the Navigation Pad to select a highlighted item or confirm an action.
- Press the **Back button** (←) to return to the previous menu or exit an application.
- Press the **Home button** (△) to go directly to the Google TV home screen.

4.2. Power and Volume Control

- Press the **Power button** () to turn your TV on or off.
- Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the audio level.
- Press the **Mute button** () to temporarily silence the TV audio. Press it again to restore sound.

4.3. Voice Control (Google Assistant)

Once paired, you can use the voice control feature for hands-free operation and quick searches.

1. Press and hold the **Google Assistant button** ().
2. Speak your command or query clearly into the remote's microphone. For example, "Open Netflix," "Search for action movies," or "What's the weather?"
3. Release the Google Assistant button when you have finished speaking.

4.4. Quick Access Buttons

The remote includes dedicated buttons for instant access to popular streaming applications:

- Press the **Netflix button** to launch the Netflix app.
- Press the **Prime Video button** to launch the Prime Video app.
- Press the **YouTube button** to launch the YouTube app.

5. MAINTENANCE

5.1. Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

5.2. Battery Replacement

Replace the AAA ALKALINE batteries when the remote's performance degrades or if the indicator light (if present) signals low battery. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

6.1. Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed with the correct polarity and are not depleted. Replace with fresh AAA ALKALINE batteries if necessary.
- **Line of Sight:** While this is a Bluetooth remote, ensure no major obstructions are between the remote and the TV, especially during initial setup or if experiencing intermittent issues.
- **Re-pair Remote:** If the remote stops responding, try re-pairing it with your TV following the steps in Section 3.2.
- **TV Restart:** Power cycle your TV by unplugging it from the wall outlet for 30 seconds, then plugging it back in.

6.2. Voice Control Not Working

- **Pairing:** Ensure the remote is properly paired with your TV. Voice control requires a Bluetooth connection.
- **Microphone:** Ensure you are speaking clearly into the remote's microphone and holding down the Google Assistant button while speaking.
- **Internet Connection:** Voice commands often require an active internet connection for processing. Verify your TV's internet connectivity.
- **TV Settings:** Check your TV's Google Assistant settings to ensure it is enabled and configured correctly.

6.3. Quick Access Buttons Not Working

- **App Installation:** Ensure the respective applications (Netflix, Prime Video, YouTube) are installed on your Google TV.
- **Internet Connection:** These apps require an active internet connection to function.
- **TV Software:** Ensure your TV's software is up to date.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Batteries Required	2 x AAA ALKALINE batteries (not included)
Special Feature	Voice Search (Google Assistant)
Compatible Devices	Skyworth Clarus S1, UE7600, UD7300, TD7300 Series Google TVs (e.g., 75S1, 55UD7300, 40TD7300, 65UE7600, 50UE7600, 75UD6300, 50UD7300, 65UD7300, 43UE7600, 55UE7600, 32TD7300, 75UE7600, 65S1)
Color	Black

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer from whom the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question