

Claiks P1.01.001.0014.JP

Claiks Electric Standing Desk 120cm Natural Top User Manual

Model: P1.01.001.0014.JP

1. INTRODUCTION

Thank you for choosing the Claiks Electric Standing Desk. This desk is designed to enhance your work environment by allowing seamless transitions between sitting and standing positions, promoting better health and productivity. This manual provides essential information for safe assembly, operation, and maintenance of your new desk.

The Claiks Electric Standing Desk features a height adjustment range of 72cm to 118cm and a lifting speed of 20mm/s. It includes three programmable memory presets for quick height changes. Constructed with reinforced steel legs and a high-performance motor, it offers excellent durability and stability with a maximum load capacity of 80kg. The environmentally friendly tabletop is made with melamine resin, making it resistant to water, heat, and stains for easy cleaning.

😊 当店こだわり設計



60×60mm の極太脚部
しっかり支える安定設計



ラウンドエッジ加工
丸みを帯びた安全設計



1.2mm 高強度スチール
長く安心して使える頑丈構造



20mm/s 昇降モーター
スムーズ＆スピーディーに高さ調節可能



😞 一般的な薄型設計

● 細身の脚部設計
揺れやすい場合があります

● 角張ったフレーム形状
接触時の安全性に配慮が必要

● ≤1.0mm 以下の薄型素材
耐久性や安定感に不安

● 10mm/s の低速昇降
昇降速度が遅い場合も

 
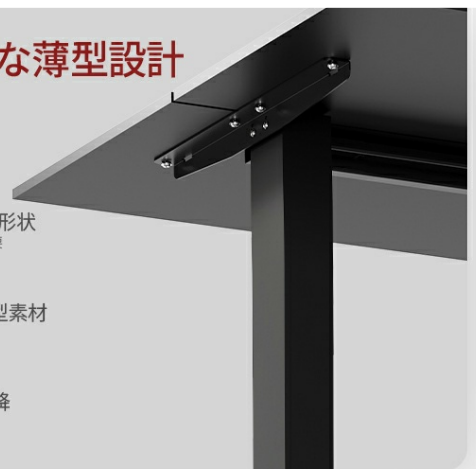


Image: A user seamlessly transitioning from a sitting to a standing position at the Claiks Electric Standing Desk, highlighting its ergonomic benefits for telework and office use.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the desk during operation to prevent injury.
- Ensure all cables are properly managed and secured to avoid tripping hazards or damage during height adjustment.
- Do not overload the desk. The maximum recommended load capacity is 80kg.
- Avoid placing liquids directly on the control panel or motor components.
- Do not attempt to disassemble or repair the motor or control unit yourself. Contact customer support for assistance.
- Ensure the desk is placed on a level surface to maintain stability.
- Unplug the power cord before cleaning or maintenance.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desktop (Natural Top, 120cm x 60cm)
- Desk Legs (White Frame)
- Motor and Control Box
- Control Panel
- Power Adapter and Cable
- Headphone Hooks (2 pcs)
- Cable Management Tray
- Assembly Hardware (screws, Allen wrench)
- User Manual

初心者でも安心

約30分で組立完了



STEP 1

天板を取り付け



STEP 2

脚フレームを固定



STEP 3

電源コードを接続



Image: An exploded view of the Claike Electric Standing Desk components, including the tabletop, legs, motor, control panel, and assembly tools, demonstrating the ease of setup.

4. ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 30 minutes. It is recommended to have two people for assembly to ensure safety and ease.

- Step 1: Attach the Desk Legs to the Desktop.** Carefully place the desktop upside down on a soft, clean surface to prevent scratches. Align the desk legs with the pre-drilled holes on the underside of the desktop and secure them using the provided screws.
- Step 2: Install the Crossbar and Motor.** Attach the crossbar between the two leg frames. Connect the motor to the leg mechanisms and the control box. Ensure all connections are firm.
- Step 3: Mount the Control Panel and Accessories.** Secure the control panel to the underside of the desk in a convenient location. Attach the headphone hooks and cable management tray as desired.
- Step 4: Connect Power.** Plug the power adapter into the control box, then connect it to a power outlet.

5. **Step 5: Initializing the Desk.** Follow the instructions in the Operating section for initial setup and calibration.



Image: A visual guide illustrating the three main steps for assembling the Claiks Electric Standing Desk, from attaching the tabletop to connecting the power cord, designed for easy understanding.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

Your desk is equipped with an intuitive control panel for height adjustment and memory functions. There may be slight variations in control panel design, but the functionality remains the same.

高さメモリー機能

ワンタッチで高さ調節



LED高さ表示



簡単昇降操作



高さメモリー機能

Image: A detailed view of the Claike Electric Standing Desk's control panel, featuring an LED height display, up/down adjustment buttons, and three memory preset buttons for convenient operation.

5.2 Basic Height Adjustment

- Press the **Up Arrow (^)** button to raise the desk.
- Press the **Down Arrow (v)** button to lower the desk.
- Release the button when the desired height is reached. The LED display will show the current height.

5.3 Memory Presets

The desk allows you to save up to three preferred heights for quick access.

1. Adjust the desk to your desired height using the up/down arrows.
2. Press and hold one of the memory buttons (**1**, **2**, or **3**) until the LED display flashes or beeps, indicating the height has been saved.
3. To recall a saved height, simply press the corresponding memory button (**1**, **2**, or **3**) once. The desk will

automatically move to the saved position.



Image: A family utilizing Claike's electric standing desks, demonstrating the wide adjustable height range (72cm to 118cm) suitable for various users and activities, from adult work to child's study.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Claike's Electric Standing Desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the surface. The melamine resin tabletop is resistant to water and stains, making cleaning easy.
- **Cable Management:** Periodically check and reorganize cables in the cable management tray to prevent tangles and ensure smooth operation.
- **Inspection:** Regularly inspect all screws and connections to ensure they are tight. Tighten if necessary.
- **Motor Care:** The motor is designed for durability. Avoid obstructing the lifting mechanism during operation.

7. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following troubleshooting guide. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Desk does not move / Control panel is unresponsive.	Power cable disconnected; Motor overload; Control panel malfunction.	Check power connections. Unplug and replug the power cable. Reduce load on the desk. If still unresponsive, contact support.
Desk moves unevenly or makes unusual noise.	Uneven load; Loose connections; Obstruction in lifting mechanism.	Distribute weight evenly on the desktop. Check and tighten all assembly screws. Ensure no objects are obstructing the legs.
Memory function not working.	Height not properly saved.	Ensure you press and hold the memory button until the display confirms saving. Re-save your desired height.

8. SPECIFICATIONS

Detailed specifications for the Claiks Electric Standing Desk.

Feature	Detail
Brand	Claiks
Model Number	P1.01.001.0014.JP
Dimensions (D x W x H)	60cm x 120cm x 70cm (minimum height)
Height Adjustment Range	72cm - 118cm
Lifting Mechanism	Electric
Lifting Speed	20mm/s
Maximum Recommended Load	80 kg
Desktop Material	Wood (Melamine Resin)
Frame Material	Carbon Steel
Color	Natural Top / White Frame
Special Features	Electric height adjustment, Memory function, Rounded corners, Headphone hooks, Cable management
Assembly Required	Yes
Recommended Assembly Persons	2

Feature	Detail
---------	--------



Image: The Claiks Electric Standing Desk displaying its key dimensions: 122cm width, 61cm depth, and an adjustable height range from 72cm to 118cm, with a stated load capacity of 70kg.

9. WARRANTY AND SUPPORT

Claiks provides a manufacturer's warranty for all products. During the warranty period, free repair or replacement services are available for manufacturing defects.

For any inquiries, technical support, or warranty claims, please contact Claiks customer service. Our support team is available in multiple languages, including English and Japanese.

Contact Information: Please refer to the contact details provided on your purchase receipt or the official Claiks website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question