

[Manuals.plus](#) /

› [Morphy Richards](#) /

› Morphy Richards Brew Blend Coffee Maker (Model 350018) Instruction Manual

Morphy Richards 350018

Morphy Richards Brew Blend Coffee Maker (Model 350018) Instruction Manual

Your guide to perfect coffee brewing.

1. INTRODUCTION

Thank you for choosing the Morphy Richards Brew Blend Coffee Maker, Model 350018. This appliance is designed to provide you with fresh, aromatic coffee using either whole beans or ground coffee powder. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to

"off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Morphy Richards Brew Blend Coffee Maker:

- **Main Unit:** Houses the heating element, control panel, and water reservoir.
- **Removable Grinder:** For grinding whole coffee beans.
- **Removable Water Tank:** For easy filling and cleaning.
- **Control Panel:** Digital display with touch controls for strength, cup selection, and power.
- **Filter Basket:** Holds the reusable filter for coffee grounds.
- **Reusable Filter:** For filtering coffee.
- **600 ml Borosilicate Carafe:** Glass carafe with handle for collecting brewed coffee.
- **Anti-Drip Function:** Prevents dripping when the carafe is removed.
- **Spoon:** For measuring coffee.
- **Cleaning Brush:** For maintenance.



Image: Key components of the coffee maker, including the removable grinder, water tank, anti-drip feature, and carafe.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Initial Cleaning:** Before first use, wash the carafe, reusable filter, and removable grinder in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter and out of reach of children. Ensure adequate ventilation around the appliance.

4. **First Brew Cycle (without coffee):** Fill the water tank to the MAX level with fresh, cold water. Place the empty carafe on the warming plate. Run a full brewing cycle without coffee to clean the internal components. Discard the water.

5. OPERATING INSTRUCTIONS

Follow these steps to brew coffee:

1. **Add Water:** Remove the water tank and fill it with fresh, cold water up to the desired level (corresponding to the number of cups you wish to brew). Reinsert the water tank securely.
2. **Add Coffee:**
 - **For Whole Beans:** Place the desired amount of whole coffee beans into the removable grinder.
 - **For Ground Coffee:** Place the reusable filter into the filter basket. Add the desired amount of ground coffee powder into the filter.
3. **Place Carafe:** Ensure the empty carafe is correctly positioned on the warming plate.
4. **Select Mode:** Use the touch control panel to select your preferred brewing mode:
 - **Coffee Strength:** Adjust for light or strong coffee.
 - **Cups:** Select 1-2 cups or 3-4 cups.
 - **Powder/Beans:** Choose between coffee powder or whole beans (this activates the grinder).
5. **Start Brewing:** Press the "Start" button on the control panel. The brewing process will begin. If using whole beans, the grinder will operate first, followed by brewing.
6. **Anti-Drip Function:** The anti-drip feature allows you to temporarily remove the carafe during brewing to pour a cup. The flow of coffee will pause. Return the carafe within 20 seconds to prevent overflow.
7. **Serving:** Once brewing is complete, the coffee maker will keep the coffee warm on the warming plate. Serve the coffee carefully.
8. **Power Off:** Press the "Power" button to turn off the appliance when not in use.



Image: Visual guide for the brewing process, from adding ingredients to selecting the mode and obtaining fresh coffee.



Image: Detailed view of the touch control panel for brew selection.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

1. Daily Cleaning:

- After each use, unplug the appliance and allow it to cool completely.
- Remove the carafe, reusable filter, and filter basket. Wash them in warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the removable grinder with the provided cleaning brush to remove any residual coffee grounds.

2. Descaling: Mineral deposits from water can build up over time, affecting performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

- Fill the water tank with a mixture of white vinegar and water (1:2 ratio).
- Place the empty carafe on the warming plate.
- Run a full brewing cycle.
- After the cycle, let the solution sit in the carafe for 15 minutes, then discard.
- Run 2-3 cycles with fresh, clean water to rinse thoroughly and remove any vinegar odor.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; appliance not plugged in; power button not pressed.	Fill water tank; ensure plug is secure; press power button.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; incorrect strength setting.	Adjust coffee amount or water level; select desired coffee strength on control panel.
Coffee overflows from filter basket.	Too much coffee grounds; filter clogged; carafe not properly placed.	Reduce coffee amount; clean filter; ensure carafe is fully seated.
Grinder not working.	No beans; grinder clogged; 'Powder' mode selected.	Add beans; clean grinder; ensure 'Beans' mode is selected.
Water leaks from appliance.	Water tank not properly seated; overfilled water tank.	Ensure water tank is securely in place; do not exceed MAX fill line.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model Name:** Brew Blend Coffee Maker
- **Model Number:** 350018
- **Brand:** Morphy Richards
- **Power:** 600 Watts
- **Voltage:** 230 Volts
- **Capacity:** 0.6 Liters (up to 6 cups)
- **Product Dimensions (D x W x H):** 27D x 16.2W x 31H Centimeters
- **Item Weight:** 2980 Grams
- **Material:** Plastic (Exterior), Borosilicate Glass (Carafe)
- **Coffee Input Type:** Beans and Powder
- **Filter Type:** Reusable
- **Special Features:** Anti-drip function, Coffee strength selector, Easy start system, Removable water tank, Removable grinder, Digital display with touch control.
- **Included Components:** Coffee maker, filter, cleaning brush, spoon, carafe, water tank, warranty card, user manual, water tank lid.
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

Your Morphy Richards Brew Blend Coffee Maker comes with **a2-year warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt as proof of purchase for warranty claims. For any product-related queries, service requests, or warranty support, please contact:

- **Telephone:** 022-41280000

- **Email:** consumercare@morphyrichardsindia.com

Please have your model number (350018) and purchase details ready when contacting support.