

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN Replacement Remote Control User Manual for Amazon 4-Series 4K UHD Smart TVs

PERFASCIN AMZ-4TV-PNDH-VOICE

PERFASCIN Replacement Remote Control User Manual

Compatible with Amazon 4-Series 4K UHD Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the PERFASCIN replacement remote control, designed for seamless compatibility with various Amazon 4-Series 4K UHD Smart TV models. This remote offers a functional replacement for your original device, ensuring continued access to your television's features, including voice control capabilities.

Compatible TV Models include: 4K50N400A, 4K43N400A, 4K55N400A, QL43F601A, QL50F601A, QL55F601A, QL65F601A, QL75F601A, 4K43M600A, 4K50M600A, 4K55M600A, 4K65M600A, 4K75M600A, HD32N200A, HD40N200A.





Image 1.1: Front view of the PERFASCIN replacement remote control, showcasing its button layout.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x PERFASCIN Replacement Remote Control

Note: Batteries are not included and must be purchased separately. Two AAA alkaline batteries are required.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.

3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image 3.1: Back of the remote control with the battery compartment open, illustrating correct battery placement.





Image 3.2: Back of the remote control with the battery compartment securely closed.

3.2 Initial Pairing (for Voice Functionality)

This remote control is an infrared (IR) replacement and will function for basic controls immediately after battery installation. However, to utilize the voice control feature, pairing with your Amazon 4-Series 4K UHD Smart TV is required.

1. Ensure your TV is powered on and functioning.
2. Point the remote control towards your TV.
3. Press and hold the **Home** button (usually a house icon) for approximately 10-15 seconds.
4. Your TV screen should display a message indicating that the remote is pairing or has successfully paired.
5. If pairing is unsuccessful, try moving closer to the TV and repeat the process. Refer to your TV's user manual for specific remote pairing instructions if issues persist.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

Once batteries are installed, the remote will operate basic TV functions via infrared (IR) signals. Point the remote directly at your TV's IR receiver for optimal performance.

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Circular):** Use the directional buttons to navigate menus and select items. The center button acts as 'OK' or 'Select'.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.

- **Home Button:** Returns to the TV's home screen.
- **Back Button:** Returns to the previous screen or menu.
- **Menu Button (Three Horizontal Lines):** Accesses context-sensitive menus.
- **Settings Button (Gear Icon):** Opens the TV's settings menu.
- **App Shortcut Buttons (e.g., Prime Video, Netflix, Disney, Hulu):** Provide direct access to these streaming applications.

4.2 Voice Control

After successful pairing, the voice control feature allows you to issue commands to your TV using your voice.

1. Press and hold the **Microphone Button** (blue button with microphone icon) on the remote control.
2. Speak clearly into the microphone located at the top of the remote.
3. Release the Microphone Button when you have finished speaking.





Image 4.1: The remote control with the microphone button highlighted, indicating its location for voice commands.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's responsiveness decreases or if the voice control feature becomes unreliable. Always use new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure new alkaline batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's IR receiver.
 - Try re-pairing the remote if the issue persists (refer to Section 3.2).
- **Voice control not working:**
 - Confirm the remote is successfully paired with your TV (refer to Section 3.2).
 - Ensure you are pressing and holding the Microphone Button while speaking.
 - Speak clearly and directly into the microphone.
 - Check battery levels; low batteries can affect voice functionality.
- **Specific buttons not working:**
 - Some replacement remotes may not support all advanced functions of the original remote.
 - Ensure the remote is pointed directly at the TV.

If troubleshooting steps do not resolve the issue, please contact customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	AMZ-4TV-PNDH-VOICE
Product Dimensions	6 x 3 x 0.5 inches
Item Weight	2 ounces
Color	Black
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Compatible Devices	Amazon 4-Series 4K UHD Smart TVs

8. WARRANTY AND SUPPORT

This PERFASCIN product has been tested to ensure optimal performance. For any questions, concerns, or technical support, please refer to the seller's contact information provided at the point of purchase. Please note that specific warranty details may vary and are typically provided by the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPXY2CFV>

More documents and user manuals: <https://manuals.plus/>