

[Manuals.plus](#) /

› [ALLIMITY](#) /

› Allimity NH427UD Replacement Remote Control User Manual for Sanyo TV

ALLIMITY NH427UD

Allimity NH427UD Replacement Remote Control User Manual

For Sanyo TV Models: FW65C78F, FW55C78F, FW50C87F, FW55C46F, FW55C46F-B, FW50C78F, FW55C87F, FW43C46F-B, FW55C46FB, FW50C36FB, FW43C46FB, FW50C36F, FW50C36F-B, FW55C46B, FW43C46B, FW43C46F

INTRODUCTION

This manual provides instructions for the Allimity NH427UD replacement remote control. This remote is designed to function with various Sanyo TV models without requiring any programming. Simply insert batteries to begin operation.

Package Contents:

- 1 x Allimity NH427UD Replacement Remote Control

Compatible Sanyo TV Models:

- FW65C78F, FW55C78F, FW50C87F, FW55C46F, FW55C46F-B, FW50C78F
- FW55C87F, FW43C46F-B, FW55C46FB, FW50C36FB, FW43C46FB
- FW50C36F, FW50C36F-B, FW55C46B, FW43C46B, FW43C46F
- Also replaces NH415UP and NH414UD models.

SETUP

To prepare your remote control for use, follow these steps for battery installation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use with your compatible Sanyo TV. No additional programming is required.





NOTICE

1. Do not use old battery with new ones.
2. Do not use batteries other than the type specified.
3. Be sure the batteries are inserted properly.



Figure 1: Rear view of the remote control with the battery cover open, illustrating the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

This section describes the primary functions of the buttons on your Allimity NH427UD remote control.



Figure 2: Front view of the remote control, displaying the layout of all functional buttons.

Basic Functions

- **POWER** (●): Turns the TV on or off.
- **SOURCE**: Selects the input source (e.g., HDMI 1, AV).
- **Number Pad (0-9)**: Directly enters channel numbers.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (+/-)**: Changes the TV channel up or down.
- **MUTE** (): Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates menus and confirms selections.

- **BACK:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **INFO:** Displays information about the current program or input.
- **OPTIONS:** Accesses additional options for the current function.

Special Function Buttons

- **NETFLIX:** Direct access to the Netflix application.
- **VUDU:** Direct access to the Vudu application.
- **YouTube:** Direct access to the YouTube application.
- **Color Buttons (RED, GREEN, YELLOW, BLUE):** Used for specific functions within certain TV menus or applications, as indicated on screen.
- **PIX SHAPE:** Adjusts picture aspect ratio or display mode.
- **CC (Closed Caption):** Toggles closed captions on or off.



Figure 3: Angled view of the remote control, showing the ergonomic shape and button layout.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Care:**
 - Replace batteries when the remote's response becomes sluggish or stops working.
 - Always replace both batteries at the same time with new AAA alkaline batteries.
 - Do not mix old and new batteries, or different types of batteries.
 - Remove batteries if the remote control will not be used for an extended period to prevent leakage.
 - Dispose of used batteries according to local regulations.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions.

Problem	Solution
Remote control is not working.	• Ensure batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new AAA alkaline batteries. • Check for any obstructions between the remote control and the TV's infrared sensor. • Ensure the TV is powered on.
Buttons are unresponsive or sticky.	• Clean the remote control surface, especially around the buttons, with a soft, dry cloth. • Ensure no liquid has spilled onto the remote.
Remote works intermittently.	• Replace batteries with new ones. • Ensure you are within the effective range and line of sight of the TV's IR sensor.

SPECIFICATIONS

Feature	Detail
Model Number	NH427UD (also replaces NH415UP, NH414UD)
Brand	ALLIMITY
Compatible Devices	Sanyo Televisions (specific models listed in Introduction)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	Approximately 5 x 1 x 0.5 inches (12.7 x 2.54 x 1.27 cm)

Feature	Detail
Item Weight	Approximately 2.72 ounces (77 grams)
Color	Black
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. As this is a replacement remote control, specific warranty terms may vary.

For further assistance, you may also visit the [ALLIMITY brand store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question