

[manuals.plus](#) /

- › [Fujitsu](#) /
- › [Fujitsu FMV LIFEBOOK U9313/MX Laptop User Manual](#)

Fujitsu FMV LIFEBOOK U9313/MX FMVU600EHP

Fujitsu FMV LIFEBOOK U9313/MX Laptop User Manual

Model: FMV LIFEBOOK U9313/MX FMVU600EHP

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Fujitsu FMV LIFEBOOK U9313/MX laptop. Please read this manual thoroughly before using your device and keep it for future reference.

This product is a renewed item, which means it has undergone a rigorous inspection, testing, and cleaning process by specialized staff to ensure it functions like new. It is not a used product in the traditional sense, and you can expect the same performance as a brand-new device.

2023年～最新モデル

【整備済み品】 パソコン

日本メーカー
富士通製

安心保証^{*}
180日

数量限定

※当社独自の保証となります。

Image 1.1: Fujitsu FMV LIFEBOOK U9313/MX laptop, highlighting its renewed status and 180-day warranty.

2. PRODUCT OVERVIEW

The Fujitsu FMV LIFEBOOK U9313/MX is a lightweight and powerful 13.3-inch laptop designed for productivity. It features a sleek black chassis and a full HD display. Key components include the display, keyboard, touchpad, various ports for connectivity, and an integrated webcam.

2.1. Renewed Product Status

As a renewed product, this laptop has undergone a thorough process including inspection, testing, and cleaning to meet quality standards. This ensures that the device is fully functional and performs as expected.

【整備済み品】について

Amazonが定める基準をクリアした
検査、テスト、クリーニング、
整備をされている商品です。

Image 2.1: Explanation of the renewed product process, including inspection, testing, and cleaning.

2.2. Possible Conditions of Renewed Products

While renewed products are fully functional, they may exhibit minor cosmetic imperfections or have specific battery conditions. Examples include:

- Minor, non-obvious scratches that are not visible from 30 centimeters away.
- Battery capacity retaining at least 80% of its original charge.
- Minor damage or seal marks on the packaging.
- Model changes or previous generation models.

どんな状態があるの?

例えば下記のような状態があります。

- 非常に良い商品ならば30センチ離して持った際、目立った傷が見えない。
- バッテリーの、元の電池残量が80%残っています。
- 梱包箱に傷やシール痕が出来てしまった。
- モデルチェンジし型落ちとなった。



シール痕①

シール痕②

外装箱の破れ

目立たない擦り痕

Image 2.2: Visual examples of acceptable minor conditions for renewed products.

3. SETUP

3.1. Initial Power-On

- Connect the AC Adapter:** Plug the AC adapter into the laptop's power port and then into a wall outlet.
- Power On:** Open the laptop lid and press the power button, usually located on the top right of the keyboard or on the side.
- Initial Windows Setup:** Follow the on-screen prompts to complete the Windows 11 Pro setup. This includes selecting your region, language, accepting terms, and creating a user account.

3.2. Network Connection

To connect to the internet:

- Click the Wi-Fi icon in the taskbar (bottom right of the screen).

2. Select your desired Wi-Fi network from the list.
3. Enter the network security key (password) if prompted.
4. Click 'Connect'.

4. OPERATING INSTRUCTIONS

4.1. Basic Functions

- **Power On/Off:** Press the power button to turn on. To turn off, click 'Start' > 'Power' > 'Shut down'.
- **Sleep Mode:** Close the lid or click 'Start' > 'Power' > 'Sleep'.
- **Restart:** Click 'Start' > 'Power' > 'Restart'.

4.2. Keyboard and Touchpad

- **Keyboard:** Use the integrated keyboard for typing. Function keys (F1-F12) often have secondary functions (e.g., volume, brightness) accessible by pressing the 'Fn' key simultaneously.
- **Touchpad:** Use the touchpad for cursor control. Tap to click, two-finger tap for right-click, and two-finger scroll for scrolling.

4.3. Connecting Peripherals

Your laptop includes various ports for connecting external devices:

- **USB Ports:** For mice, keyboards, external drives, etc.
- **HDMI Port:** For connecting to external monitors or TVs.
- **Audio Jack:** For headphones or external speakers.

4.4. WPS Office2

Your laptop comes with WPS Office2 pre-installed. This suite provides word processing, spreadsheet, and presentation tools. Launch applications from the Start Menu or desktop shortcuts.

5. MAINTENANCE

5.1. Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Chassis and Keyboard:** Use a soft cloth. For dust, use compressed air.

5.2. Battery Care

- **Charging:** Charge the battery fully before first use. Avoid constantly draining the battery to 0% or keeping it at 100% for extended periods.
- **Storage:** If storing the laptop for a long time, ensure the battery is charged to about 50-60%.

5.3. Software Updates

Regularly check for and install Windows updates to ensure optimal performance and security. Go to 'Settings' > 'Windows Update'.

6. TROUBLESHOOTING

This section addresses common issues you might encounter.

6.1. Laptop Does Not Turn On

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- If the battery is completely drained, it may take a few minutes of charging before the laptop can power on.

6.2. No Wi-Fi Connection

- Verify that Wi-Fi is enabled in Windows settings.
- Restart your router and modem.
- Ensure you are entering the correct Wi-Fi password.
- Try connecting to a different Wi-Fi network if available.

6.3. Screen Issues (No Display, Flickering)

- Connect an external monitor via HDMI to check if the issue is with the laptop's display or the graphics output.
- Adjust screen brightness using the function keys.
- Restart the laptop.

6.4. General Performance Issues

- Close unnecessary applications running in the background.
- Ensure Windows and drivers are up to date.
- Run a disk cleanup and defragmentation (for HDD, not necessary for SSD).
- Consider performing a system restore if the issue started recently.

7. SPECIFICATIONS

Feature	Specification
Model Name	LIFEBOOK U9313/MX
Product Model Number	FMVU600EHP
Operating System	Windows 11 Pro
CPU	Intel Core i5-1235U (2.5 GHz)
RAM	16 GB DDR3 SDRAM
Storage	256 GB SSD
Display Size	13.3 inches
Resolution	1920x1080 pixels
Graphics Coprocessor	Intel

Feature	Specification
Color	Black
Connectivity	802.11 ABGN (Wi-Fi)
Battery	1 Lithium Ion battery (45 Wh)
Item Weight	2 Kilograms
Package Dimensions	46 x 26.6 x 7.4 cm

8. WARRANTY AND SUPPORT

8.1. Warranty Information

This product is covered by a **180-day return guarantee** based on Amazon Renewed terms. This warranty covers any malfunctions or defects that occur during normal use within the warranty period. For any issues, please follow the return procedures as outlined by Amazon Renewed.

180日保証について

ご購入いただく商品は
Amazon整備済み品の保証対象です。
最低180日の出品者保証があります。
保証期間内の不具合については、
ご返品手続きにて対応させて
いただきます。

Image 8.1: Information regarding the 180-day warranty for renewed products.

8.2. Customer Support

For further assistance, technical support, or warranty claims, please contact the seller directly through your Amazon order history or refer to the Amazon Renewed support page. Due to the nature of renewed products, specific individual unit conditions are not provided beyond the general renewed product description.

入荷予定や 状態の詳細を知りたい

製品の特性上ラインナップや価格は常に変動しております。在庫がなくなってしまった場合は、再入荷は未定となっております。

また、個別での管理をしていない為、一台一台の状態のご案内は出来かねます。まとめて「整備済み品」でのご案内とさせていただきます。

Image 8.2: Note on stock availability and detailed condition inquiries for renewed products.