

[Manuals.plus](#) /
› [iPhanmis](#) /
› iPhanmis XS15 3G Mini Smartphone User Manual

iPhanmis XS15

XS15 3G Mini Smartphone User Manual

Model: XS15 | Brand: iPhanmis

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your iPhanmis XS15 3G Mini Smartphone. Please read this manual carefully before using your device to ensure proper functionality and to maximize your user experience.



Figure 1.1: Front view of the XS15 Mini Smartphone displaying various application icons.

2. WHAT'S IN THE BOX

Upon unboxing your iPhanmis XS15 Mini Smartphone, verify that all components listed below are present:

- 1x XS15 Mini 3G Smartphone
- 1x Charging Cable
- 1x User Manual (this document)

3. SETUP

3.1. Inserting SIM Cards and TF Card

The XS15 Mini Smartphone supports dual SIM cards and one TF (microSD) card for expandable storage up to 128GB (TF card not included).

1. Locate the SIM/TF card tray on the side of the device.
2. Use the provided SIM ejector tool (if included, otherwise a small paperclip) to open the tray.
3. Carefully place your SIM cards and TF card into their respective slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the device until it clicks into place.



Figure 3.1: Illustration of dual SIM card support and available color variants.

3.2. Initial Power On and Charging

Before first use, it is recommended to fully charge the device.

1. Connect the charging cable to the phone's charging port (Type-C).
2. Connect the other end of the cable to a compatible USB power adapter (not included) and plug it into a power outlet.

3. The battery indicator on the screen will show charging progress.
4. To power on, press and hold the power button located on the side of the device until the screen illuminates.
5. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.



Figure 3.2: The XS15 Mini Smartphone connected to a charger, illustrating its internal components and battery capacity.

4. OPERATING INSTRUCTIONS

4.1. Basic Navigation

- **Touchscreen:** Navigate the device using touch gestures such as tap, swipe, pinch-to-zoom.
- **Home Screen:** Access your installed applications and widgets.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

4.2. Calls and Messaging

- **Making Calls:** Tap the "Phone" icon, enter the number, and press the call button.
- **Sending SMS/MMS:** Tap the "Messaging" icon, compose your message, and send.
- **Network Compatibility Note:** This is a 3G smartphone. Some carriers have phased out 2G and 3G networks. Ensure your SIM card supports 2G GSM (850/900/1800/1900) or 3G WCDMA (B1/B2/B5/B8) frequencies for cellular service.

4.3. Camera Usage

The XS15 Mini Smartphone features a 0.3 MP front camera and a 2.0 MP rear camera.

1. Open the "Camera" application.
2. Switch between front and rear cameras as needed.
3. Tap the shutter button to capture photos.
4. *Note:* Only one rear camera is functional; other lenses are decorative.

Illuminate you and me, beauty in every moment

High definition camera presenting highlights

Every beat touches the heart, and with each press of the shutter, delicate colors and moving moments are presented. Amidst the distant light, the night reaches a time of confusion, restoring a pure perspective.



Camera

The freeze frame is beautiful, the color style is unique, and it forms a unique shot.



It's more natural to take photos if you want to

Born on camera, you shine brighter

How to take photos, how to be beautiful, so that your beauty can be clearly presented anytime and anywhere, no matter how far or near, always pursuing your charming figure and face.



Figure 4.1: Details of the smartphone's camera capabilities and sample images.

4.4. Connectivity

- **Wi-Fi:** Connect to wireless networks via Settings > Network & Internet > Wi-Fi.
- **Bluetooth:** Pair with Bluetooth devices via Settings > Connected devices > Bluetooth.
- **GPS:** The device supports GPS for location services.
- **Hotspot Sharing:** Share your phone's internet connection with other devices via Settings > Network & Internet > Hotspot & tethering.

5. FEATURES OVERVIEW

- **Compact Design:** Measuring 88.40*45.20*11mm, the XS15 is designed for portability, resembling a bank card in size.
- **Operating System:** Runs on Android 8.1, supporting various mainstream applications.
- **Memory:** Equipped with 2GB RAM and 16GB ROM, expandable up to 128GB with a TF card.

- **Battery:** Features a 1000mAh battery for daily use.
- **Dual SIM:** Supports dual SIM dual standby functionality.
- **Additional Functions:** Includes alarm clock, calendar, memorandum, calculator, facial recognition, GPRS, EDGE, IP Call, handsfree, call history, speedy dial, WAP, MMS, SMS, memo, fixed time on/off, key lock, and U disk mode.



Figure 5.1: The compact size of the XS15 Mini Smartphone compared to a credit card.

Exciting and outstanding

Outstanding appearance that I can't put down

The mini fashionable body design, simple and exquisite appearance, pure Android system, and the combination of aesthetics and technology make people satisfied.



Wanxiang Sky Light and Shadow Fall in Love
Beauty and strength



Hard core strength can be easily released

Stylish and minimalist with a small figure

Mini body, small size and space saving, lightweight for travel, easy to carry.



Figure 5.2: Demonstrating the portability and small form factor of the XS15 Mini Smartphone.

6. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not fully discharge the battery regularly.
- **Software Updates:** Keep your device's software updated to ensure optimal performance and security. Check for updates in Settings > System > System update.
- **Storage Management:** Regularly clear unnecessary files and applications to maintain sufficient storage space and device speed.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No cellular service	SIM card not inserted correctly; Carrier does not support 3G network; Out of network coverage.	Reinsert SIM card; Verify your carrier supports 2G GSM (850/900/1800/1900) or 3G WCDMA (B1/B2/B5/B8); Move to an area with better signal.
Device freezes or is unresponsive	Too many applications running; Low memory; Software glitch.	Close background applications; Restart the device; Perform a factory reset (<i>Note: This will erase all data.</i>)
Battery drains quickly	High screen brightness; Background apps; Weak signal.	Reduce screen brightness; Close unused apps; Disable Wi-Fi/Bluetooth when not in use.
Cannot connect to Wi-Fi	Incorrect password; Router issue; Wi-Fi disabled on phone.	Verify Wi-Fi password; Restart router; Ensure Wi-Fi is enabled in settings.

8. SPECIFICATIONS

Feature	Detail
Model Name	XS15
Brand	iPhanmis
Operating System	Android 8.1
Display Size	3.0 Inches
Resolution	1280 x 720
RAM	2 GB
Internal Storage (ROM)	16 GB
Expandable Storage	Supports TF card up to 128 GB (not included)
CPU Model	MediaTek Helio Quad Core
CPU Speed	1.3 Hz
Rear Camera	2.0 Megapixels (functional)
Front Camera	0.3 Megapixels (with Beautifying)
Battery Capacity	1000 mAh
Phone Talk Time	3 Hours
Connectivity	Wi-Fi, Bluetooth, Cellular (3G), GPS
Product Dimensions	3.48 x 1.78 x 0.43 inches (88.40 x 45.20 x 11 mm)
Item Weight	0.32 ounces
Audio Jack	No headphone jack
Form Factor	Bar

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.
Additional protection plans may be available for purchase. Please check with your retailer for details.

© 2024 iPhanmis. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPY143JT>

More documents and user manuals: <https://manuals.plus/>