

[Manuals.plus](#) /

> [Upstreman](#) /

> Upstreman 1.7 Cu.ft Mini Fridge with Freezer User Manual

Upstreman FR17-Red

Upstreman 1.7 Cu.ft Mini Fridge with Freezer User Manual

Model: FR17-Red | Brand: Upstreman

PRODUCT OVERVIEW

The Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Model FR17-Red) is a compact and energy-efficient refrigeration solution designed for small spaces such as dorm rooms, offices, bedrooms, and kitchens. It features an adjustable thermostat, a low-noise operation, and a compact freezer compartment, making it ideal for keeping food fresh and beverages chilled.

KEY FEATURES

- **Compact Design:** With dimensions of 18.9" (W) x 17.7" (D) x 19.3" (H), this mini fridge fits easily on counters or under desks, providing ample storage without occupying much space.
- **Adjustable Temperatures:** Offers 5 variable temperature settings ranging from 33.8°F to 46.4°F, allowing precise control for various cooling needs. Includes a compact freezer for ice cubes and frozen items.
- **Low Noise Operation:** Operates at a quiet 38 dB, ensuring minimal disturbance, making it suitable for quiet environments like bedrooms and offices.
- **Energy-Efficient:** Designed for low energy consumption, costing as little as 0.5 kWh per day. Utilizes R600a refrigerant, which has low ozone depletion and global warming potential.
- **Reversible Door:** The door hinges are reversible, allowing you to adjust the door swing direction to best suit your space and layout.
- **Adjustable Leveling Legs:** Equipped with adjustable legs to ensure stability and proper leveling on uneven surfaces.



Figure 1: Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Red model).

SETUP

1. Unpacking

Carefully remove the refrigerator from its packaging. Inspect for any shipping damage. Retain packaging materials for future transport or return if necessary.

2. Placement

Choose a location with a firm, level floor that is strong enough to support the refrigerator when fully loaded. Ensure there is adequate ventilation around the unit (at least 4 inches of space from walls and other appliances) to allow for proper heat dissipation and efficient operation. Avoid direct sunlight or heat sources.

3. Leveling

The refrigerator is equipped with adjustable leveling legs. Turn the legs clockwise to raise the unit or counter-clockwise to lower it. Ensure the refrigerator is level to prevent vibrations and ensure proper door sealing.



Figure 2: Adjustable leveling leg for stable placement.

OPERATING INSTRUCTIONS

1. Temperature Control

The refrigerator features an adjustable thermostat with 5 settings, ranging from 0 (off) to 5 (coldest). The recommended operating temperature range is 33.8°F to 46.4°F. Adjust the dial to your desired cooling level. Higher numbers indicate colder temperatures.

5 TEMPERATURE SETTINGS



Drink



Fruit



Vegetable



Ice Cube

Figure 3: Temperature control dial with 5 settings.

2. Reversible Door

The door of the Upstreaman mini fridge can be reversed to open from either the left or the right side, offering flexibility for placement. This process involves carefully detaching the hinges and reattaching them on the opposite side. Refer to the detailed instructions in the included user manual for step-by-step guidance on reversing the door.



Figure 4: Illustration of the reversible door feature.

3. Official Product Video

Your browser does not support the video tag.

Video 1: Official Upstreman Mini Fridge overview, demonstrating features and usage scenarios.

MAINTENANCE

1. Cleaning

Regular cleaning of your refrigerator is essential for hygiene and efficiency. Unplug the unit before cleaning. Use a soft cloth with a mild detergent and warm water to clean the interior and exterior surfaces. Avoid abrasive cleaners or sharp objects that could damage the surfaces. Ensure all parts are dry before plugging the unit back in.

2. Defrosting

This mini fridge features manual defrost. Frost buildup on the freezer compartment can reduce cooling efficiency. When the frost layer reaches about 1/4 inch (6 mm) thick, it's time to defrost. Unplug the refrigerator, remove all food items, and leave the door open to allow the frost to melt naturally. You can place a towel at the bottom to absorb water. Do not use sharp objects to remove ice, as this can damage the cooling coils.

TROUBLESHOOTING

If you encounter issues with your Upstreman mini fridge, refer to the table below for common problems and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to "0".	Ensure power cord is securely plugged in; check circuit breaker/fuse; turn temperature control to a higher setting.
Temperature is not cold enough.	Door opened too frequently; warm food placed inside; poor ventilation; temperature control set too low.	Minimize door openings; allow warm food to cool before placing in fridge; ensure adequate space around the unit; adjust temperature control to a colder setting.
Excessive frost buildup in freezer.	Door not sealed properly; high humidity; frequent door openings.	Check door gasket for proper seal; ensure door is closed completely; defrost the unit manually.
Refrigerator is noisy.	Unit not level; loose parts; normal compressor operation.	Adjust leveling legs; check for loose items inside; some noise from compressor is normal.

SPECIFICATIONS

Feature	Detail
Brand	Upstreman
Model Number	FR17-Red
Capacity	1.7 Cubic Feet (1.5 Cu.Ft Refrigerator, 0.2 Cu.Ft Freezer)
Product Dimensions (W x D x H)	18.9 x 17.7 x 19.3 inches
Item Weight	29.8 Pounds
Color	Red
Installation Type	Built-In (Compact Form Factor)
Defrost System	Manual

Feature	Detail
Voltage	115 Volts (AC)
Annual Energy Consumption	204 Kilowatt Hours
Door Hinges	Reversible
Included Components	Refrigerator

WARRANTY AND SUPPORT

Upstreman offers a one-year quality and service warranty for this product. For any inquiries, technical assistance, or warranty claims, please contact Upstreman customer support through their official channels. Please have your model number (FR17-Red) and purchase information ready when contacting support.

For more information, visit the official Upstreman store:[Upstreman Store on Amazon](#)