

[Manuals.plus](#) /

› [OOWOKS](#) /

› OOWOKS Remote Control for Wall and Ceiling Lamps - Instruction Manual

OOWOKS 65680371

OOWOKS Remote Control for Wall and Ceiling Lamps - Instruction Manual

Model: 65680371

1. INTRODUCTION

Thank you for choosing the OOWOKS Remote Control. This manual provides essential information for the safe and efficient operation of your remote control, designed to manage compatible OOWOKS wall and ceiling lamps. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Keep the remote control away from water and high humidity.
- Avoid dropping or subjecting the remote to strong impacts.
- Do not attempt to disassemble or repair the remote control yourself. Contact qualified personnel for service.
- Dispose of used batteries responsibly according to local regulations.
- Ensure correct battery polarity when inserting new batteries.

3. PRODUCT OVERVIEW

The OOWOKS Remote Control (Model 65680371) is an infrared device designed for convenient control of your OOWOKS lighting fixtures. It features dedicated buttons for power, brightness, color temperature, and various lighting modes.



Figure 1: Front view of the OOWOKS Remote Control. This image displays the white remote control with various buttons for light adjustment and power.



Figure 2: OOWOKS Remote Control alongside its retail packaging. The packaging shows a diagram of the remote and some text in

4. SETUP

4.1. Battery Installation

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover open in the direction indicated by the arrow.
- 3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as marked inside the compartment.
- 4. Close the battery compartment cover until it clicks securely into place.

4.2. Pairing with Your Lamp

To ensure proper functionality, the remote control must be paired with your OOWOKS wall or ceiling lamp.

- 1. Ensure your lamp is powered off at the main switch.
- 2. Turn on the lamp at the main switch.
- 3. Within 5 seconds of turning on the lamp, press and hold the**SETUP** button on the remote control.
- 4. Hold the button until the lamp flashes, indicating successful pairing.
- 5. If pairing fails, repeat the steps. Ensure the remote is pointed directly at the lamp during the pairing process.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control:

Button Icon/Label	Function	Description
ON	Power On	Turns the connected lamp ON.
OFF	Power Off	Turns the connected lamp OFF.
(Light Bulb)	Full Brightness / Day Mode	Activates maximum brightness, typically with a neutral or cool white light.
(Moon)	Night Mode	Activates a low-brightness, warm light setting suitable for nighttime.
- (Left D-pad)	Decrease Brightness	Decreases the light intensity incrementally.
+ (Right D-pad)	Increase Brightness	Increases the light intensity incrementally.
↑ (Up D-pad)	Scene/Mode Up	Cycles through available lighting scenes or modes in an upward direction.
↓ (Down D-pad)	Scene/Mode Down	Cycles through available lighting scenes or modes in a downward direction.
☀ (Sun, bottom left)	Warmer Color Temperature	Adjusts the light to a warmer (more yellowish) white.
K (middle button)	Color Temperature Cycle	Cycles through preset color temperature options (e.g., warm white, neutral white, cool white).

Button Icon/Label	Function	Description
☀ (Sun, bottom right)	Cooler Color Temperature	Adjusts the light to a cooler (more blueish) white.
◐ (Half-filled Circle)	Dynamic Mode Toggle	Switches between dynamic lighting effects or special modes.
SETUP (center button)	Pairing Function	Used to pair the remote control with a compatible OOWOKS lamp (see Section 4.2).

6. MAINTENANCE

6.1. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the surface or internal components.

6.2. Battery Replacement

If the remote control's range decreases or it becomes unresponsive, the batteries may need replacement. Follow the battery installation steps in Section 4.1. Always replace both batteries at the same time with new ones of the same type.

6.3. Storage

When not in use for extended periods, store the remote control in a cool, dry place. If storing for several months, it is advisable to remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries, ensuring correct polarity.
Remote not controlling the lamp.	Remote is not paired with the lamp.	Perform the pairing procedure as described in Section 4.2.
Reduced operating range.	Low battery power. Obstruction between remote and lamp.	Replace batteries. Ensure a clear line of sight to the lamp's receiver.
Lamp flashes unexpectedly during pairing.	Interference or incorrect timing.	Ensure no other infrared devices are in use. Repeat pairing, paying close attention to the 5-second window after powering on the lamp.

8. SPECIFICATIONS

- **Brand:** OOWOKS
- **Model:** 65680371
- **Maximum Operating Range:** 10.0 meters

- **Connector Type:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)

9. WARRANTY AND SUPPORT

OOWOKS products are manufactured to high-quality standards. For warranty information, technical support, or any questions regarding your remote control, please refer to the warranty card included with your product or visit the official OOWOKS website.

You can also contact OOWOKS customer service through the retailer where the product was purchased.

© 2024 OOWOKS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPY3HZ9W>

More documents and user manuals: <https://manuals.plus/>