

Manuals.plus /

› Kenwood /

› Kenwood CMM10.000BM Filter Coffee Machine User Manual

## Kenwood CMM10.000BM

# Kenwood CMM10.000BM Filter Coffee Machine

User Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Kenwood CMM10.000BM Filter Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.



**Image:** Kenwood CMM10.000BM Filter Coffee Machine. This image displays the coffee machine in a metallic and black finish, accompanied by several cups of coffee, illustrating its use. The machine features a water reservoir, a filter basket, a glass carafe with a handle, and a warming plate. The Kenwood logo is visible on the front panel.

1. Water Reservoir with Lid
2. Water Level Indicator
3. Filter Basket (removable and washable)
4. Permanent Filter (if included, otherwise use paper filters)
5. Glass Carafe with Handle
6. Warming Plate
7. On/Off Switch with Indicator Light
8. Drip-Stop System

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Initial Cleaning:** Before first use, wash the carafe, filter basket, and permanent filter (if applicable) in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee machine with a damp cloth.
3. **First Brew Cycle (Cleaning):** Fill the water reservoir to the maximum level with cold water. Do not add coffee. Place the empty filter basket and carafe in position. Run a full brewing cycle to clean the internal components. Discard the water. Repeat this process 2-3 times.
4. **Placement:** Place the coffee machine on a stable, flat, heat-resistant surface, away from the edge of the counter and out of reach of children. Ensure adequate ventilation around the appliance.

## OPERATING INSTRUCTIONS

---

1. **Fill Water Reservoir:** Open the lid of the water reservoir and fill it with fresh, cold water to the desired level, using the water level indicator as a guide. Do not exceed the "MAX" mark.
2. **Add Coffee Grounds:** Place a paper filter (size 1x4 or similar, depending on basket size) into the filter basket, or use the permanent filter if provided. Add the desired amount of ground coffee. A general guideline is one tablespoon of coffee per cup (150ml).
3. **Position Carafe:** Ensure the glass carafe is correctly placed on the warming plate. The drip-stop system will prevent coffee from dripping when the carafe is removed during brewing.
4. **Start Brewing:** Plug the power cord into a suitable electrical outlet. Press the On/Off switch. The indicator light will illuminate, and the brewing process will begin.
5. **Serving:** Once the brewing cycle is complete, the coffee machine will automatically switch to the warming function. You can remove the carafe to serve. The warming plate will keep the coffee hot for a period.
6. **Switch Off:** After serving or when the warming period is over, press the On/Off switch to turn off the appliance and unplug it from the power outlet.

## MAINTENANCE AND CLEANING

---

- **Always unplug** the coffee machine and allow it to cool completely before cleaning.
- **Carafe and Filter Basket:** Wash the glass carafe, lid, and filter basket in warm, soapy water after each use. Rinse thoroughly and dry. These parts may also be top-rack dishwasher safe (check product specific instructions if available, otherwise hand wash).
- **Exterior:** Wipe the exterior surfaces of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- **Descaling:** Mineral deposits from water can build up in your coffee machine over time, affecting performance. Descale your machine regularly (e.g., every 2-3 months, or more often in hard water areas).

To descale: Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio) or a commercial descaling solution according to its instructions. Run a full brewing cycle. After the cycle, discard the solution and run 2-3 cycles with fresh water to rinse thoroughly.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Coffee does not brew.	Machine not plugged in; On/Off switch not pressed; No water in reservoir.	Ensure power cord is securely plugged in; Press the On/Off switch; Fill water reservoir with water.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; Coffee grind too coarse/fine.	Adjust the amount of coffee grounds; Use a medium grind suitable for filter coffee machines.
Water overflows from filter basket.	Too much coffee grounds; Filter basket clogged; Carafe not properly placed.	Reduce coffee amount; Clean filter basket and permanent filter; Ensure carafe is correctly positioned on the warming plate.
Coffee machine is noisy.	Mineral buildup (needs descaling).	Perform a descaling cycle as described in the Maintenance section.

## SPECIFICATIONS

---

- **Model Number:** CMM10.000BM
- **Brand:** Kenwood
- **Power/Wattage:** 900 watts
- **Capacity:** 12 cups
- **Product Dimensions:** 25 x 25 x 35 cm (approx. 9.8 x 9.8 x 13.8 inches)
- **Weight:** 2 Kilograms (approx. 4.4 lbs)
- **Special Features:** Portable, Drip-Stop System, Removable and Washable Filter, Warming Plate
- **Color:** Black
- **Coffee Maker Type:** Drip Coffee Machine

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Kenwood website. Keep your proof of purchase for warranty claims.

