

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fockety](#) /

› [Fockety RAX23 WV50020 Replacement Remote Control User Manual for Yamaha R-S300 R-S300BL](#)

## Fockety RAX23 WV50020

# Fockety RAX23 WV50020 Replacement Remote Control User Manual

For Yamaha Home Theater Audio Receiver R-S300 R-S300BL

## INTRODUCTION

---

This manual provides comprehensive instructions for the Fockety RAX23 WV50020 Replacement Remote Control. This remote is specifically designed to be compatible with Yamaha Home Theater Audio Receivers R-S300 and R-S300BL, offering a direct replacement for your original unit. It features an ergonomic design for comfortable handling and pre-programmed functionality for immediate use.

## SETUP

---

### Battery Installation

The RAX23 WV50020 remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



The remote control's battery compartment is shown open, illustrating where two AAA batteries should be inserted. Batteries are not included.



This image shows the rear of the remote control, including the battery cover.

### Initial Use

Once batteries are installed, the remote control is ready for immediate use with compatible Yamaha R-S300 and R-S300BL receivers. No additional programming is required.

### OPERATING INSTRUCTIONS

---

The Fockety RAX23 WV50020 remote control provides full functionality for your Yamaha receiver. Its ergonomic design and high-elastic keys ensure a comfortable and responsive user experience.



Ideal replacement part  
Ideal for lost, damaged remotes or when a  
new remote is needed

This image displays the full layout of the Fockety RAX23 WV50020 remote control, showing all buttons and their labels.

### Button Functions Overview

- **Power Button (⏻):** Turns the receiver on or off.
- **Input Selectors (CD, TAPE, PHONO, DOCK, LINE 1, LINE 2, FM, AM):** Selects the desired audio input source.
- **Volume Up/Down (+/-):** Adjusts the audio output volume.
- **Mute:** Silences or restores the audio output.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **Playback Controls (Play, Pause, Stop, Skip Forward, Skip Backward):** Controls media playback functions.
- **DIMMER:** Adjusts the display brightness of the receiver.
- **SLEEP:** Sets a timer for the receiver to automatically power off.
- **A SPEAKERS B:** Toggles between speaker outputs A and B.
- **PRESET (</>):** Navigates through radio presets.
- **INFO:** Displays information on the receiver's screen.
- **REPEAT/RETURN:** Repeats playback or returns to a previous menu.
- **OPTION:** Accesses additional options for the current function.

- **SHUFFLE:** Activates or deactivates shuffle playback mode.
- **DISC SKIP:** Skips between discs if using a multi-disc player connected to the receiver.



This image demonstrates the ergonomic design of the remote control as it is comfortably held in a user's hand, emphasizing ease of grip and access to buttons.



A detailed view of the upper buttons on the remote, including power, sleep, dimmer, and input selection buttons like CD, Tape, Phono, and Line.





A detailed view of the lower buttons on the remote, including volume controls, mute, repeat, option, and disc skip functions.

## **MAINTENANCE**

---

### **Cleaning**

To maintain the appearance and functionality of your remote control, clean it regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

## Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Replace batteries promptly when they are depleted to ensure optimal performance.

## Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

## TROUBLESHOOTING

---

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old or depleted batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the Yamaha receiver.
- Confirm you are within the effective operating range of the receiver.

- **Specific Buttons Not Working:**

- Clean the remote control surface and buttons to remove any dirt or debris that might be interfering with button presses.
- If only certain buttons are unresponsive after checking batteries and cleaning, the remote may be damaged and require replacement.

## SPECIFICATIONS

---

<b>Model</b>	RAX23 WV50020
<b>Brand</b>	Fockety
<b>Compatible Devices</b>	Yamaha Home Theater Audio Receiver R-S300, R-S300BL
<b>Material</b>	ABS
<b>Battery Type</b>	2 x AAA (Not Included)
<b>Special Features</b>	Ergonomic Design, Infrared, Pre-Programmed
<b>Dimensions (L x W x H)</b>	Approx. 22.6 x 5.3 x 3.3 cm (8.9 x 2.1 x 1.3 inches)
<b>Weight</b>	Approx. 70 g (2.5 oz)

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or technical support for your Fockety RAX23 WV50020 Replacement Remote Control, please refer to the documentation provided at the time of purchase or contact the seller directly. Specific warranty terms and support channels may vary.