

[Manuals.plus](#) /

› [ONN](#) /

› Onn Surf Tablet Gen 3 2022 User Manual

ONN TBGRY100071481A

Onn Surf Tablet Gen 3 2022 User Manual

Model: TBGRY100071481A

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Onn Surf Tablet Gen 3 2022. Please read this manual thoroughly before operating the device and retain it for future reference. This tablet is designed for general use, including browsing, streaming, and light productivity tasks.



Image: Front and back view of the Onn Surf Tablet Gen 3 2022.

Safety Information

To ensure safe operation and prevent damage to your device or injury to yourself and others, observe the following precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only the provided or approved charging accessories.
- Do not attempt to disassemble or repair the tablet yourself. Refer all servicing to qualified personnel.
- Keep the tablet away from water and other liquids.

- Dispose of the tablet and its battery responsibly according to local regulations.

SETUP

1. What's in the Box?

Upon opening the product packaging, verify that all items are present:

- Onn Surf Tablet Gen 3 2022
- AC adapter
- USB-C charging cable (3.2 ft / 1 m)
- Quick Start Guide



Image: The retail packaging for the Onn Surf Tablet Gen 3.

2. Identifying Components

Familiarize yourself with the tablet's physical features:



Image: Side view of the tablet, highlighting the USB-C port, headphone jack, and volume/power buttons.

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust audio levels.
- **USB-C Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** For expanding storage.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.

3. Charging the Tablet

Before first use, fully charge the tablet. Connect the USB-C cable to the tablet's USB-C port and the other end to the AC adapter. Plug the AC adapter into a power outlet. The battery indicator on the screen will show charging status.

4. Powering On/Off

- **To Power On:** Press and hold the Power button until the Onn logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **To Sleep/Wake:** Briefly press the Power button.

5. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, signing in with a Google account, and setting up security features.

6. Inserting a microSD Card

To expand storage, locate the microSD card slot on the side of the tablet. Gently insert a compatible microSD card (up to 128GB, sold separately) into the slot until it clicks into place. Ensure the card is oriented correctly.

OPERATING

1. Navigating Android 12 Go

Your tablet runs on Android 12 Go Edition, optimized for efficient performance. Use touch gestures to navigate:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

The navigation bar at the bottom of the screen typically includes Home, Back, and Recent Apps buttons.

2. Connecting to Wi-Fi

To access the internet:

1. Go to **Settings > Network & internet > Internet**.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

3. Using Cameras

The tablet features a 2 MP front-facing camera and a 2 MP rear-facing camera. Open the Camera app to take photos or record videos. Tap the camera icon to switch between front and rear cameras.

4. Battery Life Management

The tablet offers up to 10 hours of battery life. To optimize battery performance:

- Reduce screen brightness.
- Turn off Wi-Fi or Bluetooth when not in use.
- Close unused applications running in the background.
- Enable Battery Saver mode in Settings.

5. App Management

Download new applications from the Google Play Store. To manage installed apps, go to **Settings > Apps**. From here, you can uninstall apps, clear cache/data, or force stop them.



Image: The tablet screen showing the Google Kids Space interface, designed for child-friendly content.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents. For stubborn smudges, slightly dampen the cloth with water.

2. Software Updates

Regularly check for system updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for and install available updates.

3. Storage Management

To free up storage space, consider:

- Uninstalling unused apps.
- Deleting old photos and videos or moving them to cloud storage/microSD card.
- Clearing cached data for apps (Settings > Apps > [App Name] > Storage & cache > Clear cache).

TROUBLESHOOTING

Problem	Possible Solution
Tablet does not turn on.	Ensure the tablet is charged. Connect to the charger for at least 30 minutes before attempting to power on.
Tablet is slow or unresponsive.	Close unused apps. Clear app caches. Restart the tablet. Check for system updates.

Problem	Possible Solution
Cannot connect to Wi-Fi.	Ensure Wi-Fi is enabled. Restart your router. Verify the Wi-Fi password. Forget the network and reconnect.
Battery drains quickly.	Reduce screen brightness. Disable unused features like Bluetooth. Limit background app activity.
Apps are crashing.	Clear the app's cache and data (Settings > Apps). Reinstall the app. Check for system updates.
Tablet not charging.	Check the charging cable and adapter for damage. Try a different outlet. Ensure the USB-C cable is fully inserted.

Factory Reset

If issues persist, a factory reset may be necessary.**Warning: This will erase all data on your tablet. Back up important data before proceeding.**

- Go to **Settings > System > Reset options**.
- Select **Erase all data (factory reset)**.
- Confirm your decision and follow the on-screen prompts.

SPECIFICATIONS



Image: Rear view of the Onn Surf Tablet Gen 3, highlighting its charcoal finish.

Feature	Detail
Model Name	Onn 7" 2022 Model

Feature	Detail
Item Model Number	TBGRY100071481A
Operating System	Android 12 Go Edition
Screen Size	7 Inches
Screen Resolution	1024 x 600 Pixels
Processor	2.0 GHz Quad-core
RAM	2 GB
Internal Storage	32 GB eMMC
Expandable Storage	MicroSD slot (up to 128GB)
Cameras	2 MP Front-facing, 2 MP Rear-facing
Wireless Connectivity	802.11g Wi-Fi
Battery Life	Up to 10 hours (typical usage)
Dimensions (LxWxH)	7.42 x 4.51 x 1 inches
Item Weight	1 pound
Color	Charcoal

WARRANTY AND SUPPORT

Warranty Information

This product is typically covered by a limited manufacturer's warranty. Please refer to the Quick Start Guide included in your product packaging or visit the official ONN website for detailed warranty terms and conditions. The warranty generally covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact ONN customer support. Contact information can usually be found in the Quick Start Guide or on the official ONN brand website. When contacting support, please have your tablet's model number (TBGRY100071481A) and purchase information readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question