

## Olvy OLY-WHW-PNT

# Olvy Automatic Watch Winder Instruction Manual

Model: OLY-WHW-PNT

## INTRODUCTION

---

Thank you for choosing the Olvy Automatic Watch Winder. This device is designed to keep your automatic watches wound and ready to wear, preventing them from stopping and maintaining the proper lubrication of their internal mechanisms. Please read this manual carefully before using your watch winder to ensure optimal performance and longevity.

## PRODUCT FEATURES

---

- **Premium Design:** Constructed from high-quality MDF and synthetic leather, featuring an organic acrylic glass window for dust and moisture protection. The soft interior protects watches from scratches, and adjustable cushions accommodate various watch sizes.
- **Movement Preservation:** Extends the lifespan of your automatic watch by keeping its movement parts constantly in motion, ensuring proper oil distribution and accurate timekeeping.
- **Silent Operation:** Equipped with a durable, silent motor, allowing the watch winder to operate without disturbance, making it suitable for bedrooms and offices.
- **Dual Power Supply:** Can be powered using the included AC adapter or with batteries (not included) for flexible placement.
- **Anti-Magnetic Design:** Features an antistatic circuit board and a synthetic leather-lined interior to prevent magnetization, protecting your valuable timepieces from damage.

# Anti-magnetiseringsdesign

De printplaat is antistatisch en de binnenkant is voorzien van PU-leer om magnetisering te voorkomen en je waardevolle horloges tegen beschadigen te beschermen.



Hoogwaardig  
PU-Leer



Hard en duurzaam  
acrylglas



Nette & mooie  
stiksels



Image: The Olvy Watch Winder showcasing its anti-magnetic design, high-quality PU leather, durable acrylic glass, and neat stitching details.

## SETUP INSTRUCTIONS

- 1. Unpack the Watch Winder:** Carefully remove the watch winder from its packaging. Inspect for any signs of damage.
- 2. Prepare Your Watch:** Open the watch winder's lid. Remove the adjustable watch cushion from the winder. Secure your automatic watch onto the cushion. Ensure the watch is snugly fitted but not overly tight to avoid strain on the watch band.
- 3. Place the Watch:** Insert the cushion with your watch back into the winder's slot. Ensure it is seated correctly.
- 4. Power Connection:**
  - **AC Adapter:** Connect the provided AC adapter to the power input port on the back or bottom of the watch winder, then plug the adapter into a standard electrical outlet.
  - **Batteries (Optional):** If using batteries, open the battery compartment (usually on the bottom), insert the required batteries (e.g., AA or D, refer to the compartment label) with correct polarity, and close the compartment. Batteries are not included.
- 5. Close the Lid:** Gently close the acrylic glass lid to protect your watch from dust and ensure quiet operation.



Image: The Olvy Watch Winder with its lid open, revealing an automatic watch securely placed on the soft, adjustable cushion inside, ready for winding.

## OPERATING INSTRUCTIONS

---

The Olvy Automatic Watch Winder is designed for simple operation.

1. **Power On:** Once connected to a power source (AC adapter or batteries), the watch winder will typically begin its winding cycle automatically. Some models may have a power switch; if so, turn it to the 'ON' position.
2. **Winding Cycle:** The winder will rotate your watch for a period, then pause, and repeat the cycle. This intermittent rotation mimics natural wrist movement to keep the watch wound without overwinding. The specific rotation pattern (e.g., clockwise, counter-clockwise, or bi-directional) and intervals are pre-programmed to suit most automatic watches.
3. **Silent Operation:** The advanced motor ensures that the winding process is extremely quiet, allowing for placement in any room without causing disturbance.
4. **Power Off:** To stop the winder, disconnect the AC adapter or remove the batteries. If a power switch is present, switch it to the 'OFF' position.

# Dankzij de geruisloze motor

kun je in slaap vallen tijdens het opwinden  
van het horloge



Image: The Olvy Watch Winder operating quietly on a bedside table, demonstrating its silent motor feature, allowing for undisturbed sleep while keeping the watch wound.

## MAINTENANCE

Proper maintenance ensures the longevity and appearance of your Olvy Watch Winder.

- **Cleaning the Exterior:** Use a soft, dry, lint-free cloth to gently wipe the synthetic leather exterior. For stubborn marks, slightly dampen the cloth with water and mild soap, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Cleaning the Acrylic Window:** Use a soft, clean microfiber cloth to wipe the acrylic glass window. For fingerprints or smudges, use a specialized acrylic cleaner or a very mild glass cleaner applied to the cloth, not directly to the window.
- **Interior Care:** The soft interior lining can be gently dusted with a soft brush or a lint roller.
- **Avoid Direct Sunlight and Humidity:** Place the watch winder in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity to prevent material degradation.
- **Battery Replacement:** If using batteries, replace them promptly when the winder's performance diminishes to prevent leakage and damage to the unit.

## TROUBLESHOOTING

If you encounter any issues with your Olvy Watch Winder, please refer to the following common solutions:

Problem	Possible Cause	Solution
Winder is not rotating.	No power, loose connection, or depleted batteries.	Ensure the AC adapter is securely plugged into both the winder and the outlet. If using batteries, check if they are correctly inserted or replace them.
Watch is not winding.	Watch not properly seated, or watch requires a specific winding direction/TPD not met by the winder's default cycle.	Ensure the watch is securely placed on the cushion. Consult your watch's manual for its specific Turns Per Day (TPD) and winding direction requirements. While this winder has a standard cycle, some watches may have unique needs.
Unusual noise during operation.	Winder placed on an uneven surface, internal component issue, or watch/cushion rubbing against the interior.	Ensure the winder is on a flat, stable surface. Check if the watch or cushion is touching the winder's interior. If the noise persists and is significant, contact customer support.
Watch stops after being in the winder.	Insufficient winding, or watch has a power reserve issue.	Manually wind your watch fully before placing it in the winder. If the issue persists, your watch may require servicing.

## SPECIFICATIONS

- **Model Number:** OLY-WHW-PNT
- **Dimensions (Package):** 25.4 x 16.3 x 13.6 cm
- **Weight (Package):** 910 grams
- **Materials:** MDF, Synthetic Leather, Acrylic Glass
- **Power Source:** AC Adapter (included) or Batteries (not included)
- **Movement Type:** Automatic
- **Special Features:** Automatic winding, Silent motor, Anti-magnetic design, Adjustable watch cushion
- **Color:** Black

## WARRANTY INFORMATION

The Olvy Automatic Watch Winder comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Olvy customer service through the platform where you purchased the product or visit the official Olvy brand store online. Our team is dedicated to providing high-quality support and ensuring customer satisfaction.

You can visit the Olvy store at: [Olvy Amazon Store](#)