

[Manuals.plus](#) /

› [MaxWorks](#) /

› MaxWorks 50876 Collapsible Rolling Folding Dolly Cart Instruction Manual

MaxWorks 50876

MaxWorks 50876 Collapsible Rolling Folding Dolly Cart Instruction Manual

Model: 50876

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your MaxWorks 50876 Collapsible Rolling Folding Dolly Cart. This versatile cart is designed for transporting various items, making it suitable for office, classroom, grocery shopping, and general utility tasks. Please read these instructions thoroughly before initial use and retain for future reference.





Figure 1.1: MaxWorks 50876 Collapsible Rolling Folding Dolly Cart (folded)

2. PRODUCT COMPONENTS

The MaxWorks 50876 cart consists of the following main components:

- **Main Crate Body:** The primary storage compartment, made of durable plastic.
- **Telescoping Handle:** An adjustable aluminum handle for pulling the cart.
- **Lid:** A removable lid that covers the crate and can support weight.
- **Wheels:** Two durable wheels for smooth transportation.
- **Built-in Carry Handles:** Integrated handles on the sides of the crate for lifting.



Figure 2.1: Front View

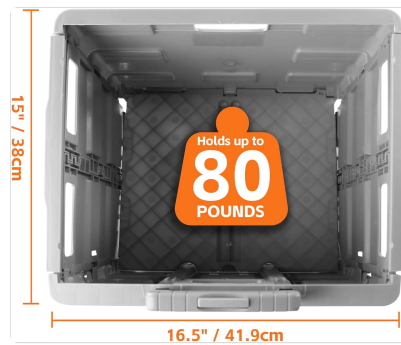


Figure 2.2: Side View



Figure 2.3: Back View

3. SETUP AND UNFOLDING

The MaxWorks 50876 cart comes pre-assembled and ready for use. Follow these steps to unfold and prepare your cart:

1. Place the folded cart on a flat, stable surface.
2. Gently pull the side panels outwards until the crate body forms a rectangular shape. Ensure all locking mechanisms (if present) click into place.
3. Extend the telescoping handle by pressing the push-button and pulling the handle upwards to your desired height. The handle can extend up to 39 inches (99 cm).
4. Place the lid securely on top of the crate if desired, or store it separately.



- office



- grocery store



- college classes

PERFECT STORAGE DOLLY

This roller cart is the perfect storage dolly for carrying items to and from job sites.



Figure 3.1: Extending the Telescoping Handle

4. OPERATING INSTRUCTIONS

4.1. Loading the Cart

Open the lid and place items inside the crate. Ensure the weight is evenly distributed and does not exceed the maximum capacity of 80 pounds (36.29 kg). For stability, heavier items should be placed at the bottom.

Telescoping handle extends to 39" / 99cm



Figure 4.1: Cart Capacity Illustration

4.2. Transporting Items

Once loaded, extend the handle to a comfortable height. Tilt the cart slightly backward to engage the wheels and pull it along. The two wheels are designed for smooth and efficient movement across various surfaces.



Figure 4.2: Durable Wheels

4.3. Using the Lid as a Seat or Step Stool

The lid is designed to support up to 250 pounds (113 kg) and can be used as a temporary seat or step stool. Ensure the lid is securely placed on the crate and the cart is on a stable, level surface before using it for support.

4.4. Folding for Storage

To fold the cart for compact storage:

1. Empty the cart and remove the lid.
2. Retract the telescoping handle fully by pressing the push-button and pushing the handle downwards.
3. Push the side panels inwards until the cart collapses flat.
4. Secure the lid in its designated storage position (often by snapping it onto one of the folded panels) to maintain the compact form.

HOLD UP TO 80 POUNDS

This Handcart total weighs 6 pounds but can hold up to 80 pounds!

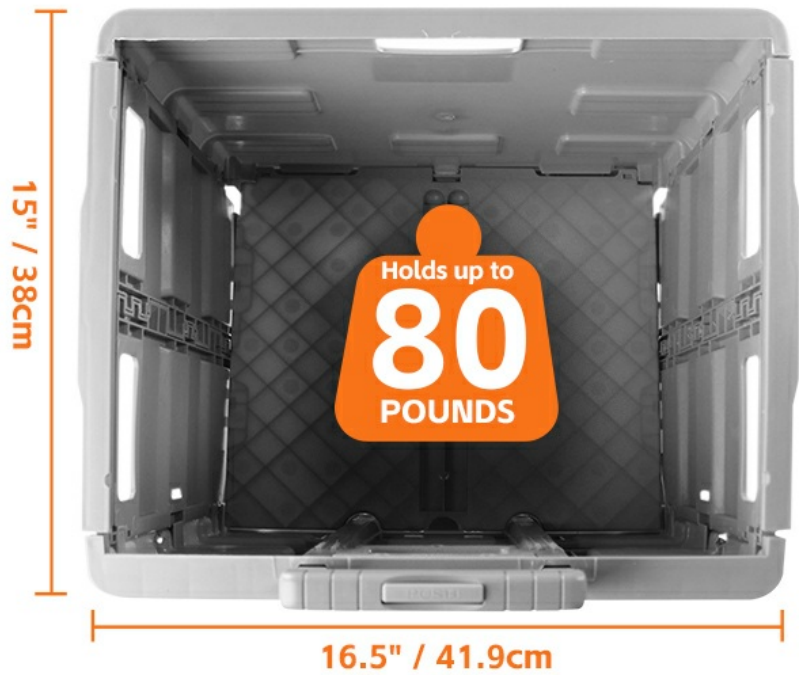


Figure 4.3: Cart in Compact Storage Mode

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the cart with a damp cloth and mild soap as needed. Avoid harsh chemicals that may damage the plastic.
- **Storage:** Store the cart in a dry place away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Inspection:** Periodically check the wheels and handle for any signs of wear or damage. Ensure all moving parts operate smoothly.

6. TROUBLESHOOTING

- **Handle sticks when extending/retracting:** Ensure the push-button is fully depressed. Check for any obstructions in the telescoping mechanism.
- **Wheels do not roll smoothly:** Inspect wheels for debris (e.g., hair, dirt) and remove if present. Ensure the cart is not overloaded.
- **Cart does not fold flat:** Ensure the crate is empty and the handle is fully retracted. Check for any items or obstructions preventing the side panels from collapsing completely.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	15"D x 16.5"W x 39"H (38cm D x 41.9cm W x 99cm H)
Material	Plastic (Crate), Aluminum (Handle)

Feature	Detail
Color	Gray
Item Weight	6 Pounds (2.72 kg)
Weight Limit (Crate)	80 Pounds (36.29 kg)
Weight Limit (Lid as Seat/Stool)	250 Pounds (113 kg)
Number of Wheels	2
Assembly Required	No
Model Number	50876
UPC	812351038768

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official MaxWorks warranty document. A digital copy of the warranty can be accessed via the following link:

[View Warranty \(PDF\)](#)

For additional assistance or inquiries, please contact MaxWorks customer service.

© 2025 MaxWorks. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question