

[Manuals.plus](#) /

> [HP](#) /

> HP DeskJet Ink Advantage 4276 Wireless All-in-One Printer User Manual

HP 60K49C

HP DeskJet Ink Advantage 4276 Wireless All-in-One Printer User Manual

Model: 60K49C

1. PRODUCT OVERVIEW

The HP DeskJet Ink Advantage 4276 is an affordable, easy-to-use home printer designed for simple printing, fast scanning, and efficient copying. It utilizes low-cost, high-yield inks, making it a reliable choice for various tasks from printing labels to recipes. This all-in-one device offers wireless connectivity for convenience.

Key features include:

- Easy setup with the HP Smart App.
- Reliable self-healing Wi-Fi connectivity.
- Ability to print, scan, and copy directly from your smartphone.
- Support for multi-page scanning and copying.
- Optional high-yield HP inks for cost-effective printing.
- Made with 60% recycled plastic.



Figure 1: Front view of the HP DeskJet Ink Advantage 4276 printer.

Core features

Print Scan Copy Fax

Frequency of use

Monthly

Weekly

Daily



Wi-Fi®



Control panel
with buttons



Mobile printing



USB
connectivity

Additional features

- Set up with the easiest-to-use print app
- Up to 8.5 black/5.5 color ppm
- Optional high-yield HP Inks
- Made with 60% recycled plastic

Figure 2: Overview of core features including print, scan, copy, Wi-Fi, mobile printing, control panel, and USB connectivity.

2. SETUP GUIDE

2.1 Unboxing and Initial Setup

1. Carefully remove the printer from its packaging. Remove all packing materials, tapes, and protective films from the exterior and interior of the printer.
2. Connect the power cord to the printer and then to a wall outlet. Do not connect the USB cable yet.
3. Turn on the printer by pressing the Power button.

2.2 Installing Ink Cartridges

1. Open the ink cartridge access door. The carriage will move to the center.
2. Wait until the carriage is idle and silent before proceeding.
3. Unpack the new ink cartridges (Black and Tri-Color). Remove the protective tape from the cartridges.
4. Insert the black cartridge into the right slot and the tri-color cartridge into the left slot. Push them firmly until they

click into place.

5. Close the ink cartridge access door.

2.3 Software Installation and Connectivity

For the best experience, download the HP Smart App on your computer or mobile device. This app guides you through the setup process, including connecting to Wi-Fi and installing necessary drivers.

- **Wireless Setup:** Follow the on-screen instructions in the HP Smart App to connect your printer to your wireless network. The printer features self-healing Wi-Fi for reliable connection.
- **USB Setup:** If you prefer a wired connection, connect a USB cable from the printer to your computer after installing the software.

Stay connected with our reliable Wi-Fi



Figure 3: Control panel with Wi-Fi indicator, showing the printer's wireless capability.

3. OPERATING INSTRUCTIONS

3.1 Printing

The HP DeskJet Ink Advantage 4276 supports printing from various devices, including computers and smartphones.

1. Load paper into the input tray. The printer has a 60-sheet input tray.
2. Open the document or image you wish to print on your computer or mobile device.
3. Select the print option (usually File > Print).
4. Choose the HP DeskJet Ink Advantage 4276 from the list of available printers.
5. Adjust print settings such as paper size, print quality, and number of copies.
6. Click "Print".



Figure 4: The printer actively printing documents, with a smartphone displaying the HP Smart App interface.



Figure 5: Another view of the printer in operation, demonstrating its printing capabilities.

3.2 Scanning

You can scan documents and photos using the HP Smart App or your computer's scanning software.

1. Place the document face-down on the scanner glass or load it into the 35-page automatic document feeder (ADF).
2. Open the HP Smart App on your device and select the "Scan" option.
3. Choose scan settings such as document type, resolution, and destination folder.
4. Click "Scan". The scanned image will appear on your device.

3.3 Copying

The printer allows for quick and easy copying directly from the control panel.

1. Place the original document face-down on the scanner glass or load it into the ADF.
2. On the printer's control panel, press the "Copy Black" or "Copy Color" button.
3. To make multiple copies, press the button multiple times or use the control panel to select the desired number of copies.

4. MAINTENANCE

4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, the printer will indicate this. Replace cartridges with genuine HP Ink Advantage cartridges for optimal performance.

1. Ensure the printer is on.
2. Open the ink cartridge access door.
3. Press down on the empty cartridge to release it, then pull it out of its slot.

4. Unpack the new cartridge and remove the protective tape.
5. Insert the new cartridge into the correct slot (black on the right, tri-color on the left) and push until it clicks.
6. Close the ink cartridge access door.

HP DeskJet Ink Advantage 4276



With 240 black and 100 color pages in the box



Figure 6: Information regarding the included ink cartridges and page yield for the HP DeskJet Ink Advantage 4276.

4.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, damp, lint-free cloth.
- **Scanner Glass:** Use a soft cloth lightly dampened with glass cleaner to clean the scanner glass. Do not spray cleaner directly onto the glass.
- **Printhead Cleaning:** If print quality issues arise (streaks, faded colors), use the printhead cleaning utility available through the HP Smart App or printer software.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Printer Not Responding:**

- Ensure the printer is powered on and connected to a power outlet.
- Check USB cable connection if using wired, or Wi-Fi connection if wireless.
- Restart the printer and your computer/device.

- **Print Quality Issues (Streaks, Faded Prints):**

- Check ink levels and replace any low or empty cartridges.
- Perform a printhead cleaning cycle through the HP Smart App or printer software.
- Ensure you are using genuine HP ink cartridges.

- **Paper Jams:**

- Turn off the printer and unplug it.
- Carefully remove any jammed paper from the input tray, output tray, or inside the printer.
- Ensure paper is loaded correctly and not overfilled.

- **Wireless Connection Problems:**

- Ensure your Wi-Fi router is on and functioning.
- Restart your router and the printer.
- Use the HP Smart App to re-establish the wireless connection.
- Ensure the printer is within range of your Wi-Fi router.

6. SPECIFICATIONS

Feature	Specification
Model Name	HP Deskjet Plus IA 4276
Model Number	60K49C
Functions	Print, Scan, Copy
Connectivity Technology	USB, Wi-Fi
Printer Technology	Inkjet
Maximum Print Speed (Black)	8.5 ppm
Maximum Print Speed (Color)	5.5 ppm
Maximum Black Print Resolution	1200 x 1200 dpi
Maximum Color Print Resolution	1200 x 1200 dpi
Scanner Type	Sheetfed
Automatic Document Feeder (ADF)	35-page capacity
Input Tray Capacity	60 sheets

Feature	Specification
Maximum Media Size	8.5 x 11 inch (215.9 x 355.6 mm)
Item Dimensions (D x W x H)	20D x 42.8W x 33.2H centimeters
Item Weight	4.82 Kilograms
Included Components	HP Printer; Black Cartridge; Tri-Color Cartridge; Setup guide; Power cord

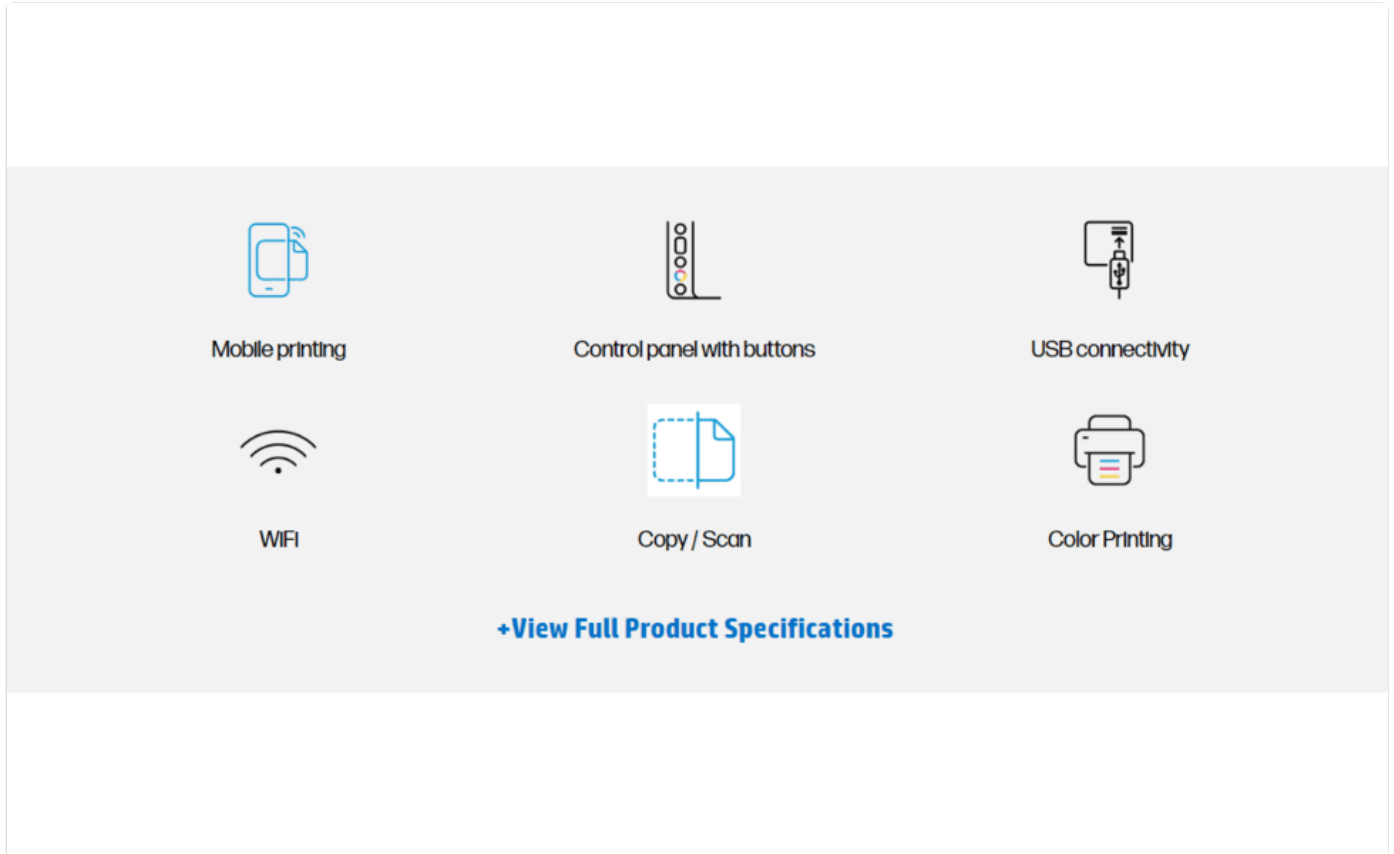


Figure 7: Detailed product walkaround highlighting key features like the ADF, input tray, and control panel.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your printer or visit the official HP support website. HP provides resources for troubleshooting, driver downloads, and contact information for customer service.

You can also find additional support and FAQs through the HP Smart App.



Figure 8: Official HP Logo, representing the brand's support and services.

