

[Manuals.plus](#) /

> [Odoland](#) /

> Odoland OD0671G Camping Fan with LED Lantern User Manual

## Odoland OD0671G

# Odoland OD0671G Camping Fan with LED Lantern User Manual

Model: OD0671G | Brand: Odoland

### IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Keep out of reach of children.
- Do not insert fingers or any objects into the fan grille.
- Use only the provided Type-C charging cable or a certified equivalent.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.
- Avoid exposing the fan to extreme temperatures or direct sunlight for prolonged periods.
- Ensure the fan is placed on a stable surface when in use.

### PACKAGE CONTENTS

---

Verify that all items are present in the package before initial use.

- 1 x Odoland Camping Fan with LED Lantern
- 1 x Remote Control
- 1 x USB Type-C Charging Cable
- 1 x User Manual (This document)

# PACKAGE INCLUDED



Image: The package contents of the Odoland Camping Fan, showing the fan unit, remote control, USB Type-C charging cable, and the user manual.

## PRODUCT OVERVIEW

The Odoland OD0671G Camping Fan is a versatile device designed for outdoor and indoor use, featuring a powerful fan, an integrated LED lantern, and a portable power bank function.



Camping



Fishing



RV Camping



Picnicking

Image: The Odoland Camping Fan being used in different scenarios, including inside a tent, next to a person fishing, during RV camping, and at a picnic, highlighting its versatility.

### Key Features:

- **High-Capacity Battery:** Built-in 30,000 mAh rechargeable battery for extended use.
- **LED Lantern:** Integrated LED light with 3 brightness settings.
- **Powerful Fan:** 4-speed fan with quiet operation.
- **Oscillation & Pivot:** Automatic 45°/90° oscillation and 270° manual pivot.
- **Remote Control:** Convenient operation from a distance.
- **Emergency Power Bank:** USB output for charging other devices.
- **Multiple Mounting Options:** Freestanding, hanging hook, and wall-mountable design.

## SETUP

### 1. Initial Charging

Before first use, fully charge the fan. Connect the provided USB Type-C cable to the fan's charging port and plug the other end into a compatible USB power adapter (not included). The charging indicator lights will illuminate. A full charge typically takes 7-8 hours.

## 2. Remote Control Preparation

The remote control comes with an insulation strip to preserve battery life. Before using the remote, gently pull out this transparent strip from the battery compartment.

## 3. Placement Options

- **Freestanding:** Place the fan on a flat, stable surface.
- **Hanging:** Use the integrated 360° rotation hanging hook to suspend the fan from a tent ceiling, branch, or other suitable support.
- **Wall Mount:** The fan can also be mounted on a wall using appropriate hardware (not included) via the designated mounting points.

## OPERATING INSTRUCTIONS

---

The fan can be operated using the control panel buttons on the unit or the included remote control.

### 1. Fan Operation

Press the fan power button ( ) on the unit or remote to turn the fan on/off. Press repeatedly to cycle through the 4 fan speeds.

- **Speed 1:** Up to 58 hours of continuous operation.
- **Speed 2:** Up to 32 hours of continuous operation.
- **Speed 3:** Up to 19 hours of continuous operation.
- **Speed 4:** Up to 12 hours of continuous operation.

# POWERFUL FAN

4 Speed Settings

Speed 1  
**58 Hours**

Speed 2  
**32 Hours**

Speed 3  
**19 Hours**

Speed 4  
**12 Hours**



Image: The Odoland Camping Fan illustrating its four fan speed settings and the approximate battery life for each speed.

## 2. LED Lantern Operation

Press the light power button ( ) on the unit or remote to turn the LED lantern on/off. Press repeatedly to cycle through the 3 brightness settings.

- **Low Light:** Up to 136 hours of continuous operation.
- **Medium Light:** Up to 72 hours of continuous operation.
- **High Light:** Up to 36 hours of continuous operation.



## 3 BRIGHTNESS LEVELS

Low Light 136H

Medium Light 72H

Strong Light 36H

Image: The Odoland Camping Fan demonstrating its three LED lantern brightness levels and the approximate battery life for each setting.

### 3. Oscillation and Pivot

Press the oscillation button (↔) on the unit or remote to activate automatic oscillation. The fan can oscillate at 45° or 90° angles. The fan head can also be manually pivoted up to 270° for directional airflow.

# AUTOMATIC OSCILLATING FAN WITH REMOTE CONTROL



25ft



Image: The Odoland Camping Fan highlighting its automatic oscillation feature (45° and 90°) and the ability to manually pivot the fan head 270 degrees, along with the remote control.

## 4. Timer Function

Use the timer button on the remote control to set an automatic shut-off time for the fan. Refer to the remote control diagram for specific timer settings.

## 5. Emergency Power Bank Function

The fan can be used as an emergency power bank to charge other devices. Connect your device's charging cable to the USB output port on the fan. This feature is useful for charging phones, GPS devices, or other small electronics when away from a power source.

# 30000mAh EMERGENCY POWER BANK

Can be a emergency power to charge your phone



Image: A person using the Odoland Camping Fan to charge a smartphone, demonstrating its 30,000mAh emergency power bank capability in an outdoor setting.

## MAINTENANCE

---

### Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For dust accumulation on the fan blades, use a soft brush or compressed air to gently clean the grille and blades.
- Do not allow water to enter the internal components.

### Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery to about 50% before storage to prolong battery life.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan/Light does not turn on.	Battery is depleted.	Charge the fan fully using the Type-C cable.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Remote control not working.	Insulation strip still in place.	Remove the transparent insulation strip from the remote's battery compartment.
	Remote battery is low or dead.	Replace the remote control battery (CR2025 or equivalent).
	Out of range.	Ensure you are within 7.6 meters (25 feet) of the fan.
Fan makes unusual noise.	Obstruction in fan blades.	Turn off and unplug the fan. Carefully check for and remove any obstructions.
Device not charging from power bank.	Fan battery is low.	Charge the fan.
	Incorrect cable or device.	Ensure you are using a compatible USB cable and device.

## SPECIFICATIONS

<b>Model Number</b>	OD0671G
<b>Brand</b>	Odoland
<b>Dimensions (L x W x H)</b>	10.92 x 22.1 x 28.45 cm (4.3 x 8.7 x 11.2 inches)
<b>Weight</b>	1.66 Kilograms
<b>Battery Capacity</b>	30,000 mAh
<b>Input Voltage</b>	5 Volts (USB Type-C)
<b>Power Consumption</b>	15 Watts
<b>Fan Speeds</b>	4
<b>Noise Level</b>	35 Decibels
<b>Light Settings</b>	3 (LED)
<b>Oscillation Angles</b>	45°, 90° (Automatic)
<b>Pivot Angle</b>	270° (Manual)
<b>Control Method</b>	Buttons, Remote Control
<b>Material</b>	Plastic

## WARRANTY AND SUPPORT

---

Odoland products are manufactured to high-quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or the official Odoland website.

Please retain your proof of purchase for warranty claims.

*Note: Specific warranty terms may vary by region and retailer.*

