

[manuals.plus](#) /

› [Odoland](#) /

› [Odoland 30000mAh Camping Fan with LED Lantern User Manual](#)

**Odoland OD06671O-odoland**

# **Odoland 30000mAh Camping Fan with LED Lantern User Manual**

Model: OD06671O-odoland

## **INTRODUCTION**

---

Thank you for choosing the Odoland 30000mAh Camping Fan with LED Lantern. This versatile device is designed to provide powerful cooling, bright illumination, and emergency power for your outdoor adventures, RV trips, job sites, or during power outages. Please read this manual thoroughly before use to ensure proper operation and maintenance.



The Odoland Camping Fan, featuring its fan, LED lantern, remote control, and power bank functionality.

## PRODUCT OVERVIEW AND FEATURES

- Powerful and Quiet Fan:** Equipped with 4 adjustable fan speeds, providing strong airflow up to 15 ft/s while maintaining low noise levels.
- Super Bright LED Lantern:** Features 3 brightness settings for versatile illumination, from soft ambient light to strong task lighting.
- High-Capacity Power Bank:** Built-in 30000mAh rechargeable battery that can also serve as an emergency power source for charging mobile phones, GPS devices, and other electronics via its USB port.
- Automatic Oscillation & Swivel Head:** Offers 90° or 45° automatic oscillation and a 270° manual swivel head for wide-angle cooling and light direction.
- Convenient Remote Control:** Operate fan speeds, light settings, oscillation, and timer functions from up to 25 feet away.
- Portable Design:** Lightweight and compact with a sturdy handle and a 360° rotation hanging hook, allowing for use as a desk fan or a hanging tent fan.

- **Durable Construction:** Designed for indoor and outdoor use, suitable for camping, traveling, job sites, and emergency situations.



Camping



Fishing



RV Camping



Picnicking

The fan's versatility for different outdoor activities.

## PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Odoland Camping Fan with LED Lantern
- 1 x Remote Control
- 1 x Type-C Charging Cable
- 1 x User Manual
- 1 x Storage Bag

# Package Included



All items included in the product package.

## SETUP

- Initial Charge:** Before first use, fully charge the fan using the provided Type-C charging cable. Connect the cable to the fan's Type-C port and a compatible USB power adapter (not included). The battery indicator lights will show charging progress. A full charge typically takes 7-8 hours.
- Remote Control Preparation:** The remote control comes with an insulation strip to prevent battery drain. Please remove this strip from the remote control before attempting to use it.
- Placement:** Place the fan on a stable, flat surface or use the integrated 360° rotation hanging hook to suspend it from a tent ceiling, branch, or other suitable support.

## OPERATING INSTRUCTIONS

### Fan Operation

The fan can be operated using the control panel on the unit or the remote control.

- Power On/Off:** Press the power button on the unit or remote to turn the fan on or off.

- **Adjust Fan Speed:** Press the fan speed button (usually indicated by fan icons) on the unit or remote to cycle through 4 different speed settings.
- **Oscillation:** Press the oscillation button on the unit or remote to activate the automatic 90° or 45° swing function. Press again to stop oscillation.
- **Manual Swivel:** Manually adjust the fan head up or down by 270° to direct airflow as needed.
- **Timer Function:** Use the timer button on the remote control to set the fan to automatically turn off after a specified period (e.g., 1H, 2H, 4H, 8H).



Fan speed settings and their approximate battery life.

# AUTOMATIC OSCILLATING FAN WITH REMOTE CONTROL



25ft



45°-90°



270°



Automatic oscillation and manual swivel capabilities.

## LED Lantern Operation

The LED lantern can be operated independently of the fan.

- **Adjust Brightness:** Press the light button on the unit or remote to cycle through 3 brightness settings (low, medium, high).



## 3 BRIGHTNESS LEVELS



Low Light 136H



Medium Light 72H



Strong Light 36H

LED lantern brightness levels and their approximate battery life.

### Power Bank Function

The fan's built-in battery can be used to charge other devices.

- **Charging Devices:** Connect your device's USB charging cable to the USB-A output port on the fan. The fan will automatically begin charging your device.
- **Emergency Use:** This feature is ideal for emergency charging of phones, tablets, or other small USB-powered devices when no other power source is available.

# 30000mAh EMERGENCY POWER BANK

Can be a emergency power to charge your phone



Using the fan as an emergency power bank.

## CHARGING THE FAN

To charge the Odoland Camping Fan:

1. Locate the Type-C input port on the fan.
2. Connect the provided Type-C charging cable to the fan's input port.
3. Connect the other end of the cable to a USB power source (e.g., wall adapter, power bank, computer USB port).
4. The battery indicator lights on the fan will illuminate to show the charging status. All lights will be solid when fully charged.
5. The fan supports working while charging.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the fan and lantern surfaces. Do not use abrasive cleaners or

immerse the unit in water.

- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its storage bag, to protect it from dust and moisture. Ensure the battery is partially charged (around 50%) before storing to prolong battery life.
- **Battery Care:** To maintain optimal battery performance, avoid completely draining the battery frequently. Recharge the fan regularly, even if not in constant use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan/Light does not turn on.	Battery is depleted.	Charge the fan fully.
Remote control not working.	Insulation strip not removed or battery is dead.	Remove the insulation strip. Replace remote battery if necessary. Ensure you are within 25ft range.
Fan not oscillating.	Oscillation function not activated.	Press the oscillation button on the unit or remote.
Device not charging from fan's USB port.	Fan battery is low or cable is faulty.	Ensure fan has sufficient charge. Try a different USB cable.

## SPECIFICATIONS

Feature	Detail
Brand	Odoland
Model Name	OD06671O-odoland
Color	Orange
Power Source	Battery Powered
Battery Capacity	30000mAh
Charging Time	Approx. 7-8 hours
Fan Speeds	4 levels
Max Wind Speed	15 ft/s
LED Brightness Settings	3 levels
Oscillation Angle	45° or 90° automatic
Swivel Angle	270° manual
Remote Control Range	Up to 25 ft
Input/Output	USB Type-C (Input), USB-A (Output)
Wattage	15 watts

Feature	Detail
Voltage	5 Volts
Product Dimensions	4.3"D x 8.7"W x 11.2"H
Item Weight	3.76 pounds

## WARRANTY AND SUPPORT

---

This Odoland Camping Fan comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Odoland customer service through the retailer where you purchased the product or visit the official Odoland website for contact information.

Please retain your proof of purchase for warranty purposes.

© 2024 Odoland. All rights reserved.