

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [Allimity RM-C3011 RM-C3016 Remote Control User Manual for JVC TVs](#)

ALLIMITY RM-C3011, RM-C3016

Allimity RM-C3011 / RM-C3016 Remote Control User Manual

For JVC TV Models: LE-50D2RCJ, LE-3218RCJ, LT-50E560, LT-50E350, LT-32E350, LT-40E560, LE-3918RCJ

INTRODUCTION

This manual provides instructions for the Allimity RM-C3011 and RM-C3016 replacement remote controls. These remotes are designed to be compatible with various JVC television models, offering direct functionality without the need for complex programming. Please read this manual thoroughly to ensure proper use and to maximize your viewing experience.

PRODUCT OVERVIEW

The Allimity RM-C3011 / RM-C3016 remote control features a standard layout for easy navigation and control of your JVC television. Below are images illustrating the remote's design and battery compartment.



Figure 1: Top-down view of the Allimity RM-C3011 / RM-C3016 remote control, showing all buttons including power, number pad, volume, channel, menu, and source controls.



Figure 2: Angled view of the Allimity RM-C3011 / RM-C3016 remote control, highlighting the ergonomic design and button placement.





Figure 3: View of the battery compartment for the Allimity RM-C3011 / RM-C3016 remote control, showing the placement for two AAA batteries.

SETUP

This remote control requires no programming or setup. Simply install the batteries, and it will be ready for use with compatible JVC TV models.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance.

OPERATING INSTRUCTIONS

Point the remote control directly at your JVC television's infrared sensor. Ensure there are no obstructions between the remote and the TV.

- **Power Button (●):** Press to turn the TV on or off.
- **Number Buttons (0-9):** Use to directly select channels.
- **CH+ / CH- (Channel Up/Down):** Press to change channels sequentially.
- **VOL+ / VOL- (Volume Up/Down):** Press to adjust the volume level.
- **Mute:** Press to mute or unmute the TV audio.
- **Menu:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Use to navigate through menus and confirm selections.
- **Source / Input:** Select different input sources (e.g., HDMI, AV).
- **Exit:** Exit current menu or on-screen display.
- **Sleep:** Set a timer for the TV to turn off automatically.
- **P.MODE (Picture Mode):** Cycle through picture presets.
- **S.MODE (Sound Mode):** Cycle through sound presets.
- **Display:** Show current channel information.
- **MTS:** Multi-channel Television Sound (SAP/Stereo).
- **CC (Closed Caption):** Turn closed captions on or off.
- **AUTO:** Auto-adjust picture settings (functionality may vary by TV model).
- **FAV / FAV+:** Access or add to favorite channels.
- **ZOOM:** Adjust screen zoom level.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next):** Control media playback if your TV supports it via USB or other inputs.

For detailed information on specific TV functions, please refer to your JVC television's original user manual.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's sensor.
- **Some buttons do not work:**

- Verify that your JVC TV model is listed as compatible. While this remote is designed for broad compatibility, some specific TV models or functions might not be fully supported.
- Clean the remote's infrared emitter (the small LED at the front) and the TV's sensor with a soft, dry cloth.

SPECIFICATIONS

Model Numbers	RM-C3011, RM-C3016
Brand	ALLIMITY
Compatible Devices	JVC Televisions (Specific models: LE-50D2RCJ, LE-3218RCJ, LT-50E560, LT-50E350, LT-32E350, LT-40E560, LE-3918RCJ)
Required Battery Type	2 x AAA Alkaline Batteries
Package Content	1 x Remote Control (batteries not included)
Package Dimensions	5.9 x 1.9 x 0.5 inches
Item Weight	2.5 ounces

MAINTENANCE

- Keep the remote control dry. Moisture can damage the internal circuitry.
- Avoid exposing the remote to extreme temperatures.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary.