

[Manuals.plus](#) /

› [ADLER EUROPE](#) /

› ADLER EUROPE Compact Stainless Steel Electric Kettle AD1372 User Manual

ADLER EUROPE AD1372

ADLER EUROPE Compact Stainless Steel Electric Kettle AD1372

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may lead to electric shock, fire, or serious injury.

- Do not immerse the kettle, power base, or power cord in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the kettle if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not fill the kettle above the maximum fill line or below the minimum fill line.
- Avoid contact with steam escaping from the spout or lid during and after boiling.
- Always unplug the kettle from the power outlet when not in use and before cleaning.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your ADLER EUROPE Compact Electric Kettle.



Image 2.1: The ADLER EUROPE Compact Electric Kettle AD1372. This image shows the overall design of the kettle, including its white body, stainless steel accents, handle, and spout.

- **Kettle Body:** Stainless steel interior with a white exterior.
- **Lid:** Hinged lid for easy filling.
- **Handle:** Ergonomically designed for comfortable pouring.
- **Power Switch:** Located on the handle for easy operation.
- **Indicator Light:** Illuminates when the kettle is boiling.
- **Spout:** Designed for controlled pouring.
- **Power Base:** Cordless 360-degree swivel base.

3. SETUP

Before first use, follow these steps to prepare your kettle.

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before using for the first time, fill the kettle with clean water up to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. **Placement:** Place the power base on a stable, flat, dry, and heat-resistant surface, away from the edge of the countertop. Ensure the power cord is not dangling where it can be pulled or tripped over.

4. OPERATING INSTRUCTIONS

Follow these steps to safely boil water with your electric kettle.

1. **Filling the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum mark indicated inside the kettle. Close the lid securely.



Image 4.1: Interior of the kettle showing the 'MAX' fill line. This indicates the maximum water level to prevent overflow during boiling.

2. **Placing on Base:** Place the kettle firmly onto its power base. Ensure it is properly seated.
3. **Connecting to Power:** Plug the power cord into a suitable electrical outlet.
4. **Boiling Water:** Press the power switch down to the 'ON' position. The indicator light will illuminate, signaling that the kettle is heating. The kettle will automatically switch off once the water has boiled. The indicator light will turn off.



Image 4.2: Close-up of the kettle's handle and power switch. The switch is used to initiate the boiling process.



Image 4.3: The kettle with its indicator light illuminated, signifying that the heating element is active and water is being boiled.

5. **Pouring:** Carefully lift the kettle from its base and pour the hot water slowly and steadily. Be cautious of hot steam.



Image 4.4: A hand pouring hot water from the kettle into a cup. This demonstrates the proper technique for safe pouring.

6. **After Use:** Unplug the kettle from the power outlet when not in use.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your kettle.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
3. **Interior Cleaning:** The interior can be cleaned with a soft brush or sponge. Rinse thoroughly with clean water.
4. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with a mixture of one part white vinegar and two parts water.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.

- Empty the kettle and rinse thoroughly several times with fresh water.
- If necessary, repeat the process. Alternatively, use a commercial descaling solution following the manufacturer's instructions.

5. **Storage:** When not in use, store the kettle in a dry place. You can wrap the power cord around the base for neat storage.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base. Power switch not engaged.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on the power base. Press the power switch firmly.
Kettle switches off before boiling.	Too much limescale buildup. Kettle was filled with too little water.	Descale the kettle as per maintenance instructions. Ensure water is filled above the minimum level.
Water tastes unusual.	New kettle smell. Residue from initial use.	Perform the initial cleaning process (boil and discard water) several times.
Lid does not close properly.	Obstruction or damage.	Check for any foreign objects preventing the lid from closing. If damaged, contact customer support.

7. SPECIFICATIONS

Technical details for the ADLER EUROPE Compact Electric Kettle AD1372.

- **Model:** AD1372
- **Brand:** ADLER EUROPE
- **Capacity:** 0.6 Liters
- **Material:** Stainless Steel (interior), Durable Plastic (exterior)
- **Color:** White
- **Special Feature:** Portable
- **Voltage:** 100.0 V
- **Wattage:** 800 watts
- **Item Dimensions (L x W x H):** 7.48" x 4.92" x 7.48"
- **Item Weight:** 0.62 Kilograms
- **Product Care Instructions:** Hand wash, Wipe clean

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact ADLER EUROPE customer service. Keep your proof of purchase for any warranty claims.

For further assistance, visit the official ADLER EUROPE website or contact their customer support channels.

