

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Ufesa](#) /

> [Ufesa Advanced Care 3200W Steam Iron User Manual](#)

Ufesa 80105715

Ufesa Advanced Care 3200W Steam Iron User Manual

Model: 80105715

1. INTRODUCTION

Thank you for choosing the Ufesa Advanced Care 3200W Steam Iron. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference. This iron is designed to make your ironing tasks easier with its powerful steam output and advanced features.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic safety precautions:

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the iron, power cord, or plug in water or any other liquid.
- Unplug the iron from the power outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children.
- The soleplate of the iron can become extremely hot. Avoid direct contact with skin.
- Place the iron on a stable, heat-resistant surface when resting.
- Do not operate the iron if it has been dropped, damaged, or if the power cord is damaged. Contact authorized service personnel for repair.
- Use the iron only for its intended household purpose.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Ufesa Advanced Care Steam Iron:



This image displays the Ufesa Advanced Care steam iron. Key visible components include the water tank, steam control dial, spray button, steam boost button, temperature control, and the ceramic soleplate. The iron features a white and blue color scheme with a comfortable handle and a flexible power cord connection.

1. Water Filling Inlet
2. Spray Nozzle
3. Steam Control Dial
4. Spray Button
5. Steam Boost Button
6. Temperature Control Dial
7. Indicator Light
8. Water Tank
9. Ceramic Soleplate
10. Power Cord

4. SETUP

4.1 Before First Use

Remove any protective film or stickers from the soleplate. It is recommended to iron an old piece of fabric for a few minutes to remove any manufacturing residues from the soleplate and steam vents. A slight odor or smoke may occur during the first use; this is normal and will dissipate quickly.

4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control dial to the 'Dry Ironing' position (no steam).

3. Open the water filling inlet cover.
4. Fill the water tank with clean tap water up to the 'MAX' level indicator. Do not overfill.
5. Close the water filling inlet cover securely.

For optimal performance and to prolong the life of your iron, it is recommended to use distilled or demineralized water, especially in areas with hard water.

5. OPERATING INSTRUCTIONS

5.1 Temperature Setting

1. Plug the iron into a suitable power outlet.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the garment's care label.
3. The indicator light will illuminate, indicating the iron is heating up.
4. Once the desired temperature is reached, the indicator light will turn off. The iron is now ready for use. The light will cycle on and off during ironing to maintain the set temperature.

5.2 Steam Ironing

Steam ironing is suitable for most fabrics, except for very delicate ones. Ensure the water tank is filled.

1. Set the temperature control dial to the 'Steam' zone (usually indicated by three dots or a steam symbol). Steam will only be produced at higher temperatures.
2. Once the indicator light turns off, adjust the steam control dial to the desired steam level.
3. Begin ironing.

5.3 Steam Boost (Shot of Steam)

For stubborn creases, press the steam boost button. This provides an extra burst of steam (up to 230g/min). Wait a few seconds between shots to allow the iron to reheat and build up steam pressure.

5.4 Vertical Steaming

The steam boost function can also be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam boost button.

5.5 Spray Function

Press the spray button to lightly moisten dry areas of fabric, making it easier to iron out creases.

5.6 Dry Ironing

For dry ironing, ensure the water tank is empty or set the steam control dial to the 'Dry Ironing' position (no steam). Set the temperature according to the fabric type.

6. MAINTENANCE AND CLEANING

6.1 After Each Use

1. Unplug the iron and allow it to cool down completely.
2. Empty any remaining water from the tank.
3. Store the iron upright on its heel to protect the soleplate.

6.2 Cleaning the Soleplate

To clean the soleplate, wipe it with a damp cloth and a non-abrasive cleaner once the iron has cooled down. Do not use metallic scourers or abrasive cleaners as they can damage the soleplate.

6.3 Anti-Calc System (3-in-1)

Your Ufesa Advanced Care iron features a 3-in-1 anti-calc system to prevent limescale buildup and ensure long-lasting steam performance. This system includes:

- **Self-Cleaning Function:** Periodically use the self-clean function (refer to specific instructions in the full manual if available, or generally by filling the tank, heating the iron, and pressing the self-clean button over a sink).
- **Anti-Calc Shot:** This refers to the steam boost function which helps flush out mineral deposits.
- **Anti-Calc Cartridge:** The iron is equipped with an internal anti-calc cartridge that helps filter water and reduce limescale. This cartridge typically does not require replacement but contributes to the iron's longevity.

7. TROUBLESHOOTING

If you encounter issues with your iron, please check the following before contacting customer service:

- **Iron not heating:** Ensure the iron is properly plugged into a working power outlet and the temperature dial is set correctly.
- **No steam:** Check if the water tank is filled, the temperature is set to the steam zone, and the steam control dial is open. Allow sufficient time for the iron to heat up.
- **Water leaking from soleplate:** This can occur if the temperature is too low for steam production. Ensure the iron is hot enough before using steam. Do not overfill the water tank.
- **White flakes on clothes:** This indicates limescale buildup. Perform the self-cleaning function.

For persistent problems, please contact Ufesa customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Ufesa
Model Name	Advanced Care
Model Number	80105715
Power	3200W
Soleplate Material	Ceramic
Dimensions (L x W x H)	12 x 20 x 0.1 cm (Note: This dimension seems unusually small for an iron, likely referring to a specific part or packaging. Please refer to product packaging for accurate full dimensions.)
Weight	500 g (Note: This weight seems unusually light for an iron. Please refer to product packaging for accurate weight.)

9. WARRANTY AND SUPPORT

Warranty information is typically provided with your product at the time of purchase. Please refer to the warranty card or documentation included in the product packaging for details on coverage and terms.

For technical assistance, spare parts, or any questions regarding your Ufesa Advanced Care Steam Iron, please contact Ufesa customer support through their official website or the contact information provided in your product documentation.