

[Manuals.plus](#) /

> [Nutricook](#) /

> Nutricook Electric Air Fryer 5.2L, Model NC-AFE152M-RG - User Manual

Nutricook NC-AFE152M-RG

Nutricook Electric Air Fryer 5.2L

MODEL: NC-AFE152M-RG

Introduction

Thank you for choosing the Nutricook Electric Air Fryer. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

This air fryer features **ProCyclone Technology** for faster, more powerful air circulation, ensuring evenly cooked and crispy results. Its user-friendly design includes intuitive controls and a clear viewing window with internal lighting, allowing you to monitor cooking progress without opening the basket. The 5.2-liter capacity is ideal for preparing a variety of dishes for the whole family. All food-contact parts are made from PFOA-free and BPA-free non-stick materials and are dishwasher safe for easy cleaning.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure the appliance is placed on a stable, heat-resistant surface.
15. Do not block any ventilation openings.

Product Components

The Nutricook Electric Air Fryer comes with the following main components:

- Main Air Fryer Unit
- Non-stick Air Fryer Basket
- Removable Non-stick Cooking Tray

Includes



1500W Air Fryer Essentials Classic Vision



Non-stick Air Fryer Basket



Removable Non-stick
Cooking Tray

Image: Nutricook Air Fryer with its included non-stick basket and removable cooking tray.

Setup

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wash the air fryer basket and cooking tray with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the main unit with a damp cloth.

3. **Position:** Place the air fryer on a stable, level, and heat-resistant surface, ensuring adequate space (at least 10 cm) around the back and sides for proper ventilation.
4. **Insert Tray and Basket:** Place the cooking tray into the air fryer basket, then slide the assembled basket into the main unit until it clicks securely into place.
5. **Power On:** Plug the power cord into a grounded wall outlet. The appliance is now ready for use.

Operating Instructions

Basic Operation

1. **Prepare Food:** Place your ingredients into the air fryer basket, ensuring not to overfill. For best results, food should be in a single layer or shaken periodically.
2. **Set Temperature:** Use the temperature control dial to select the desired cooking temperature. The range is typically from 80°C to 200°C (175°F to 400°F).
3. **Set Time:** Use the timer dial to set the required cooking time. The air fryer will automatically shut off once the timer reaches zero.
4. **Start Cooking:** The air fryer will begin heating once the timer is set. The internal light allows you to monitor cooking progress through the clear window.

Easy to Use

Effortless cooking with just two simple control dials.



Image: Easy-to-use control dials for setting time and temperature.

ProCyclone Technology

The Nutricook Air Fryer utilizes advanced ProCyclone Technology to circulate hot air rapidly and powerfully around your food. This ensures even cooking and a consistently crispy exterior with minimal oil. For optimal results, ensure food is not overcrowded in the basket to allow for proper air circulation.

ProCyclone Technology

Creates faster and more powerful air circulation
delivering even and crispy results



Image: Visual representation of ProCyclone Technology for even and crispy cooking.

Clear Window and Internal Light

The integrated clear viewing window and internal light allow you to observe your food as it cooks without needing to open the air fryer basket. This helps maintain consistent cooking temperatures and prevents heat loss.

Clear Window and Internal Light

Experience the magic of seeing your food cook to perfection without opening the basket



Image: The clear window and internal light feature of the air fryer.

5.2L Capacity

With a generous 5.2-liter capacity, this air fryer can accommodate larger portions, making it suitable for family meals or entertaining guests. This capacity allows for cooking a variety of dishes, from appetizers to main courses.

5.2L Capacity

From flavorful bites to savory feasts, there's room for every dish



Image: Demonstrating the 5.2L capacity of the air fryer basket.

Cleaning and Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Nutricook Air Fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Tray:** The non-stick air fryer basket and cooking tray are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials that could damage the non-stick coating.
3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. For the interior, use a damp cloth and mild detergent if necessary. Do not immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are dry before storing the appliance in a cool, dry place.

Easy to Clean

Dishwasher-safe, non-stick cooking tray and air fryer basket make clean up quick and easy

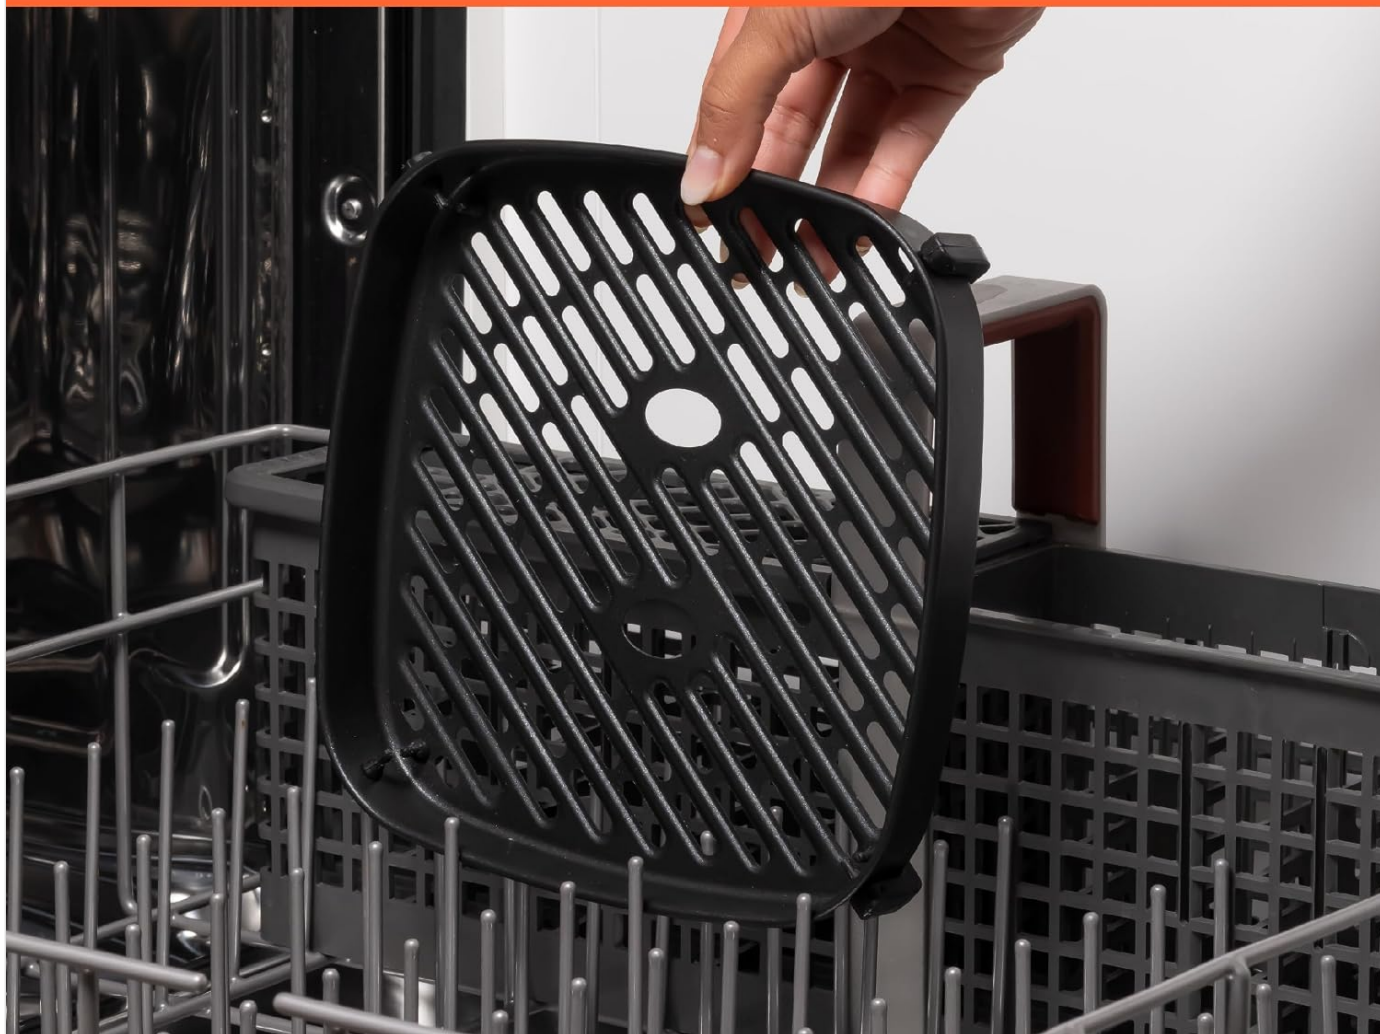


Image: The removable cooking tray is dishwasher-safe for convenient cleaning.

Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Timer not set.	Ensure the power cord is securely plugged into a grounded outlet. Set the timer to the desired cooking duration.
Food is not cooked evenly.	Basket is overcrowded. Temperature too low.	Do not overcrowd the basket; cook in smaller batches if necessary. Increase the cooking temperature. Shake or flip food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods). Temperature too low. Cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time. Ensure food is not overcrowded.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and tray thoroughly after each use. Pat dry oily foods before air frying.
Appliance smells during first use.	Normal for new appliances.	This is normal and will dissipate after a few uses. Ensure good ventilation.

Specifications

Feature	Detail
Brand	Nutricook
Model Number	NC-AFE152M-RG
Color	Grey
Product Dimensions (L x W x H)	37 x 29 x 27.6 cm
Capacity	5.2 Liters
Power / Wattage	1800 Watts
Electrical Output	1500 Watts
Material	Plastic
Automatic Shutoff	Yes
Special Features	Automatic shut-off, Temperature control, Programmable, Stain resistant
Item Weight	4.6 Kilograms
Recommended Uses	Roasting, Drying, Defrosting, Baking, Grilling

Warranty and Support

Nutricook products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Nutricook website.

If you encounter any issues or have questions regarding your Nutricook Electric Air Fryer, please contact our customer support team:

- **Website:** www.nutricook.com
- **Email:** support@nutricook.com
- **Phone:** (Refer to your regional support contact information)

Please have your model number (NC-AFE152M-RG) and purchase date ready when contacting support.

