



Manuals.plus /

› Goshyda /

› RG10B (E2) BGEF Universal Remote Control for Midea Air Conditioner User Manual

Goshyda RG10B(E2) BGEF

Universal Remote Control User Manual

Model: RG10B(E2) BGEF

1. INTRODUCTION

This manual provides comprehensive instructions for the **Goshyda RG10B(E2) BGEF Universal Remote Control**, specifically designed for use with **Midea Air Conditioners**. It is an ideal replacement for lost or damaged original remote controls, offering full access to all necessary functions for your Midea AC unit.

Key Features:

- **Applicable Models:** Specifically compatible with Midea AC units that use the RG10B(E2) BGEF remote model.
- **Durable Material:** Constructed from high-quality ABS material, ensuring wear resistance, durability, and pressure resistance.
- **Ergonomic Design:** Features highly flexible buttons with a comfortable tactile feel for ease of use.
- **Full Functionality:** Provides easy and complete access to all air conditioner functions.

Package Contents:

- 1 x RG10B(E2) BGEF Universal Air Conditioner Remote Control

2. SAFETY INFORMATION

Please read and understand the following safety precautions before using the remote control to ensure safe and proper operation.

- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline and carbon-zinc).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. SETUP AND BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Gently slide or lift the cover to open it. Some models may require a small screwdriver to loosen a screw before sliding the cover.
2. **Insert Batteries:** Insert two new AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. **Close the Compartment:** Replace the battery compartment cover by sliding or pressing it back into place until it clicks securely.



Figure 3.1: Back view of the remote control, indicating the battery compartment.

After installing the batteries, the remote control is ready for use. No pairing or complex setup is typically required for this universal replacement remote for Midea AC units.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on the remote control to effectively operate your Midea air conditioner.







Figure 4.1: Front view of the remote control with button layout.

Button Functions:

Button	Function
	

Button		Function
Power (	Turns the air conditioner ON or OFF.
Mode		Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
SET / OK		Used to confirm selections or enter/exit settings menus.


Button	Function
 <p>Up (</p> <p>) / Down</p>	

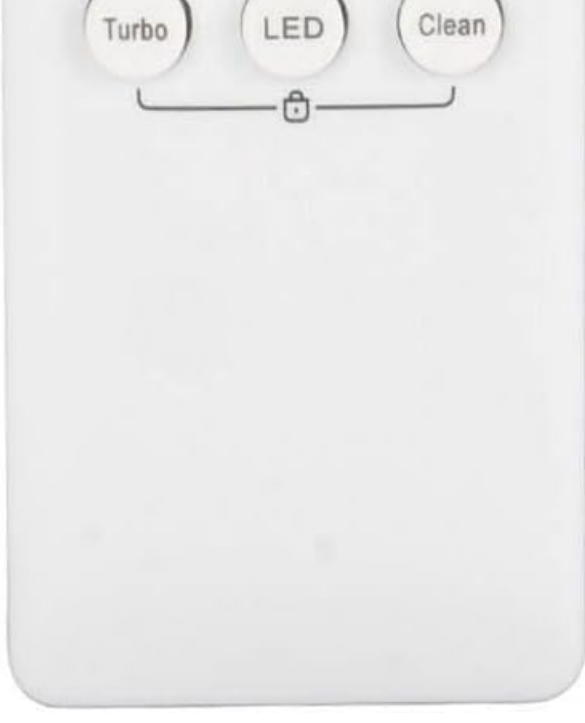

Button

Function




Adjusts temperature settings, timer settings, or navigates menus.

Button	Function
	
	<p>Fan ()</p> <p>Adjusts fan speed (e.g., Low, Medium, High, Auto).</p>

Button		Function
Swing		Controls the vertical swing of the air conditioner's louvers.
Turbo		Activates rapid cooling or heating for quick temperature changes.
LED		Turns the display light on the air conditioner unit ON or OFF.
Clean		Activates the self-cleaning function of the air conditioner (if available).
		

Button		Function
Sleep (	<p>Activates or deactivates the sleep mode, which adjusts temperature for comfortable sleep.</p>
		

Button		Function
Time (	Used for setting the timer for automatic ON/OFF operations.

To operate, point the remote control directly at the air conditioner's receiver. Ensure there are no obstructions between the remote and the unit. The maximum effective range is approximately 10 meters.



ABS material
Wear resistant and durable
Resistant to pressure and toughness

Figure 4.2: Remote control in use, demonstrating its durable ABS material.



Highly flexible buttons
Ergonomic design
Buttons feel comfortable in your hand

Figure 4.3: Ergonomic design and flexible buttons for comfortable use.

5. MAINTENANCE

Cleaning the Remote Control:

- Wipe the surface of the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or corrosive liquids, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote control's range decreases, or if the display becomes dim or unresponsive. Follow the steps in the "Setup and Battery Installation" section (Section 3) to replace the batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control range is short or intermittent.	Low batteries; Obstruction between remote and AC unit; Remote sensor on AC unit is dirty or blocked.	Replace batteries; Remove any obstructions; Clean the sensor area on the AC unit.
Buttons are unresponsive or sticky.	Dirt or debris under buttons; Internal damage.	Clean the remote control surface; If problem persists, the remote may need replacement.
AC unit does not respond to remote.	Remote is not compatible with the specific Midea AC model; AC unit is off or unplugged.	Verify AC model compatibility with RG10B(E2) BGEF; Ensure AC unit has power.

7. SPECIFICATIONS

Product Type: Universal Air Conditioner Remote Control

Remote Model: RG10B(E2) BGEF

Brand: Goshyda

Compatible AC Brand: Midea

Material: ABS

Power Supply: 2 x AAA Batteries (not included)

Maximum Operating Range: Approximately 10 meters (33 feet)

Manufacturer's Item Model Number: Goshydaqiko7wg39g

ASIN: B0CQ34FFX4

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any warranty claims, technical support, or product inquiries, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any support requests.