

[Manuals.plus](#) /

› [Furby](#) /

› Furby Furbles Sno-Way Holiday Edition Mini Friend (Model G0398) Instruction Manual

Furby G0398

Furby Furbles Sno-Way Holiday Edition Mini Friend (Model G0398) Instruction Manual

Your guide to endless festive fun with your new Furbles friend.

1. INTRODUCTION

Welcome to the world of Furbles! This manual provides essential information for setting up, operating, and maintaining your Furby Furbles Sno-Way Holiday Edition Mini Friend. Designed for ages 6 and up, this interactive electronic plush toy offers over 45 festive tunes and sounds, speaking exclusively in Furbish.

2. WHAT'S IN THE BOX

- 1 Furbles Sno-Way figure
- 1 Keychain clip

3. SETUP

3.1. Battery Installation

Your Furbles Sno-Way comes with 3 A76/LR44 button cell batteries already installed. If replacement is needed, ensure proper polarity.

3.2. Initial Power-On

The Furbles Sno-Way ships in 'try-me' mode. To fully activate, press the button located on the top of its head. This will power on the toy and activate various Furbish phrases.



HOLIDAY EDITION!
ÉDITION DES FÊTES!
WINTER-EDITION!
¡EDICIÓN FESTIVA!
EDIÇÃO DE NATAL!

45+
&  

SPRACHEN: TÜRKİŞİ
PARLIL: TÜRKİŞİ
SPRACH: TÜRKİŞİ
HABLA TURKISH
TALA TURKISH

TOY SETS: TÜRKİŞİ
TOY SETS: TÜRKİŞİ
TOY SETS: TÜRKİŞİ
JUEGA A ALIMENTAR
ALIMENTAR

Furby Furblets



G0398

1.5V

6+

Hasbro



Image: Furby Furbles Sno-Way packaging, showing the toy inside and key features like '45+ Sounds' and '6+' age recommendation.



Image: Close-up of the Furblets Sno-Way, highlighting the power button located on top of its head.

4. OPERATING YOUR FURBLETS SNO-WAY

Your Furblets Sno-Way offers multiple ways to interact and activate its over 45 sounds and holiday music:

- **Press the Beak:** Gently press the beak to hear fun feeding noises.
- **Tap the Heart Gem:** Tap the heart-shaped gem on its forehead to activate various musical tunes.
- **Press the Top of the Head:** This button powers the toy on and off, and also triggers fun Furbish phrases.
- **Peekaboo Ears:** Fold one or both ears down, then press the top of the head to make them pop back up.
- **Harmonize with Other Furblets:** If you have multiple Furblets (sold separately), place them near each other, and they will sing together.

- **Works with Furby (2023 Edition):** Activate Furdar mode on your 2023 Furby (sold separately) to hear what Furby has to say about its "dee noo-lahs" (little friends).



Image: Furbles Sno-Way with arrows pointing to the beak (feeding sounds), heart gem (music), and top of head (power/Furbish phrases).



Image: A hand tapping the heart gem on the Furblets Sno-Way to activate music.



Image: A hand pressing the beak of the Furbles Sno-Way, indicating activation of feeding noises.



Image: A hand pressing the head of the Furbles Sno-Way, demonstrating the peekaboo ears popping open.



Image: Two Furblets, Sno-Way and another, sitting side-by-side, illustrating their ability to harmonize.



Image: A Furbles Sno-Way interacting with a larger Furby, demonstrating compatibility.

Video: Official product video showcasing various Furbles interacting, playing music, and demonstrating features like ear movement and keychain clip.

5. KEYCHAIN CLIP FOR ON-THE-GO FUN

Your Furbles Sno-Way comes with a removable keychain clip, allowing you to easily attach it to backpacks, travel bags, or belt loops. This makes it convenient to take your mini friend wherever you go.



Image: Furblets Sno-Way attached to a backpack with its keychain clip.



Image: Furblets Sno-Way with its attached keychain clip, ready for portability.

6. MAINTENANCE

To keep your Furblets Sno-Way clean, use a soft, damp cloth for surface cleaning only. Do not immerse in water.

7. TROUBLESHOOTING

7.1. No Sound or Intermittent Play

- Check the batteries. Ensure they are correctly inserted and not depleted. Replace all three A76/LR44 batteries if necessary.
- Ensure the toy is not in 'try-me' mode. Press the top of the head firmly to fully activate.

7.2. Ears Not Popping Up

- Ensure the top of the head is pressed firmly after folding the ears down.

- Check for any obstructions around the ear mechanism.

8. SPECIFICATIONS

Feature	Detail
Model Number	G0398
Product Dimensions	3.74 x 2.13 x 5 inches
Item Weight	3.52 ounces
Batteries Required	3 x A76/LR44 Button Cell Batteries (included)
Recommended Age	6 years and up
Language	Furbish (does not speak human languages)

9. SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

This toy is intended for play on a tabletop or similar surface. No specific directions are required beyond the interactive features described.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.

