

Yoidesu Yoidesuk3bx28ifgt

Yoidesu 5K Handheld Camcorder User Manual

Model: Yoidesuk3bx28ifgt
Brand: Yoidesu

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Yoidesu 5K Handheld Camcorder. Please read this manual thoroughly before operating the device and retain it for future reference.

The Yoidesu 5K Handheld Camcorder is a portable video camera designed for vlogging, travel, and daily life capture. It features a 5K 30fps video recording capability, a 36MP photo sensor, a rotatable 3.5-inch IPS touchscreen, and a 120-degree wide-angle lens. Key features include 10x digital zoom, infrared night vision, and various shooting modes.



Image 1.1: Overview of the Yoidesu 5K Handheld Camcorder, highlighting its compact design and rotatable screen.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- Yoidesu 5K Handheld Camcorder
- Camera Battery (3250mAh)
- USB Charging Cable
- User Manual (this document)

Note: A Micro SD card is required for recording and is not included in the package.

3. SETUP

3.1 Charging the Battery

The camcorder is equipped with a built-in 3250mAh high-capacity battery. Before first use, fully charge the battery.

1. Connect the provided USB charging cable to the camcorder's USB port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off (refer to the device's LED indicators for specific behavior).

A full charge can provide up to 360 minutes of 5K 30fps footage. The camera supports simultaneous usage and charging.

3.2 Inserting a Micro SD Card

A Micro SD card (not included) is required to store photos and videos.

1. Locate the Micro SD card slot on the camcorder.
2. Gently insert the Micro SD card into the slot with the contacts facing the correct direction until it clicks into place.
3. To remove, gently push the card in again until it springs out.

Ensure the card is formatted by the camera before first use for optimal performance.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press and hold the power button (usually located on the side or top) for a few seconds to turn the camcorder on or off.

4.2 Using the 3.5-inch Rotatable Touchscreen

The 3.5-inch IPS touchscreen allows for intuitive control and real-time viewing. It can be rotated 180 degrees for various shooting angles, including selfie mode.

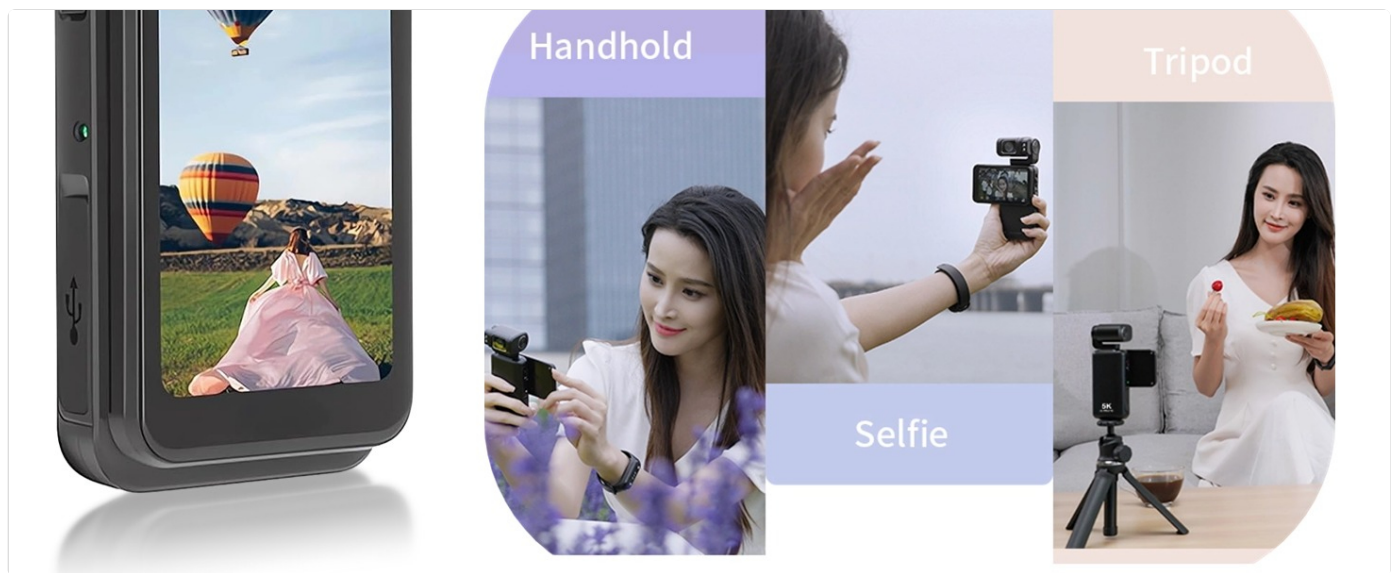


Image 4.1: The rotatable touchscreen supports both vertical and horizontal viewing and shooting.

4.3 Lens Rotation

The camcorder's lens can be rotated 180 degrees, offering flexibility for different shooting perspectives without repositioning the entire device.

3.5in Rotatable IPS Touch Screen



Image 4.2: The 180-degree rotating lens allows for versatile shooting angles.

4.4 Shooting Modes and Features

The camcorder offers a variety of modes and features to enhance your recording experience:

- **5K 30fps Video Recording:** Capture high-resolution video with smooth motion.
- **36MP Photo Shooting:** Take detailed still images.
- **10x Digital Zoom:** Magnify your subject digitally.
- **Infrared Night Vision:** Record in low-light conditions using IR lamps.
- **Time-lapse Photography:** Condense long events into short videos.
- **8x Slow Motion:** Capture fast-paced action in slow motion.
- **Continuous Shooting (Burst Mode):** Take multiple photos in quick succession.
- **Vertical Shooting:** Optimized for social media content.
- **Wide Dynamic Range (WDR):** Improves image quality in high-contrast scenes.
- **Long Exposure:** Capture brighter images in low light.

- **AE L Exposure Lock:** Lock exposure settings for consistent lighting.
- **White Balance:** Adjust color temperature for accurate colors.
- **EV Exposure Compensation:** Manually adjust exposure levels.

120° Ultra-Vide Angle



Image 4.3: Examples of various shooting modes available on the camcorder.

4.5 Infrared Night Vision

Activate infrared night vision to record clear black-and-white footage in dark environments. The camcorder utilizes 2 IR lamps for illumination.

WDR Mode-Capture More Light Details

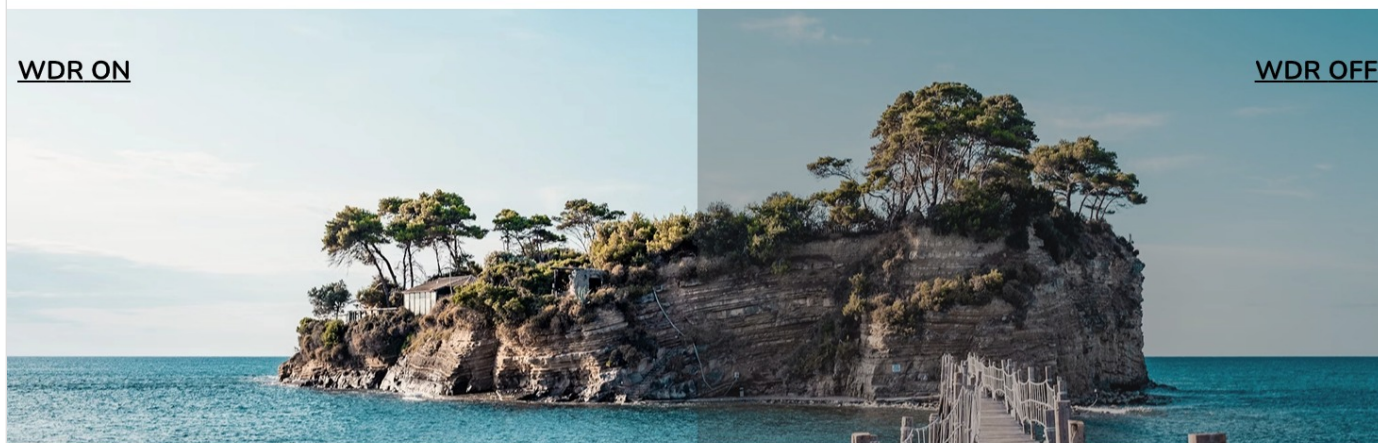


Image 4.4: Demonstration of IR Night Vision, producing clear black-and-white images in low light.

4.6 Wide Dynamic Range (WDR)

Enable WDR mode to capture more detail in both bright and dark areas of a scene, preventing overexposure and underexposure.

180° Rotating Lens-Optional Shooting Angle



Image 4.5: WDR mode enhances detail in high-contrast lighting conditions.

4.7 Long Exposure

Utilize long exposure settings to allow more light into the sensor, resulting in brighter images, especially useful in low-light environments.

IR Night Vision Shooting-2 IR Lamps

Sharp black-and-white images when IR is in poor light

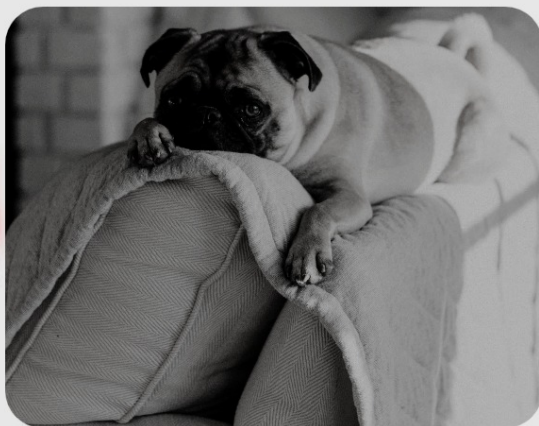


Image 4.6: Long exposure brightens images in challenging lighting.

4.8 Wi-Fi Connectivity

Connect the camcorder to your smartphone via Wi-Fi for remote control, image preview, and sharing through a dedicated application.

4.9 USB Streaming

The camcorder supports USB streaming, allowing it to function as a webcam when connected to a computer.



Image 4.7: The camcorder's versatility in different usage scenarios, including webcam functionality.

5. MAINTENANCE

5.1 Cleaning the Camcorder

- Use a soft, dry cloth to clean the body of the camcorder.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

5.2 Storage

- Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- Remove the Micro SD card if not in use.

6. TROUBLESHOOTING

If you encounter issues with your Yoidesu 5K Handheld Camcorder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camcorder does not power on.	Battery is depleted or not inserted correctly.	Charge the battery fully. Ensure the battery is correctly inserted.
Cannot record video/take photos.	No Micro SD card inserted, card is full, or card is not formatted.	Insert a Micro SD card. Delete unnecessary files or replace the card. Format the card via camera settings.
Poor image/video quality.	Lens is dirty, insufficient lighting, or incorrect settings.	Clean the lens. Ensure adequate lighting or use night vision/long exposure. Adjust exposure, white balance, or WDR settings.

Problem	Possible Cause	Solution
Wi-Fi connection issues.	Incorrect Wi-Fi settings or app issues.	Ensure Wi-Fi is enabled on the camcorder and smartphone. Reinstall the companion app.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	Yoidesuk3bx28ifgt
Brand	Yoidesu
Video Capture Resolution	5K
Photo Sensor Technology	CMOS (1/2.5 inch)
Screen Size	3.5 Inches (Rotatable IPS Touchscreen)
Maximum Aperture	2.2 Millimeters
Flash Memory Type	Micro SD
Connectivity Technology	Wi-Fi
Special Features	Built-In Flash, Infrared Night Vision, 10x Digital Zoom, 120° Wide Angle
Item Weight	1.04 pounds
Battery Capacity	3250mAh
Video Capture Format	MP4
Supported Audio Format	AAC

8. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation provided with your purchase or contact Yoidesu customer support directly. Protection plans may be available for purchase separately.

For further assistance, product updates, or to explore other Yoidesu products, please visit the official Yoidesu Store: [Yoidesu Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQ43TDR4>

More documents and user manuals: <https://manuals.plus/>