



[Manuals.plus](#) /

› [CYBERDOT](#) /

› CYBERDOT A16 Wireless Earbuds User Manual

## CYBERDOT A16

# CYBERDOT A16 Wireless Earbuds User Manual

Model: A16

## INTRODUCTION

Thank you for choosing the CYBERDOT A16 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features for daily use, sports, and entertainment. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Figure 1: CYBERDOT A16 Wireless Earbuds and Charging Case.

## PACKAGE CONTENTS

Please check the package for the following items:

- Wireless Charging Case
- USB-C Charging Cable
- Multiple Sizes of Eartips
- User Manual
- Ear Cushions (Wingtips)

## KEY FEATURES

### Clear Call and Stereo Sound

Experience multi-layered stereo sound with powerful bass, bright treble, and clear midrange for natural and penetrating audio.



Figure 2: Internal components for superior sound quality.

Your browser does not support the video tag.

Video 1: Demonstrating HD Sound Quality and features of the earbuds.

### Wireless Charging and IPX5 Waterproof

The charging case supports both wireless charging (charger not included) and USB-C charging, reaching full power in approximately 2 hours. With an IPX5 waterproof rating, these earbuds are suitable for sports, running, and reading, offering resistance to sweat and light rain.

## Support Wireless Charging and USB C Charging



Figure 3: Charging options for the A16 earbuds.

### Bluetooth 5.3 and One-Step Pairing

Equipped with Bluetooth 5.3, these earbuds ensure stable, low-power transmission and extended range, compatible with most Bluetooth devices. After the initial connection, simply take the earbuds out of the case, and they will automatically pair

with your device.

Your browser does not support the video tag.

Video 2: Overview of True Wireless Bluetooth Sports Earbuds features, including Bluetooth 5.3, secure fit, and touch controls.

### LED Power Display and 64 Hours Playback

The LED digital display on the charging case shows the power level of the case and the charging status of each earbud. Each earbud provides up to 8 hours of playtime per charge, with the case offering 3 additional charges for a total of 64 hours of playback.

## Digital LED Power Display

Quickly Check the Earbuds' Charging Process and the Remaining Capacity of the Charging Case



Figure 4: LED display for battery status.

# 64 Hours Playback Time with Charging Case

**2hrs**

Case Charging Time

**8hrs**

Earbuds Playtime

**64hrs**

With Charging Case



Figure 5: Extended playback time with the charging case.

## Soft Wingtips and Smart Touch Control

The ergonomic design includes soft ear wings for a secure and comfortable fit, with multiple sizes of eartips for customization. Smart touch controls allow easy management of music, calls, and voice assistance without needing to access your phone.

# Flexible And Secure-Fit Wingtips

The Comfortable and Soft Ear Wingtips Fit Snugly Over the Ear, Providing a Comfortable Feel Throughout the Day.



Figure 6: Flexible and secure-fit wingtips for comfortable wear.

## SETUP GUIDE

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- **USB-C Charging:** Connect the provided USB-C cable to the charging port on the case and to a USB power adapter (not included).
- **Wireless Charging:** Place the charging case on a compatible wireless charging pad (not included).
- The LED display on the case will show the charging progress. A full charge takes approximately 2 hours for the case.

### 2. Pairing with Your Device

The earbuds feature one-step automatic pairing.

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device, search for "A16" in the Bluetooth settings and select it to connect.
4. Once connected, the earbuds will automatically pair with your device every time you open the case and take them out.

### 3. Wearing the Earbuds

For optimal sound and comfort, choose the correct eartip size and adjust the wingtips.

- Select the eartips that provide a snug fit in your ear canal.
- Insert the earbuds into your ears, gently twisting them to ensure the soft wingtips are securely tucked into your earlobe. This provides a stable fit, especially during physical activity.

---

## OPERATING INSTRUCTIONS

The A16 earbuds feature smart touch controls on each earbud.

Function	Action
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the Right earbud.
Previous Track	Double tap on the Left earbud.
Answer/End Call	Single tap on either earbud.
Reject Call	Press and hold either earbud for 2 seconds.
Activate Voice Assistant	Triple tap on either earbud.
Volume Up	Press and hold Right earbud.
Volume Down	Press and hold Left earbud.

---

## MAINTENANCE AND CARE

- Clean the earbuds and charging case regularly with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Ensure the charging contacts on both the earbuds and the case are clean and dry before charging.
- While IPX5 rated, avoid submerging the earbuds in water or exposing them to heavy rain for extended periods.
- Store the earbuds in their charging case when not in use to protect them and keep them charged.

---

## TROUBLESHOOTING

- **Earbuds not pairing/connecting:**
  - Ensure Bluetooth is enabled on your device.

- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid and try pairing again.
- Forget "A16" from your device's Bluetooth list and re-pair.
- Ensure earbuds and case have sufficient charge.

- **Only one earbud working:**

- Place both earbuds back into the case and take them out again.
- Check if both earbuds are charged.
- Perform a factory reset (refer to specific instructions if available in a physical manual, otherwise, try forgetting device and re-pairing).

- **Poor sound quality:**

- Ensure earbuds are clean and free of debris.
- Try different eartip sizes for a better seal in your ear canal.
- Move closer to your connected device to avoid interference.

- **Microphone issues during calls:**

- Ensure earbuds are properly connected and selected as the audio input device.
- Clean the microphone openings on the earbuds.
- If issues persist, try placing the earbuds back in the case and reconnecting.

## SPECIFICATIONS

Feature	Detail
Model Name	A16
Brand	CYBERDOT
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Battery Life (Earbuds)	8 Hours
Total Playback Time (with Case)	64 Hours
Charging Time (Case)	2 Hours
Water Resistance Level	IPX5 (Waterproof)
Control Type	Touch Control
Material	Plastic
Item Weight	3.52 ounces

Feature	Detail
UPC	787056920833

## WARRANTY AND SUPPORT

CYBERDOT products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to register your product, please visit the official CYBERDOT website or contact their customer service. Contact information can typically be found on the product packaging or the brand's official online store.

For further assistance, please refer to the contact details provided with your purchase or visit the [CYBERDOT Store on Amazon](#).