

[Manuals.plus](#) /

> [E ECSEM](#) /

> User Manual for E ECSEM Elastic Bands Compatible with HYSTORM HY-G106 Smartwatch

E ECSEM HY-G106

User Manual for E ECSEM Elastic Smartwatch Bands

Compatible with HYSTORM HY-G106 Smartwatch

1. INTRODUCTION

This manual provides essential information for the proper use and care of your E ECSEM Elastic Bands, designed as replacement straps for the HYSTORM HY-G106 smartwatch. These bands offer a comfortable, stylish, and durable alternative to standard watch straps.

The elastic nylon construction ensures a snug yet comfortable fit for various wrist sizes, making them ideal for daily wear and physical activities.

2. PRODUCT FEATURES

- **Compatibility:** Specifically designed for the HYSTORM HY-G106 smartwatch.
- **Material:** Crafted from high-quality elastic Nylon Polyester for comfort and durability.
- **Design:** Innovative elastic sport design with no buckles, allowing for easy on and off.
- **Installation:** Equipped with Quick Release Spring Bars for simple, tool-free attachment and removal.
- **Fit:** Stretchy solo loop wristband suitable for wrist sizes ranging from 5.1 inches to 7.5 inches.
- **Comfort:** Does not stick to skin like silicone bands during sweaty activities, ensuring comfort during workouts.

3. SETUP AND INSTALLATION

Installing your E ECSEM Elastic Band is a straightforward process thanks to the integrated quick-release pins.

1. **Prepare Your Smartwatch:** Ensure your HYSTORM HY-G106 smartwatch is clean and free of debris where the band attaches.
2. **Remove Existing Band (if applicable):** If you have an existing band, locate the quick-release pins on the underside of the watch lugs. Slide the pin inward to detach the band from the watch body. Repeat for both sides.
3. **Attach the New Band:**

- Hold one end of the E ECSEM elastic band. Locate the quick-release pin on the back of the band.
- Insert one end of the pin into the corresponding hole on the watch lug.
- While holding that end in place, slide the quick-release pin lever inward.
- Align the other end of the pin with the opposite hole on the watch lug and release the lever. The pin should snap into place securely.
- Gently tug on the band to ensure it is firmly attached before wearing.

4. **Repeat for the Second Half:** Follow the same steps to attach the second half of the elastic band to the other watch lug.



Image: Rear view of a smartwatch with an elastic band, illustrating the quick-release pin mechanism for easy installation.



Image: Detail of the elastic band showing the quick-release pins ready for attachment.

4. USAGE AND ADJUSTMENT

The E ECSEM Elastic Band is designed for comfortable wear and easy adjustment.

- **Wearing the Band:** Simply slide the elastic band over your hand and onto your wrist. The stretchy material will conform to your wrist size.
- **Adjusting Fit:** While the band is designed to fit snugly, it can be easily adjusted by sliding the band up or down your wrist slightly to find the most comfortable position. The elastic nature allows for minor adjustments without needing to remove the watch.
- **Optimal Fit:** The band is suitable for wrists between 5.1 inches and 7.5 inches in circumference. Ensure the band is not excessively tight to avoid discomfort or restrict circulation, nor too loose to ensure accurate smartwatch sensor readings.



Image: Diagram showing the compatible wrist size range for the elastic band.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your E ECSEM Elastic Band, follow these care instructions:

- **Cleaning:**

- Remove the band from your smartwatch before cleaning.
- Hand wash the band with mild soap and cool water.
- Gently rub to remove any dirt or sweat.
- Rinse thoroughly with clean water.
- Allow the band to air dry completely before reattaching it to your smartwatch. Avoid direct sunlight or high heat, which can damage the elastic fibers.

- **Avoid Harsh Chemicals:** Do not expose the band to strong detergents, bleach, or abrasive cleaners, as these can degrade the material and colors.

- **Storage:** When not in use, store the band in a clean, dry place away from direct sunlight and extreme temperatures.

- **Regular Inspection:** Periodically inspect the band for any signs of wear, fraying, or damage. While durable, continuous use may lead to natural wear over time.

6. SPECIFICATIONS

Attribute	Detail
Product Name	E ECSEM Elastic Bands
Compatibility	HYSTORM HY-G106 Smartwatch
Material	High-quality Elastic Nylon Polyester
Wrist Size Range	5.1 inches - 7.5 inches (13 cm - 19 cm)
Attachment Type	Quick Release Spring Bars
Metal Type	No Metal Type (as per specifications)

7. TROUBLESHOOTING

While E ECSEM Elastic Bands are designed for reliability, here are some common issues and their solutions:

- **Band feels too tight or too loose:**

- Ensure your wrist circumference falls within the 5.1" - 7.5" range.
- The elastic nature allows for slight repositioning on your wrist. Try adjusting its exact placement.
- Over time, elastic materials may stretch slightly. If the band becomes consistently too loose, it may indicate natural wear and tear, and replacement might be considered.

- **Band detaches from smartwatch:**

- Verify that the quick-release pins are fully engaged in the watch lugs. You should hear a click or feel it snap into place.
- Gently tug on the band after installation to confirm it is securely fastened.
- Inspect the quick-release pins for any damage or bending. If damaged, the band may need replacement.

- **Skin irritation:**

- Ensure the band is clean and dry. Accumulated sweat or dirt can cause irritation. Refer to the "Maintenance

and Care" section for cleaning instructions.

- Avoid wearing the band too tightly, which can restrict airflow and cause discomfort.
- If irritation persists, discontinue use and consult a healthcare professional.

8. WARRANTY AND SUPPORT

E ECSEM is committed to providing high-quality products and customer satisfaction. Your E ECSEM Elastic Band comes with a **12-month warranty** from the date of purchase.

This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please do not hesitate to contact E ECSEM customer service. Please have your purchase details ready when contacting support.

You can typically find contact information on the product packaging or through the retailer where you purchased the item.

For Amazon purchases, you can contact the seller "Best_Express(E ECSEM Authorized Store)" via your order history.

© 2023 E ECSEM. All rights reserved.

Product Model: Compatible with HYSTORM HY-G106 Smartwatch