

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ELECOM](#) /

› [ELECOM PET-AF01BK Automatic Pet Feeder User Manual](#)

ELECOM PET-AF01BK

ELECOM PET-AF01BK Automatic Pet Feeder User Manual

Model: PET-AF01BK

1. INTRODUCTION

Thank you for purchasing the ELECOM PET-AF01BK Automatic Pet Feeder. This device is designed to provide scheduled meals for your cat or small to medium-sized dog, ensuring a consistent feeding routine even when you are away. It features a large capacity food tank, precise timer settings, adjustable portion control, and a voice recording function to call your pet at meal times. Please read this manual thoroughly before use to ensure proper operation and maintenance.

Important Note: This product is designed for dry pet food only. Do not use with wet, semi-moist, or canned food.

2. SAFETY PRECAUTIONS

- Always place the feeder on a stable, level surface to prevent tipping.
- Keep out of reach of children and pets when not in use or during assembly.
- Do not immerse the main unit in water or other liquids. Only the food bowl and food tank are washable.
- Ensure the power adapter cable is not chewed by pets, as this can cause electric shock or malfunction.
- Use only the provided AC adapter.
- If using batteries, ensure they are inserted with correct polarity. Remove batteries if the feeder will not be used for an extended period.
- Do not use damaged or modified parts.
- Regularly check the feeder for any damage or blockages.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Main Feeder Unit
- Stainless Steel Food Bowl (x1)
- Dedicated AC Adapter
- Dedicated USB Power Cable
- Desiccant
- User Manual (this document)

詰まり防止機能

もしもフードが詰まっても

プロペラが逆回転して フードを排出します。

プロペラは
シリコン
素材



Image: All components included with the ELECOM PET-AF01BK Automatic Pet Feeder, including the main unit, stainless steel bowl, AC adapter, USB cable, and desiccant.

4. PRODUCT OVERVIEW AND PARTS IDENTIFICATION

Familiarize yourself with the different parts of your automatic pet feeder:

- **Food Tank:** Transparent upper section for storing dry pet food (approx. 4L capacity).
- **Lid:** Top cover with a lock mechanism to secure the food tank.
- **Control Panel:** Front panel with LCD display and buttons for setting time, feeding schedule, and recording voice.
- **Food Outlet:** Where food is dispensed into the bowl.
- **Food Bowl:** Stainless steel bowl for pet food.
- **Base Unit:** Contains electronics, battery compartment, and power input.
- **Desiccant Pocket:** Located under the lid, for keeping food fresh.
- **Anti-Clog Propeller:** Silicone propeller inside the food tank designed to prevent food blockages.

旅行や帰りが遅い日でもいつものごはんで
健康維持をサポート。



時間・量・回数を細かく設定

留守でも
自動給餌

オートフィーダー

AUTO FEEDER

タイマー式自動給餌器 シングルボウル(犬・猫用)

1ボウル給餌 

ドライフード専用

Image: The ELECOM PET-AF01BK Automatic Pet Feeder in white, with a small dog sitting next to it, showcasing its design and size.

音声10秒録音機能

食事の時間に

あなたの声を愛犬愛猫に届けます。

しろ
ちゃ〜ん



Image: A close-up view of the control panel on the ELECOT PET-AF01BK, showing the LCD display and various buttons for operation.

5. SETUP

5.1 Power Supply

The feeder can be powered by the included AC adapter or by batteries (not included) for backup during power outages.

1. **AC Adapter:** Connect the dedicated AC adapter to the feeder's power input port and then plug it into a wall outlet.
2. **Batteries (Backup):** Open the battery compartment on the bottom of the unit. Insert 4 x AA batteries, ensuring correct polarity. This provides backup power in case of a power failure.



Image: A hand inserting AA batteries into the battery compartment of the feeder, demonstrating the backup power option.



Image: A hand connecting the USB power cable to the feeder, illustrating the primary power connection method.

Your browser does not support the video tag.

Video: This video demonstrates the power connection methods, including battery installation and AC adapter connection, for the ELECOM PET-AF01BK Automatic Pet Feeder.

5.2 Filling the Food Tank

1. Open the lid of the food tank.
2. Pour dry pet food into the tank. The maximum capacity is approximately 4 liters (2.2 kg).
3. Ensure the food kibble size is between 2mm and 15mm in diameter and less than 5mm thick to prevent blockages.
4. Place the desiccant packet into the designated pocket under the lid to keep food fresh.
5. Close the lid securely and engage the lock mechanism.

ボウルの質感が新しくなりました

24年11月より
ツヤなしのボウルに切り替わっています。



※切り替え期間中のため、旧仕様または新仕様のいずれかが届く場合がございます。

Image: A hand pouring dry pet food into the transparent food tank of the feeder.



Image: A hand placing a desiccant packet into the dedicated pocket on the underside of the feeder's lid.

いたずら防止機能

転倒してもフードがこぼれにくい

蓋ストッパー付きで、盗み食い防止にもなります。



Image: A close-up of the lid lock mechanism on the ELECOM PET-AF01BK, showing how to secure the food tank.

6. OPERATING INSTRUCTIONS

6.1 Unlocking the Control Panel

To prevent accidental changes, the control panel has a lock function. Press and hold the **Lock button** for a few seconds to unlock the panel before making any settings.

6.2 Setting Current Time

To set the current time on the feeder's display:

1. Unlock the control panel.
2. Press and hold the **Set button** (often represented by a gear or clock icon) until the time display flashes.
3. Use the '+' and '-' buttons to adjust the hour.
4. Press the **Set button** again to switch to minute adjustment. Use '+' and '-' to adjust minutes.
5. Press the **Set button** one more time to save the current time.

6.3 Setting Feeding Schedule and Amount

You can set up to 6 meals per day. Each meal can have a different time and portion size.

1. Unlock the control panel.
2. Press the **Meal button** (often represented by a food bowl icon) to enter meal setting mode. The first meal time will flash.
3. Use the '+' and '-' buttons to adjust the hour for the first meal.
4. Press the **Meal button** again to switch to minute adjustment. Use '+' and '-' to adjust minutes.
5. Press the **Meal button** again to set the portion amount. The portion display (e.g., "01" to "20") will flash. Use '+' and '-' to select the desired number of portions (1 portion \approx 7g, so 1-20 portions \approx 7-140g).
6. Repeat steps 2-5 for subsequent meals (up to 6). After setting the 6th meal, pressing the **Meal button** again will exit the setting mode.

時間通りに給餌できる

シンプル操作で はじめてでも簡単設定

✓ タイマー式で1日 最大6回まで給餌可能

✓ 1回の給餌量は、約7g~140gで設定可能

最大容量 約4L

Image: A close-up of the feeder's control panel showing the display with time and portion settings, illustrating the process of programming meal schedules.

Your browser does not support the video tag.

Video: This video demonstrates how to set the feeding times and portion sizes for the ELECOM PET-AF01BK Automatic Pet Feeder, including adjusting for multiple meals.

6.4 Voice Recording Function

You can record a 10-second voice message that will play at each scheduled mealtime to call your pet.

1. Unlock the control panel.
2. Press and hold the **Record button** (microphone icon) for 3 seconds. The recording indicator will light up.
3. Speak your message into the microphone. The recording will automatically stop after 10 seconds or when you release the button.
4. To play back the recording, briefly press the **Record button**.



Image: A small dog looking towards the feeder, with a speech bubble indicating the voice recording feature, which calls the pet for meals.

Your browser does not support the video tag.

Video: This video demonstrates the voice recording feature, showing how to record a message and how it plays during meal dispensing.

6.5 Manual Feeding

To dispense food manually outside of scheduled times:

1. Unlock the control panel.
2. Briefly press the **Manual Feed button** (often represented by a single food kibble icon). One portion of food will be

dispensed.

3. You can press this button multiple times to dispense more portions.

6.6 Dual Bowl Setup (Optional)

If you have the dual bowl accessory (sold separately or included in some variants), you can split the dispensed food into two bowls. The splitter can be adjusted to distribute food in 7 stages between the two bowls.



Image: The ELECOTM PET-AF01BK Automatic Pet Feeder with a dual bowl setup, showing food dispensed into two separate bowls.

Your browser does not support the video tag.

Video: This video demonstrates the optional dual bowl setup and how to adjust the food distribution between the two bowls using the splitter.

7. MAINTENANCE

7.1 Cleaning

Regular cleaning ensures hygiene and proper functioning of the feeder.

1. Disconnect the power adapter and remove any batteries before cleaning.
2. Remove the food bowl and food tank from the main unit.

3. Wash the food bowl and food tank with mild soap and water. Rinse thoroughly and dry completely before reassembling.
4. Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
5. Ensure all parts are completely dry before adding food and reconnecting power.

ACCESSORIES & SIZE 付属品・サイズ



本体・フードタンク・蓋・トレイ



フードボウル
(ステンレス)



専用AC
アダプター



専用USB給電
ケーブル



乾燥剤

Image: The food tank, lid, and food bowl of the feeder disassembled, ready for cleaning, highlighting their washable nature.

7.2 Desiccant Replacement

Replace the desiccant packet regularly (e.g., monthly) to maintain food freshness, especially in humid environments.

1. Open the lid of the food tank.
2. Remove the old desiccant packet from its pocket.
3. Insert a new desiccant packet.
4. Close the lid securely.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder does not power on.	No power, AC adapter not connected, batteries depleted or incorrectly inserted.	Check AC adapter connection. If using batteries, replace them or ensure correct polarity.
Food is not dispensing.	Food tank empty, food blockage, kibble size too large, dispenser malfunction.	Refill food tank. Check for blockages and clear them. Ensure kibble size is appropriate (2-15mm). The anti-clog propeller should help.
Voice recording not working.	Recording button not held long enough, microphone issue.	Ensure you hold the record button for 3 seconds until the indicator lights up. Try re-recording.
Time/settings are incorrect after power cycle.	No backup batteries or batteries are depleted.	Install fresh AA batteries for backup. Re-set time and schedule.

乾燥剤ポケットに乾燥剤を セットすることでカリカリ長持ち!



Image: A close-up view of the silicone anti-clog propeller inside the food tank, designed to prevent food from getting stuck during dispensing.

9. SPECIFICATIONS

- **Model Number:** PET-AF01BK
- **Brand:** ELECOM
- **Color:** Black
- **Capacity:** Approx. 4 Liters (approx. 2.2 kg dry food)
- **Dimensions (L x W x H):** 26.5 cm x 19.5 cm x 22 cm (excluding food bowl part)
- **Target Animals:** Cats, Small to Medium Dogs
- **Feeding Schedule:** Up to 6 meals per day
- **Portion Size:** 1 to 20 portions (approx. 7g to 140g per meal, 1 portion ≈ 7g)
- **Voice Recording:** Max 10 seconds
- **Power Supply:** Dedicated AC Adapter (included), 4 x AA Batteries (not included) for backup
- **Material:** Stainless steel (bowl)
- **Country of Origin:** China

ACCESSORIES & SIZE 付属品・サイズ



本体・フードタンク・蓋・トレイ



フードボウル
(ステンレス)



専用AC
アダプター



専用USB給電
ケーブル



乾燥剤

10. WARRANTY AND SUPPORT

This product comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. For technical support, troubleshooting assistance, or warranty inquiries, please contact ELECOM customer service. Contact information can typically be found on the official ELECOM website or on the product packaging.