

iWALK MXB008

iWALK Slim Magnetic Wireless Power Bank User Manual

Model: MXB008 | Brand: iWALK

INTRODUCTION

Thank you for purchasing the iWALK Slim Magnetic Wireless Power Bank (Model MXB008). This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Verify that all items are present in your package:

- iWALK Slim Magnetic Wireless Power Bank (MXB008)
- USB-C Charging Cable
- User Manual



Figure 1: Package Contents

PRODUCT FEATURES

- **Slim and Lightweight Design:** Weighs approximately 118g with a thin profile for easy portability.
- **Magnetic Wireless Charging:** MagSafe-compatible for secure attachment and cable-free charging of iPhones.
- **5000mAh Capacity:** Provides sufficient power for on-the-go charging needs.
- **USB-C Input/Output (Max 18W):** Supports both charging the power bank and wired charging for compatible devices up to 18W.

- **LED Digital Battery Display:** Clearly shows the remaining battery percentage.
- **Pass-Through Charging:** Allows simultaneous charging of the power bank and a connected device.
- **PSE Certified:** Complies with PSE technical safety standards.



Figure 2: Slim Design of the Power Bank

SETUP

Initial Charging of the Power Bank

1. Connect the provided USB-C charging cable to the USB-C port on the iWALK power bank.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included).
3. Plug the power adapter into a wall outlet. The LED display on the power bank will show the charging progress.
4. Charge the power bank fully before first use. A full charge takes approximately 3.8 hours.



Figure 3: Charging the Power Bank

Attaching to a MagSafe-Compatible Device

1. Ensure your iPhone is MagSafe-compatible (iPhone 12 series or newer) or has a MagSafe-compatible case.
2. Align the iWALK power bank with the back of your iPhone.
3. The power bank will magnetically snap into place. Ensure a secure connection for optimal wireless charging.



Figure 4: Magnetic Attachment

OPERATING INSTRUCTIONS

Wireless Charging

1. Attach the iWALK power bank to the back of your MagSafe-compatible iPhone.
2. Wireless charging will begin automatically. The LED display on the power bank will activate, showing the remaining battery percentage.
3. To stop wireless charging, simply detach the power bank from your iPhone.

スーパー磁力

Snap & Go



$$\begin{array}{ccc} \text{⚡} & = & \begin{array}{c} \text{300g} \\ \text{300g} \quad \text{300g} \quad \text{300g} \end{array} \\ 12\text{N} & & 1200\text{g} \end{array}$$

Figure 5: Wireless Charging in Progress

Wired Charging (USB-C)

1. Connect one end of a USB-C cable (not included, or use the provided one if charging another device) to the USB-C port on the iWALK power bank.
2. Connect the other end of the USB-C cable to your device that supports USB-C charging.
3. The power bank will begin wired charging your device at up to 18W.



Figure 6: USB-C Port for Wired Charging

LED Digital Battery Display

The integrated LED display shows the remaining battery percentage of the power bank. This allows you to monitor the charge level and plan your recharges effectively.



Figure 7: LED Battery Display

MAINTENANCE

- Keep the power bank dry. Do not expose it to moisture or liquids.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the power bank to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Cable not connected properly; faulty cable/adaptor; power bank fully charged.	Ensure secure connections. Try a different USB-C cable or power adapter. Check LED display for full charge indication.
Device not charging wirelessly	Not MagSafe compatible; improper alignment; phone case too thick; power bank battery low.	Ensure your device is MagSafe compatible. Realign the power bank. Remove thick phone cases. Recharge the power bank.
Device not charging via USB-C	Cable not connected properly; device not compatible; power bank battery low.	Ensure secure connections. Verify device compatibility. Recharge the power bank.

Problem	Possible Cause	Solution
Power bank gets warm during use	Normal operation during charging/discharging.	This is normal. If it becomes excessively hot, discontinue use and contact support.

TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	MXB008
Brand	iWALK
Battery Capacity	5000 mAh
Connector Type	USB Type C
Max Wired Output	18W
Input Voltage	13V (DC)
Input Current	3A
Output Current	3A
Number of Ports	1 (USB-C)
Charging Time (Full)	Approx. 3.8 hours
Product Weight	117.8 grams
Product Dimensions (L x W x H)	10.3 x 6.6 x 1.5 cm
Battery Cell Type	Lithium Ion
Compatible Devices	iPhone 14/13/12/11/XR/X/SE/8/7/6 Pro Max, iPhone 15 Series (iPhone 15, 15 Plus, 15 Pro, 15 Pro Max), iPhone 16 Series (iPhone 16, 16 Plus, 16 Pro, 16 Pro Max), iPhone 17 Series (iPhone 17, 17 Pro, 17 Pro Max)
Origin	China
Manufacturer	U2O Global Co.,Ltd

機種対応

iPhone 15/14/13シリーズ

iPhone 15 Series



iPhone 14 Series



iPhone 13 Series



Mag-safe case



Figure 8: Device Compatibility

SAFETY GUIDELINES

- Do not disassemble, modify, or repair the device.
- Do not expose to fire or high temperatures.
- Keep out of reach of children.
- Dispose of the power bank according to local regulations. Do not dispose of it with household waste.
- Avoid using the power bank in environments with strong electromagnetic fields.

WARRANTY AND CUSTOMER SUPPORT

The iWALK Slim Magnetic Wireless Power Bank (MXB008) comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact iWALK customer service through the retailer where you purchased the product or visit the official iWALK website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question