

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BOLOXA](#) /

› [BOLOXA Wireless Earbuds User Manual](#)

BOLOXA A17

BOLOXA Wireless Earbuds User Manual

Model: A17

INTRODUCTION

Thank you for choosing BOLOXA Wireless Earbuds. This manual provides detailed instructions for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The BOLOXA Wireless Earbuds, featuring ear hooks, displayed alongside their charging case with an LED power display. The earbuds are blue.

WHAT'S IN THE BOX

Verify that all items are present in your package:

- One pair of wireless headset
- Wireless charging case with battery indicator
- Small, medium, and large eartips (Medium size is pre-installed on earbuds)
- USB-C Charging Cable

- User Manual (this document)

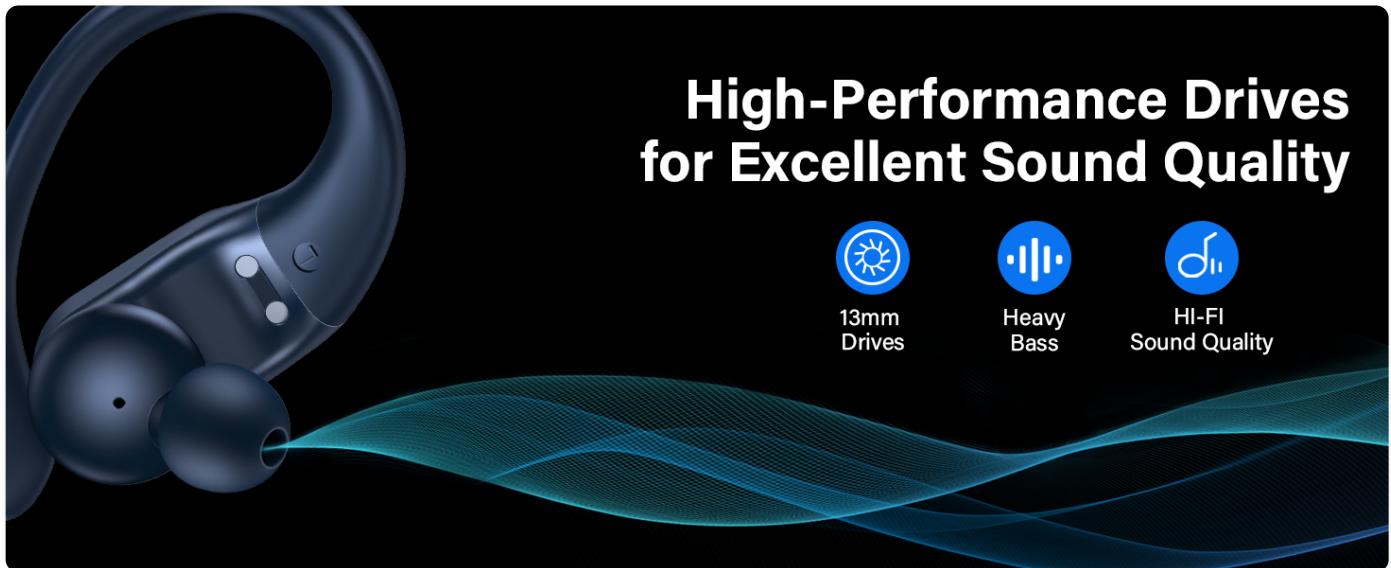


Image: A flat lay of all included accessories: the earbuds, charging case, various sized ear tips, a USB-C charging cable, and the user manual.

SPECIFICATIONS

Feature	Detail
Brand	BOLOXA
Model Name	A17
Connectivity Technology	Wireless (Bluetooth 5.3)
Earbud Battery Life	Up to 9 hours (single charge)
Total Playtime (with charging case)	Up to 70 hours
Charging Time (earbuds)	15 minutes for 1 hour use
Charging Case Battery Capacity	600mAh
Water Resistance Level	IPX7 (sweat and rain resistant)
Audio Driver Size	13mm Dynamic Driver
Control Type	Physical Button Control
Ear Placement	Over Ear (with earhooks)
Compatible Devices	Bluetooth-enabled devices (Android, iPhone, Smart TVs, Computers, Laptops)
Dimensions	1.2 x 1.96 x 1.59 inches
Item Weight	4.6 ounces

Long Battery Life for All-Day Enjoyment



Image: An illustration detailing the battery life: 9 hours of music playtime per single charge and up to 70 hours of total playback with the 600mAh charging case.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. The case features a dual power display to show the remaining battery of the case and the charging status of each earbud.

- **USB-C Charging:** Connect the provided USB-C cable to the charging case and a power source.
- **Wireless Charging:** Place the charging case on a compatible wireless charging pad (not included).

Wireless Charging & USB-C Cable Charging

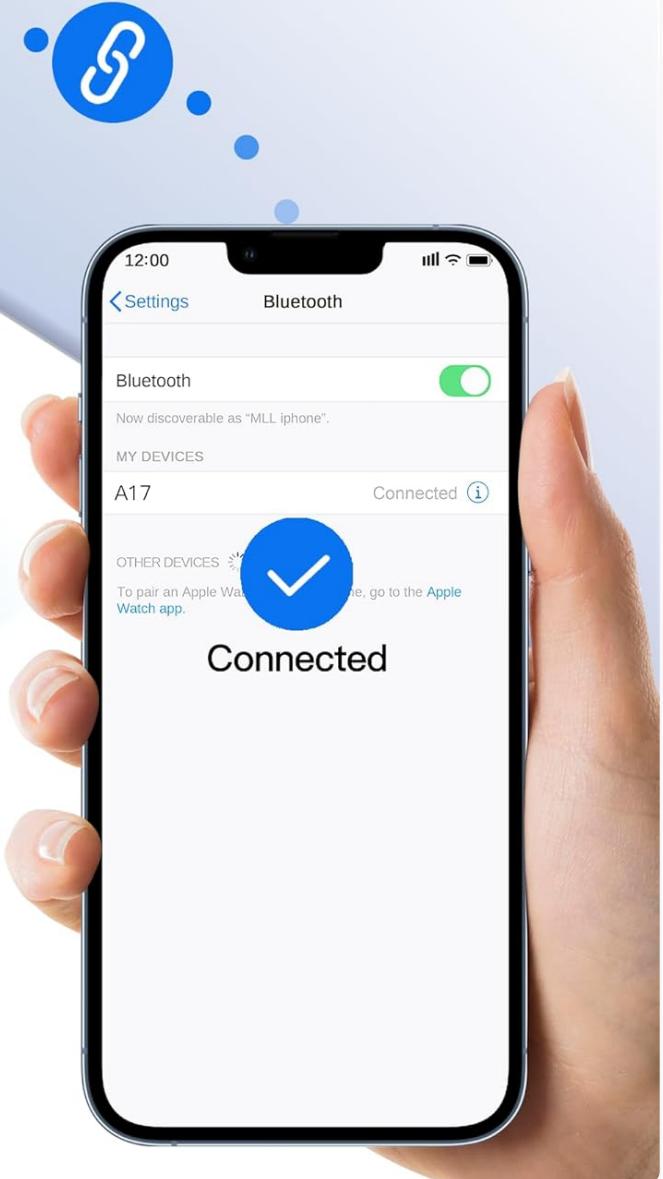


Image: The charging case demonstrating both USB-C cable charging and wireless charging capabilities.

2. Pairing with Your Device

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case and take out both earbuds. They will automatically enter pairing mode.
3. On your device, search for Bluetooth devices and select "A17" from the list.
4. Once connected, you will hear a confirmation prompt.

One-Step Auto Connection



01 Take out the earbuds from charging case.

02 Search Bluetooth and connect "A17".

Image: A smartphone displaying a successful Bluetooth connection to "A17", illustrating the one-step auto-pairing process when earbuds are removed from the case.

After the initial successful connection, the earbuds will automatically pair with your device when taken out of the charging case.

OPERATING INSTRUCTIONS

Wearing the Earbuds

The earbuds are designed with flexible ear hooks for a secure and comfortable fit, especially during physical activity.

1. Choose the most suitable ear tips (S, M, L) for your ear canal.
2. Insert the earbud into your ear canal.
3. Rotate the ear hook backward until it fits snugly and securely around your ear.



Image: A visual guide demonstrating the correct way to wear the earbuds, emphasizing selecting the right ear tip size and rotating the ear hook for a secure fit.

Button Controls

The earbuds feature multi-functional physical buttons for precise control:

Action	Function
Press Once (L/R earbud)	Play/Pause music, Answer/End call
Quick Press Thrice (L/R earbud)	Activate Voice Assistant
Hold & Long Press 2s (L earbud)	Decrease Volume
Hold & Long Press 2s (R earbud)	Increase Volume
Quick Press Twice (L earbud)	Previous Track
Quick Press Twice (R earbud)	Next Track



Image: A visual representation of the earbud's button controls, detailing single press, double press, and long press functions for various operations.

Call Management

The built-in microphones ensure clear call performance.

- **Answer/End Call:** Press the button once on either earbud.
- **Reject Call:** Hold the button for 2 seconds.

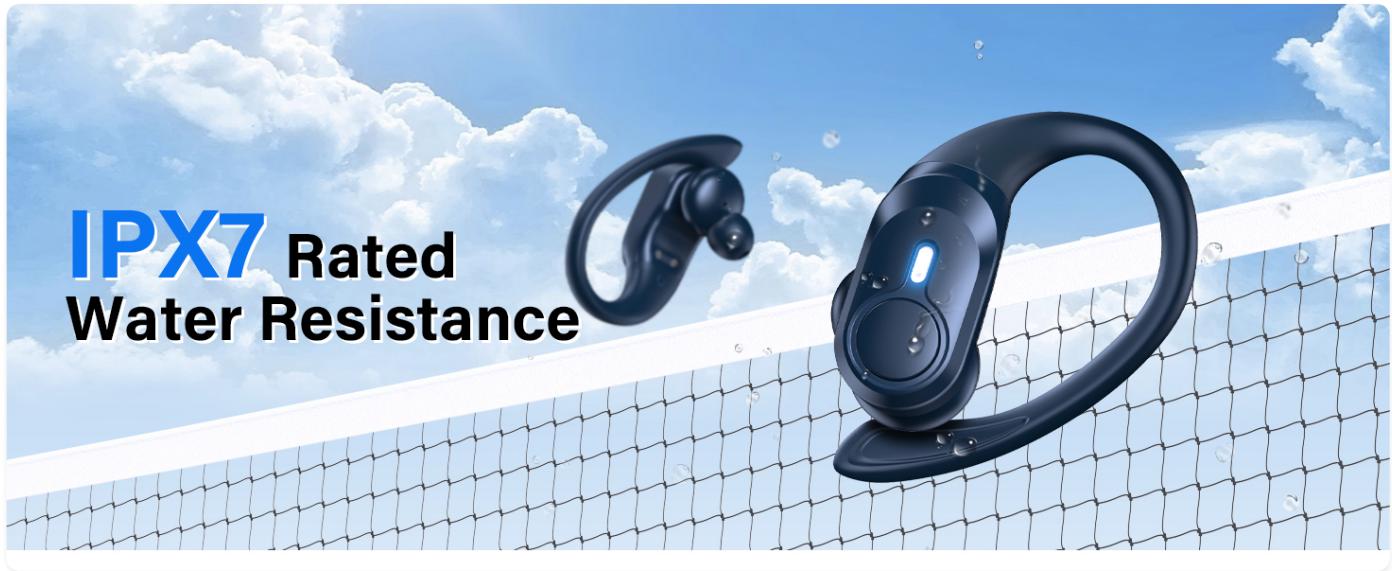


Image: A person using the earbuds to take a call, highlighting the clear voice pickup feature for hands-free conversations.

Maintenance and Care

- **Cleaning:** Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry cloth. For stubborn dirt, a cotton swab lightly dampened with rubbing alcohol can be used on the charging probes.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and ensure they remain charged.
- **Water Resistance:** The earbuds are IPX7 water-resistant, meaning they can withstand sweat and rain. However, they are not designed for swimming or submersion in water. Ensure the earbuds are dry before placing them back in the charging case.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) as this can affect battery life and overall performance.

Two Methods to Charge



(Wireless Charging Pad not included)



Image: The earbuds displayed with icons indicating IPX7 water resistance, suitable for light rain, sweat, and accidental splashes.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing/connecting.	<ul style="list-style-type: none">Ensure earbuds are charged.Turn off and on your device's Bluetooth.Forget "A17" in your device's Bluetooth settings and re-pair.Place earbuds back in the case, close, wait a few seconds, then open and try again.
Only one earbud working.	<ul style="list-style-type: none">Ensure both earbuds are charged.Place both earbuds back in the charging case, close the lid, and then open it again. This often re-syncs them.Clean the charging contacts on both earbuds and inside the case.

Problem	Solution
Low volume or poor sound quality.	<ul style="list-style-type: none"> Adjust volume on both your device and the earbuds. Ensure ear tips are properly sealed in your ear canal. Try different sized ear tips. Clean ear tips and earbud speaker mesh from earwax or debris.
Charging case not charging.	<ul style="list-style-type: none"> Check USB-C cable and power adapter. Try a different cable/adapter. Ensure wireless charging pad is compatible and properly aligned if using wireless charging.

WARRANTY AND SUPPORT

BOLOXA products are designed for reliability and performance. For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official BOLOXA website.

Many users have reported a lifetime warranty upon product registration. Please check the official BOLOXA website for the most up-to-date warranty terms and registration process.

For further assistance, you may also refer to the official User Manual PDF available online: [BOLOXA Wireless Earbuds User Manual PDF](#)

ADDITIONAL INFORMATION

Product Videos

Watch these official product videos for visual guides and demonstrations:

Wireless Bluetooth Headphones for Workout/Running/Gym

Your browser does not support the video tag.

Video: This video demonstrates the BOLOXA Wireless Earbuds' suitability for workouts, running, and gym activities, highlighting their secure fit and durability. It showcases features like immersive stereo music, hands-free button control, and IPX7 waterproofing.

Bluetooth Headphones Wireless Earbuds Sports Earphones-A17

Your browser does not support the video tag.

Video: This video provides an overview of the BOLOXA A17 Bluetooth Headphones, emphasizing their design for sports, comfortable and snug fit, and easy controls for music and calls. It also highlights the wireless charging support and long battery life.


© 2024 BOLOXA. All rights reserved.

Related Documents - A17

	<p>BOLOXA S10 True Wireless Earbuds User Manual - Pairing, Charging, and Operations</p> <p>Official user manual for BOLOXA S10 True Wireless Earbuds. Find detailed instructions on Bluetooth pairing, charging, product specifications, multi-function operations, and troubleshooting for your wireless headphones.</p>
---	---

 A17_User Manual True Wireless Sports Earbuds	<p>BOLOXA A17 True Wireless Sports Earbuds User Manual</p> <p>Discover how to use your BOLOXA A17 True Wireless Sports Earbuds with this comprehensive user manual. Learn about product features, pairing, charging, controls, troubleshooting, and safety guidelines for optimal audio experience.</p>
 A17_User Manual True Wireless Sports Earbuds	<p>BOLOXA A17 True Wireless Sports Earbuds User Manual</p> <p>User manual for BOLOXA A17 True Wireless Sports Earbuds, covering product specifications, packing list, operation, charging, and troubleshooting.</p>
 B16_User Manual Wireless Earbuds	<p>BOLOXA B16 Wireless Earbuds User Manual</p> <p>User manual for BOLOXA B16 Wireless Earbuds, detailing setup, Bluetooth pairing, touch controls, specifications, and troubleshooting. Features include automatic power on/off, voice assistance, and music playback.</p>
 S12_User Manual True Wireless Sports Earbuds	<p>BOLOXA S12 True Wireless Sports Earbuds User Manual</p> <p>Comprehensive user manual for BOLOXA S12 True Wireless Sports Earbuds, covering setup, operations, charging, troubleshooting, and specifications.</p>
 U8I_User Manual Wireless Sports Earbuds	<p>BOLOXA U8I Wireless Sports Earbuds User Manual</p> <p>Comprehensive user manual for BOLOXA U8I wireless sports earbuds, covering product overview, operations, Bluetooth connection, charging, troubleshooting, and safety information.</p>

Documents - BOLOXA – A17

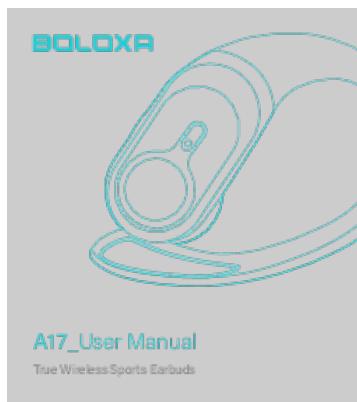

[BOLOXA A17 True Wireless Sports Earbuds User Manual](#)

User manual for BOLOXA A17 True Wireless Sports Earbuds, covering product specifications, packing list, operation, charging, and troubleshooting.

lang: **score:20** filesize: 1.19 M page_count: 12 document date: 2023-08-10