

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Reshow](#) /

› [Reshow Portable Cassette Recorder Player User Manual](#)

## Reshow wit

# Reshow Portable Cassette Recorder Player User Manual

Model: wit | Brand: Reshow

## INTRODUCTION

The Reshow Portable Cassette Recorder Player is a versatile device designed to bring back the nostalgic experience of cassette tapes while offering modern functionalities. It features a built-in speaker, headphone jack, and the ability to record audio and convert tapes to MP3 format. This manual provides detailed instructions to help you get the most out of your device.



Figure 1: Reshow Portable Cassette Recorder Player (White model).

## PACKAGE CONTENTS

Upon unboxing your Reshow Cassette Recorder Player, you will find the following items:

- Reshow Cassette Recorder Player (Model: wit)
- USB-C Cable
- AUX Cable
- Instruction Manual

# What Included



Figure 2: The complete package contents, including the player, cables, and manual. Please note that 2 AA batteries are not included.

Video 1: An overview of what is included in the Reshow Cassette Player package, demonstrating the unboxing experience.

## SETUP

### Power Supply Options

The Reshow Cassette Recorder Player can be powered by two methods:

- 1. 2 AA Batteries (Not Included):** Open the battery compartment on the back of the device and insert two AA batteries, ensuring correct polarity.
- 2. USB Power Cord (Included):** Connect the included USB-C cable to the device's USB-C port and plug the other end into a 5V USB power adapter (not included) or a computer's USB port.

**Important: Do not use both batteries and USB power simultaneously.**

## Inserting a Cassette Tape

To insert a cassette tape:

1. Gently slide the cassette door open.
2. Insert your cassette tape with the desired side facing up.
3. Close the cassette door firmly until it clicks into place.

Video 2: Demonstrates the two ways to power the cassette player (batteries and USB) and how to insert a cassette tape.

## OPERATING INSTRUCTIONS

### Playing Cassettes

To play a cassette tape:

1. Ensure the device is powered on and a cassette is inserted.
2. Press the **PLAY** button to begin playback.
3. Adjust the volume using the **VOLUME** dial.
4. To stop playback, press the **STOP** button.
5. Use the **FAST FORWARD** and **REWIND** buttons to navigate through the tape.

 
# Portable Simple Design




Play Button



Recording to tape



 Transcribing music  
from tape to computer  
(via Audacity)



Record the contents  
of an AUX source to  
the Reshow Cassette  
Player.

Figure 3: Labeled controls of the Reshow Cassette Player, showing play, stop, fast forward, rewind, and volume.

Video 3: Demonstrates connecting the Reshow player in a car for easy playback, highlighting its portability.

## Recording Audio to Tape

The device supports recording external audio sources onto a blank cassette tape.

1. Insert a blank cassette tape into the player.
2. Connect your external audio source (e.g., computer, phone) to the device's **AUDIO TO TAPE** input using the included AUX cable.
3. Press the **RECORD** button to start recording. The device will automatically begin playing the source audio.
4. To stop recording, press the **STOP** button.

**Note: The audio signal recorded by this function is analog. Adjust the device volume of the Reshow cassette deck to the maximum for better recording effect. If not satisfied, adjust the volume to achieve the best recording.**

Video 4: A step-by-step guide on how to easily record external audio sources onto a cassette tape using the AUX cable.

## Converting Cassettes to MP3 Format

To digitize your cassette tapes to MP3 format on your computer:

1. Connect the Reshow Cassette Recorder Player to your computer using the included USB-C cable.
2. The device will be recognized as an external audio device by your computer.
3. Use audio recording software (e.g., Audacity, available for free online) to capture the audio playback from the cassette player.
4. Start playback on the cassette player and begin recording in your software simultaneously.
5. Once recording is complete, stop playback on the device and stop recording in the software.
6. Export the recorded audio as an MP3 file from your software.



Figure 4: The Reshow Cassette Player connected to a laptop via USB-C for digitizing tapes to MP3 format.

Video 5: A demonstration of how to convert cassette tapes to MP3 format using the USB-C connection and audio software.

## MAINTENANCE

To ensure the longevity and optimal performance of your Reshow Cassette Recorder Player, follow these maintenance guidelines:

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, remove the AA batteries to prevent leakage.
- Handle cassette tapes carefully to prevent damage to the tape and the player's internal mechanisms.

## TROUBLESHOOTING

If you encounter issues with your Reshow Portable Cassette Recorder Player, try the following troubleshooting steps:

- **No Power:** Ensure batteries are inserted correctly with proper polarity, or that the USB-C cable is securely connected to a working power source.
- **No Sound:** Check the volume level. Ensure headphones are properly plugged in if using them, or that the built-in speaker is not obstructed.
- **Poor Sound Quality (Playback):** The quality of the original cassette tape can affect playback. Try a different tape. Ensure the tape is not damaged or tangled.
- **Recording Issues:** Verify that a blank tape is inserted. Ensure the AUX cable is securely connected to both the source and the player. Adjust the volume of the source device and the player for optimal recording levels.
- **Conversion to MP3 Issues:** Ensure the USB-C cable is properly connected to the computer. Verify that your audio recording software (e.g., Audacity) recognizes the device as an input source. Consult your software's documentation for specific recording and export settings.

## SPECIFICATIONS

Product Dimensions	1.2 x 4.5 x 3.2 inches
Item Weight	11.3 ounces
Model Number	wit
Manufacturer	Reshow
Country of Origin	China

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your Reshow Portable Cassette Recorder Player, please contact the manufacturer directly through their official website or the contact information provided in the product packaging. Keep your purchase receipt for warranty claims.

© 2024 Reshow. All rights reserved.