

EPOMAKER FEKER IK85 Pro

EPOMAKER x Feker IK85 Pro Gasket-Mounted Mechanical Keyboard User Manual

Model: FEKER IK85 Pro

Brand: EPOMAKER

1. INTRODUCTION

Thank you for purchasing the EPOMAKER x Feker IK85 Pro Gasket-Mounted Mechanical Keyboard. This manual provides essential information for setting up, operating, and maintaining your new keyboard. Please read it carefully to ensure optimal performance and longevity of your device.

What's in the Box

- EPOMAKER x Feker IK85 Pro Mechanical Keyboard
- Dust Cover
- Instructional Manual
- USB Cable
- Keycap-Switch Puller



Figure 1: Contents of the EPOMAKER x Feker IK85 Pro package. Includes the keyboard, dust cover, manual, USB cable, and keycap-switch puller.

2. SPECIFICATIONS

- **Model:** FEKER IK85 Pro
- **Screen Size:** 1.06 inch
- **Key Amounts:** 82 keys + 1 knob
- **Connectivity:** Wireless (2.4Ghz, Bluetooth 5.0) and Wired (USB-C)
- **Mounting Type:** Gasket
- **Keycap Material:** Dye-sub PBT
- **Keycap Profile:** JSA
- **Battery:** 8000mAh
- **LED Direction:** South-facing
- **Plate Material:** Flex-cut PC
- **Hot Swappable:** Yes, 3-pin and 5-pin switches

- **Anti-ghost Key:** NKRO
- **Bottom Layer:** Silicon
- **Switch Sheet:** IXPE
- **Sandwich Layer:** POM foam
- **Compatible System:** Win/MacOS/Android/iOS
- **Dimension:** 348.3 x 143.8 x 44 mm (13.78 x 5.51 x 1.73 inches)
- **Weight:** 0.9kg (3.03 pounds)

3. SETUP AND CONNECTIVITY

The EPOMAKER x Feker IK85 Pro keyboard offers versatile connectivity options to suit your needs.

3.1. Connectivity Modes

The keyboard supports three modes: 2.4Ghz Wireless, Bluetooth 5.0, and USB-C Wired. A switch on the back of the keyboard allows you to select your preferred mode.



Figure 2: The keyboard connected to a laptop, illustrating its multi-mode connectivity.

3.1.1. 2.4Ghz Wireless Mode

1. Locate the 2.4Ghz USB receiver (dongle) in the keyboard's storage slot or packaging.
2. Plug the USB receiver into an available USB port on your computer.
3. Switch the keyboard to 2.4Ghz mode using the selector switch on the back.
4. The keyboard should automatically connect to your device.

3.1.2. Bluetooth 5.0 Mode

1. Switch the keyboard to Bluetooth mode using the selector switch on the back.

2. On your device (computer, tablet, phone), enable Bluetooth and search for new devices.
3. Select

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question