

[manuals.plus](#) /› [GBC](#) /› [Jolly Line Universal TV Remote Control for Sony TVs \(Model JL1717/COMP\) - Instruction Manual](#)

GBC JL1717/COMP

Jolly Line Universal TV Remote Control for Sony TVs

Model: JL1717/COMP (Item Model Number: 33-03-0033)

1. INTRODUCTION AND OVERVIEW

This instruction manual provides essential information for the setup, operation, and maintenance of your Jolly Line Universal TV Remote Control, model JL1717/COMP. This remote is specifically designed as a replacement and compatible universal remote for Sony televisions. It is pre-programmed and requires no additional configuration, offering immediate use upon battery installation.

The remote control features an ergonomic design for comfortable handling and includes all standard functions necessary for controlling your Sony TV.



Image 1.1: Front view of the Jolly Line Universal TV Remote Control.

This image displays the front of the remote control, highlighting its button layout, including the number pad, navigation buttons, volume and channel controls, and dedicated app buttons.

2. SETUP: BATTERY INSTALLATION

The Jolly Line Universal TV Remote Control requires two (2) AAA 1.5V batteries for operation. Batteries are not included with the remote control and must be purchased separately.

2.1. Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AAA 1.5V batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

After installing the batteries, the remote control is ready for immediate use with compatible Sony TVs. No programming or pairing is required.



Image 2.1: Jolly Line Universal TV Remote Control in its retail packaging.

This image shows the remote control within its packaging, which often includes instructions or visual cues for battery installation on the reverse side.

3. OPERATING INSTRUCTIONS

The Jolly Line Universal TV Remote Control is pre-programmed for Sony TVs, allowing for direct control without any setup procedures. Simply point the remote at your television and press the desired function button.

3.1. Basic Functions

- **Power Button (>):** Turns the TV on or off.
- **Number Pad (0-9):** Directly selects channels or inputs numerical data.
- **Volume Up/Down (VOL +/-):** Adjusts the sound level.
- **Channel Up/Down (CH +/- or PROG +/-):** Changes the television channel.
- **Mute Button (Muting):** Silences the TV audio.
- **Input/Source Button (INPUT or DIGITAL):** Cycles through available input sources (HDMI, AV, etc.).

3.2. Navigation and Menu Functions

- **Menu Button (MENU):** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right Arrows):** Moves the cursor within menus.
- **OK/Enter Button (OK):** Confirms selections in menus.
- **Back/Return Button (BACK):** Returns to the previous screen or menu.
- **Exit Button (EXIT):** Closes the current menu or application.

3.3. Special Functions and App Buttons

The remote may include dedicated buttons for specific functions or streaming applications, depending on your Sony TV model. These buttons provide quick access to features such as:

- **YouTube TV / Netflix:** Direct access to these streaming services.
- **Guide (GUIDE):** Displays the electronic program guide.
- **Options (OPTIONS):** Accesses contextual options for the current screen.
- **Home (HOME):** Returns to the TV's smart home screen.

Functionality of specific buttons may vary slightly based on the exact model of your Sony TV. For detailed information on your TV's features, refer to your television's user manual.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

4.1. Cleaning

- To clean the remote control, use a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote's interior.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface or internal components.

4.2. Battery Replacement

Replace the batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.3. Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA 1.5V batteries.

- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the effective operating range and pointing the remote directly at the TV.

- **Specific Buttons Not Working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
- Some advanced functions or app buttons may require specific TV firmware or model compatibility. Refer to your Sony TV's manual for specific feature support.

- **Intermittent Operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the remote's infrared signal.

If the issue persists after following these steps, please contact the manufacturer's customer support for further assistance.

6. SPECIFICATIONS

- **Model:** JL1717/COMP
- **Item Model Number:** 33-03-0033
- **Compatibility:** Sony TVs
- **Power Source:** 2 x AAA 1.5V Batteries (not included)
- **Product Dimensions:** 7.09 x 1.97 x 0.79 inches (1.5 x 4.5 x 21 cm)
- **Item Weight:** 3.87 ounces
- **Special Features:** Ergonomic, Pre-Programmed
- **Color:** Black

7. WARRANTY AND SUPPORT

Specific warranty information for the Jolly Line Universal TV Remote Control (Model JL1717/COMP) is not provided within this manual. For details regarding warranty coverage, terms, and conditions, please refer to the product packaging or contact the manufacturer, GBC, directly.

For technical support or further inquiries, please reach out to the customer service department of the retailer where the product was purchased or the manufacturer.