

## PDP 500-234-SON

# PDP REALMz Wireless Nintendo Switch Pro Controller - Sonic Superstars Edition User Manual

Model: 500-234-SON

## 1. INTRODUCTION

This manual provides detailed instructions for the PDP REALMz Wireless Nintendo Switch Pro Controller, Sonic Superstars Edition. This controller offers an immersive gaming experience with its unique design and advanced features, officially licensed by Nintendo and SEGA.



Image 1: Front view of the PDP REALMz Wireless Nintendo Switch Pro Controller, Sonic Superstars Edition, showcasing its clear casing and vibrant Sonic Green Hill Zone artwork.

## 2. PRODUCT FEATURES

- **Collectible Figurine & Multi-Layered Design:** Features a collectible Sonic figurine encased within the grip and a multi-layered design showcasing iconic scenes from Sonic Superstars.
- **Wireless Connectivity:** Enjoy gaming with a reliable 30-foot wireless range.
- **Rechargeable Battery:** Equipped with a built-in rechargeable battery providing up to 40 hours of playtime on a single charge.
- **Ergonomic Design:** Expertly designed for comfort during extended gaming sessions.
- **Customizable LED Lighting Effects:** Easily change LED lighting effects using the ABXY buttons.
- **Official Licensing:** Officially licensed by Nintendo and SEGA.

# COLLECTIBLE FIGURINE

Inside a Multi-Layered Design



Image 2: A close-up view highlighting the collectible Sonic figurine embedded within the controller's transparent casing, part of its multi-layered design.

# WIRELESS CONNECTION

30-Foot Range



Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo.

Image 3: Demonstrates the controller's wireless connection, showing hands holding it with a wireless signal icon, indicating its 30-foot range.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge your controller. Connect the included USB-C cable to the controller's charging port and the other end to a Nintendo Switch dock or a compatible USB power source. The LED indicators on the controller will show charging status.

### 3.2 Wireless Connection to Nintendo Switch

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select "Controllers" > "Change Grip/Order."
3. Press and hold the SYNC Button on the top of the PDP REALMz controller for a few seconds until the player LEDs begin to flash.
4. Once connected, the player LED(s) corresponding to your controller number will remain lit.

## 4. OPERATING INSTRUCTIONS



The PDP REALMz controller functions similarly to a standard Nintendo Switch Pro Controller. All standard buttons (A, B, X, Y, L, R, ZL, ZR, +, -, Home, Capture, D-Pad, Left/Right Analog Sticks) are present and operate as expected.

#### 4.1 LED Lighting Effects

To customize the LED lighting effects, press and hold the Function button (usually located on the back or bottom of the controller) and then press the ABXY buttons to cycle through different lighting modes and colors.



Image 4: The controller with its LED lighting effects activated, illuminating the buttons and adding to the visual appeal.

## 5. BATTERY AND CHARGING

The controller features a built-in Lithium Ion rechargeable battery. A full charge provides approximately 40 hours of gameplay. To charge, connect the controller to a USB power source using the provided USB-C cable. The charging indicator lights will show the battery status.

# RECHARGEABLE BATTERY

40 Hours of Play



Image 5: A side profile of the controller, highlighting the USB-C charging port and the internal rechargeable battery, capable of 40 hours of play.

## 6. MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts, as this may damage internal components or the collectible figurine.

## 7. TROUBLESHOOTING

### 7.1 Controller Not Connecting

- Ensure the controller is fully charged.
- Verify that the Nintendo Switch console is updated to the latest system software.
- Repeat the wireless connection steps (Section 3.2).

- Try connecting the controller directly to the Switch dock via USB-C cable to establish a wired connection, then attempt wireless pairing again.

### 7.2 Short Battery Life

- Ensure the controller is being charged with a compatible USB power source.
- Avoid leaving the controller in extreme temperatures.
- If issues persist, contact customer support.

## 8. SPECIFICATIONS

Specification	Detail
Model Number	500-234-SON
Manufacturer	PDP
Connectivity	Wireless (30-foot range)
Battery Type	1 Lithium Ion battery (included)
Battery Life	Up to 40 hours
Item Weight	8.8 ounces
Package Dimensions	6.42 x 5.55 x 2.64 inches
Release Date	January 1, 2024

## 9. OFFICIAL PRODUCT VIDEOS

### 9.1 PDP REALMz Wireless Nintendo Switch Pro Controller Sonic 360 Video

Your browser does not support the video tag.

Video 1: A 360-degree view of the PDP REALMz Wireless Nintendo Switch Pro Controller, Sonic Superstars Edition, showcasing its design from all angles. This video is a short preview from the manufacturer.

### 9.2 PDP Licensed Gaming Accessories Overview

Your browser does not support the video tag.




Video 2: An overview of various PDP licensed gaming accessories, including controllers for Nintendo, Xbox, and PlayStation, highlighting the brand's range of products.

## 10. WARRANTY AND SUPPORT




For warranty information and customer support, please refer to the official PDP website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Visit the [PDP Store](#) for more products and information.

Related Documents - 500-234-SON

	<p><a href="#">PDP REALMz™ Wireless Controller Quick Start Guide for Nintendo Switch</a></p> <p>Get started quickly with the PDP REALMz™ Wireless Controller for Nintendo Switch. This guide covers pairing, charging, LED lighting, and more.</p>
	<p><a href="#">REALMz™ Wired Controller Quick Start Guide for Nintendo Switch</a></p> <p>Quick start guide for the REALMz™ Wired Controller for Nintendo Switch. Learn setup, audio, volume, and LED lighting features.</p>
	<p><a href="#">PDP REALMz Wireless Plus Controller Quick Start Guide</a></p> <p>A quick start guide for the PDP REALMz Wireless Plus Controller for Nintendo Switch, covering pairing, reconnecting, charging, LED lighting modes, and programming back buttons.</p>



	<p><a href="#">PDP Afterglow Wave Wireless Controller Quick Start Guide</a></p> <p>A quick start guide for the PDP Afterglow Wave Wireless Controller for Nintendo Switch, covering pairing, charging, button programming, and lighting customization.</p>
	<p><a href="#">Afterglow Wireless Deluxe Controller for Nintendo Switch - Quick Start Guide &amp; Features   PDP</a></p> <p>Get started with your PDP Afterglow Wireless Deluxe Controller for Nintendo Switch. Learn how to pair, charge, customize lights, program back buttons, and understand the limited warranty.</p>
	<p><a href="#">PDP REMATCH Wired Controller for Nintendo Switch: Quick Start Guide</a></p> <p>Concise guide to setting up and using the PDP REMATCH Wired Controller for Nintendo Switch, covering initial setup, audio, volume, and back button programming.</p>