

[Manuals.plus](#) /

› [hosabely](#) /

› Hosabely SK600-CL Audio Mixer Instruction Manual

## hosabely SK600-CL

# Hosabely SK600-CL Audio Mixer Instruction Manual

Brand: hosabely | Model: SK600-CL

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Hosabely SK600-CL Audio Mixer. Please read this guide thoroughly to ensure proper usage and to maximize your audio experience for streaming, recording, karaoke, and gaming.

## PRODUCT OVERVIEW



Figure 1: Front view of the Hosabely SK600-CL Audio Mixer, showcasing its control panel with knobs, faders, and illuminated buttons.

The Hosabely SK600-CL is a compact audio mixer designed for beginners and enthusiasts. It integrates voice changing capabilities, multiple sound effects, and versatile connectivity for various audio applications.

**3 Voice Changes & Other Voice Options**

**13 Pre-set Ambient Sounds**

**5 Reverb Effects**

**8 Knob Volume Controls**

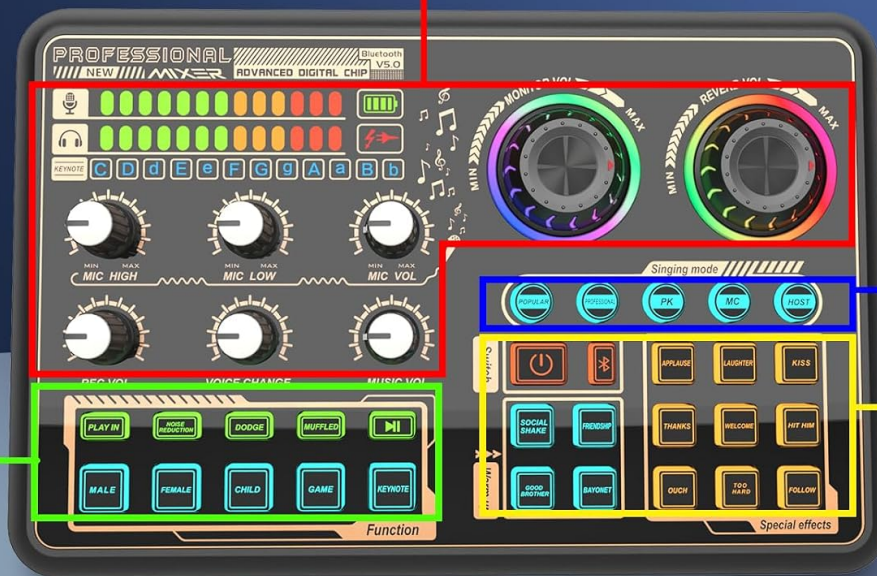 


Figure 2: Key features of the audio mixer, including voice changes, sound effects, reverb, and volume controls.

## SETUP AND CONNECTIONS

### Included Cables:

- 1 x USB Charging Cable
- 2 x 3.5mm Audio Cables
- 1 x Wired Earphone
- 1 x Type-C to Lightning Cable

### Connecting Your Device:

# BUILT-IN BATTERY FOR MAXIMUM MOBILITY

Start podcasting anything, anywhere

1200mAh

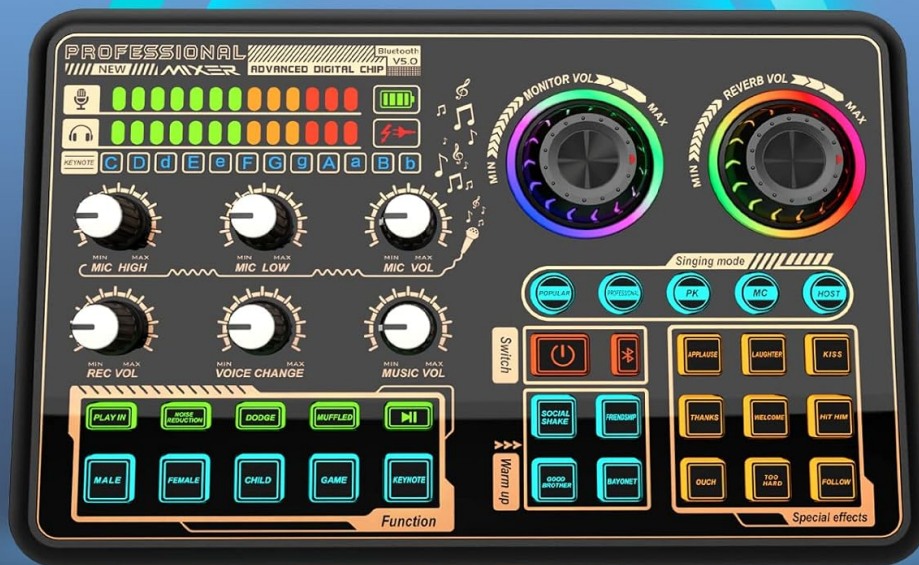


Figure 3: Overview of all available ports on the audio mixer.

- **Power/Charging:** Connect the USB Charging Cable to the DC 5V port on the mixer and a power source. The mixer has a built-in 1200mAh battery for portable use.
- **Microphones:** Plug your microphone(s) into the MIC 1 or MIC 2 3.5mm input jacks. Note: This mixer is not compatible with USB microphones or XLR to XLR microphones and does not support Phantom Power.
- **Headphones/Earphones:** Connect your headphones or the included wired earphone to the HEADSET or EARPHONE 1/2 jacks for monitoring audio.
- **Speakers:** Connect external speakers to the SPEAKER output jack.
- **Live Streaming:** Use the 3.5mm Audio Cables to connect the mixer's LIVE 1, LIVE 2, or LIVE 3 output jacks to your streaming device (phone, tablet, PC).
- **Accompaniment:** Connect an external audio source (e.g., phone, tablet) to the ACCOMPANIMENT input jack using a 3.5mm Audio Cable to play background music.
- **PC/OTG Connection:** Use the USB-C cable to connect the mixer to your PC or mobile device for digital audio transmission.
- **Bluetooth Connectivity:** Activate Bluetooth on the mixer and pair with your device for wireless audio input.



Figure 4: Connecting the mixer to a smartphone using the Type-C to Lightning cable.

## Connection Videos:

Your browser does not support the video tag.

Video 1: Demonstrates how to connect the SK600-CL Audio Mixer to a smartphone using the appropriate cable.

Your browser does not support the video tag.

Video 2: Provides instructions on connecting the SK600-CL Audio Mixer to a PC for recording and streaming purposes.

## OPERATING INSTRUCTIONS

### Power On/Off:

Press and hold the power button located on the mixer to turn the device on or off. The illuminated buttons will indicate power status.

### Volume Controls:

- Adjust the individual faders for MIC HIGH, MIC LOW, MIC VOL, REC VOL, VOICE CHANGE, and MUSIC VOL to control respective audio levels.
- Use the MONITOR VOL and REVERB VOL rotary knobs to fine-tune monitoring and reverb levels.

## Karaoke Singing:



Figure 5: Singing mode options on the mixer.

- Select from 5 different reverb effects to modify your voice.
- Adjust the REVERB VOL knob to control the intensity of the reverb.
- Choose from various singing modes like Popular, Professional, PK, MC, and Host for different vocal styles.

## Voice Changer:

# Bluetooth Digital Audio Mixer Multi-Device And Multi-SYstem Compatile Use



Android



Windows



ios



PC



Laptop



Tablet/ipad



Android/IOS

Figure 6: Voice changer controls and available voice effects.

- Press the VOICE CHANGE button to cycle through Male, Female, or Child voice tones.
- Adjust the VOICE CHANGE fader to fine-tune the pitch of the selected voice effect.

Live Sound Effects:

 


Figure 7: Sound effects buttons on the mixer.

- Utilize the 13 pre-set sound effect buttons (e.g., noise reduction, dodge, muffled, play-in) to enhance your live stream or recording.
- Press the corresponding button to activate each effect.

Custom Sound Pads:

- The mixer features custom sound pads (A, B, C, D) that can be programmed with your preferred audio clips. Refer to the user manual for detailed instructions on how to record and assign custom sounds.

Media Integration:

Your browser does not support the video tag.

Video 3: Demonstrates various playful features and sound effects of the audio mixer in action.

SPECIFICATIONS

| Feature                 | Detail                                   |
|-------------------------|------------------------------------------|
| Item Weight             | 1.26 pounds (0.57 Kilograms)             |
| Package Dimensions      | 10.94 x 7.13 x 2.2 inches                |
| Model Number            | SK600-CL                                 |
| Batteries               | 1 Lithium Ion battery required (1200mAh) |
| Power Source            | USB                                      |
| Number of Channels      | 5                                        |
| Connectivity Technology | Bluetooth, USB                           |

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the mixer. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the mixer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

TROUBLESHOOTING

- **Microphone Not Working:** Ensure your microphone is properly connected to the MIC 1 or MIC 2 jack. Verify that the microphone is a 3.5mm type and does not require phantom power or USB connectivity.
- **No Sound Output:** Check all cable connections (speakers, headphones, live output). Ensure volume levels on the mixer and connected devices are adequately adjusted.
- **Voice Changer/Effects Not Activating:** Some effects may not be available simultaneously. Refer to the specific

function key instructions in the full user manual for any limitations.

- **Device Not Charging:** Ensure the USB charging cable is securely connected to both the mixer and a working power source.

## WARRANTY AND SUPPORT

For any questions, issues, or warranty claims regarding your Hosabely SK600-CL Audio Mixer, please contact the manufacturer directly through their official support channels. Refer to the contact information provided in your product packaging or on the official hosabely website.