

[Manuals.plus](#) /

› [Karinear](#) /

› Karinear 60 cm Built-in Induction Cooktop User Manual

Karinear KNI-B35226-01-DE

Karinear 60 cm Built-in Induction Cooktop

Model: KNI-B35226-01-DE

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and keep them for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual.

- **Electrical Connection:** This appliance requires hardwired installation by a qualified electrician. It does not come with a plug. Ensure the voltage (220V) and wattage (5200W) match your electrical supply.
- **Child Safety:** The cooktop features a child lock function to prevent accidental operation. Always activate the child lock when the appliance is not in use, especially if children are present.
- **Overheating Protection:** The cooktop is equipped with an overheating protection system that automatically shuts down the unit if temperatures become too high.
- **Residual Heat Indicator:** After use, the cooking zones will display an 'H' to indicate residual heat, warning that the surface is still hot to touch. Do not touch hot surfaces.
- **Automatic Shutdown:** For safety, the cooktop will automatically shut down after a period of inactivity or if a cooking zone is left on for an extended duration without adjustment.
- **Cookware Compatibility:** Only use induction-compatible cookware with a magnetic base. Using incompatible cookware may result in poor performance or no heating.
- **Ventilation:** Ensure adequate ventilation around the cooktop during and after use. Do not block air vents.

Sicherer Schutz für Kochfelder


Entwickelt für die Sicherheit der Familie



This image highlights the safety features of the cooktop, such as child lock and overheating protection, designed to ensure family safety.

PRODUCT OVERVIEW

The Karinear 60 cm Built-in Induction Cooktop is designed for efficient and precise cooking. It features three independent cooking zones with touch controls, offering a total power output of 5200W. The sleek ceramic glass surface is durable and easy to clean.

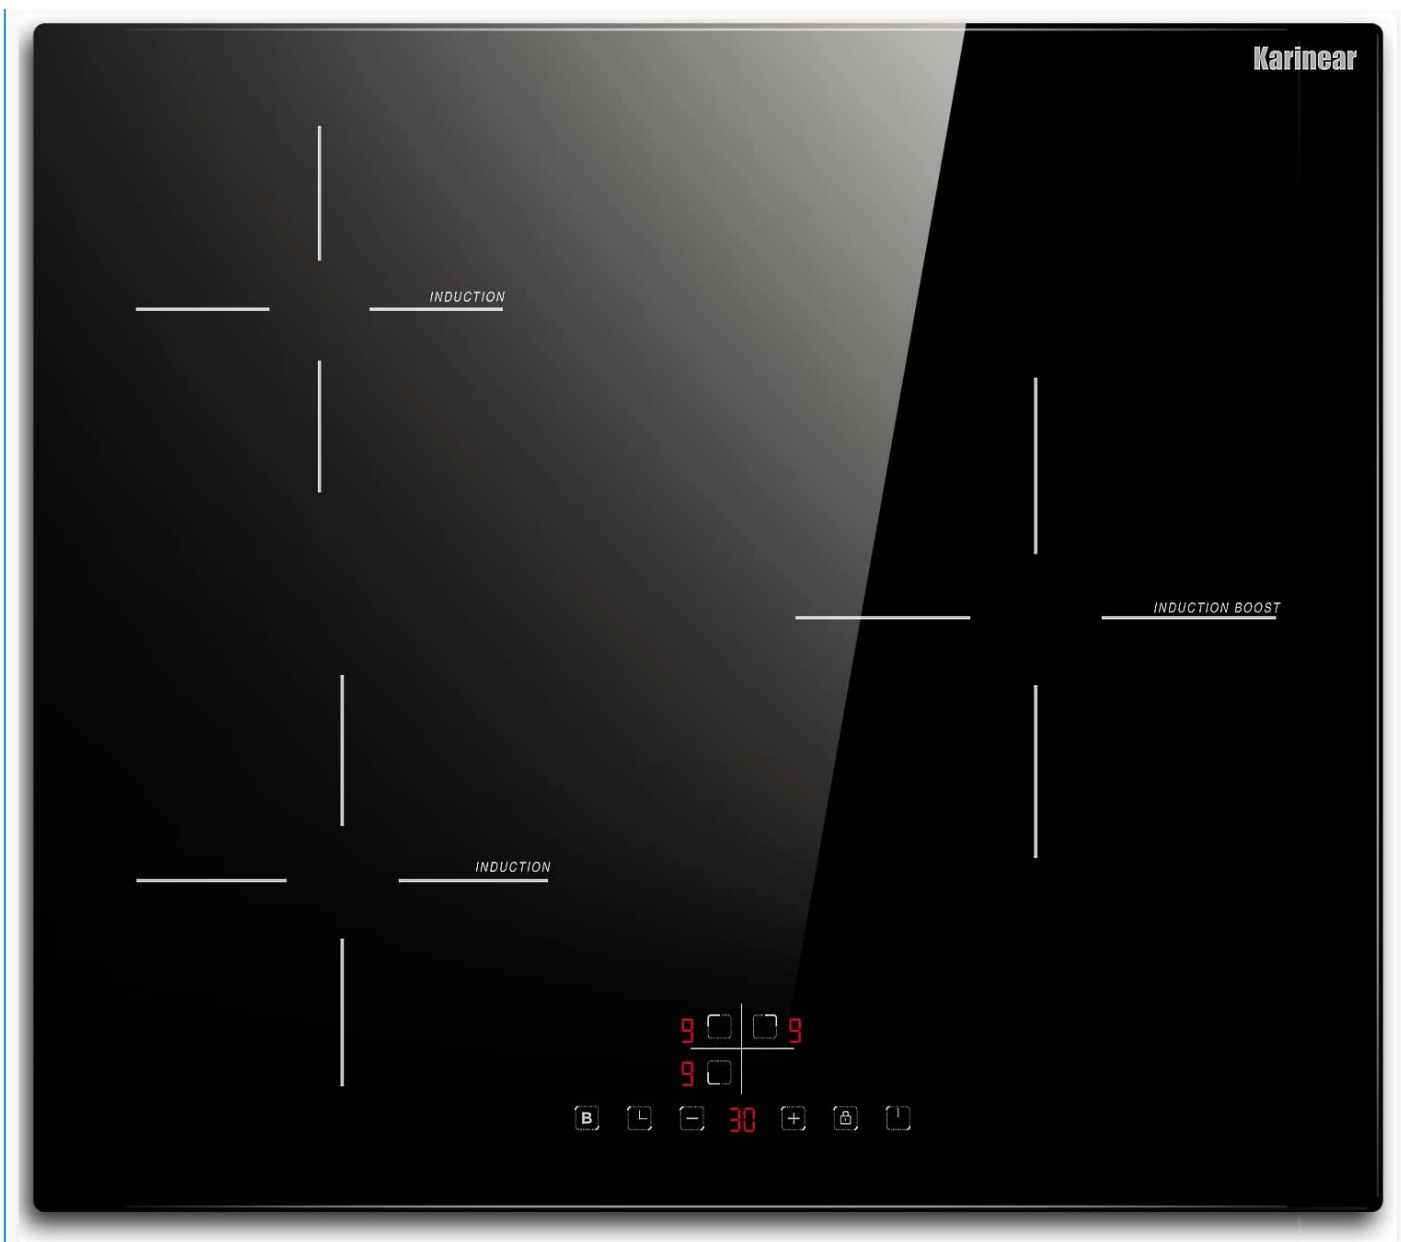

This image shows the top view of the Karinear 60 cm built-in induction cooktop, highlighting its three cooking zones and the sleek black glass surface with integrated touch controls.

INSTALLATION GUIDE

This induction cooktop is designed for drop-in installation into a countertop. Proper installation is crucial for safety and optimal performance. It must be hardwired to a suitable electrical supply.

Dimensions and Cut-out

Ensure your countertop cut-out dimensions match the requirements for this model. The product dimensions are 59 x 52 x 4.4 cm.

Electrical Connection

The appliance requires a 220V electrical connection. Wiring should be performed by a qualified electrician in accordance with local electrical codes. Refer to the wiring diagram provided with the product for correct connections.

Festverdrahtete Installation



This image provides critical dimensions for installing the Karinear induction cooktop into a countertop, along with a wiring diagram for hardwired electrical connection (220V).


OPERATING INSTRUCTIONS

The Karinear induction cooktop features intuitive touch controls for easy operation.

Control Panel Overview

Touch-Steuerung

Schnelle und einfache Anwendung

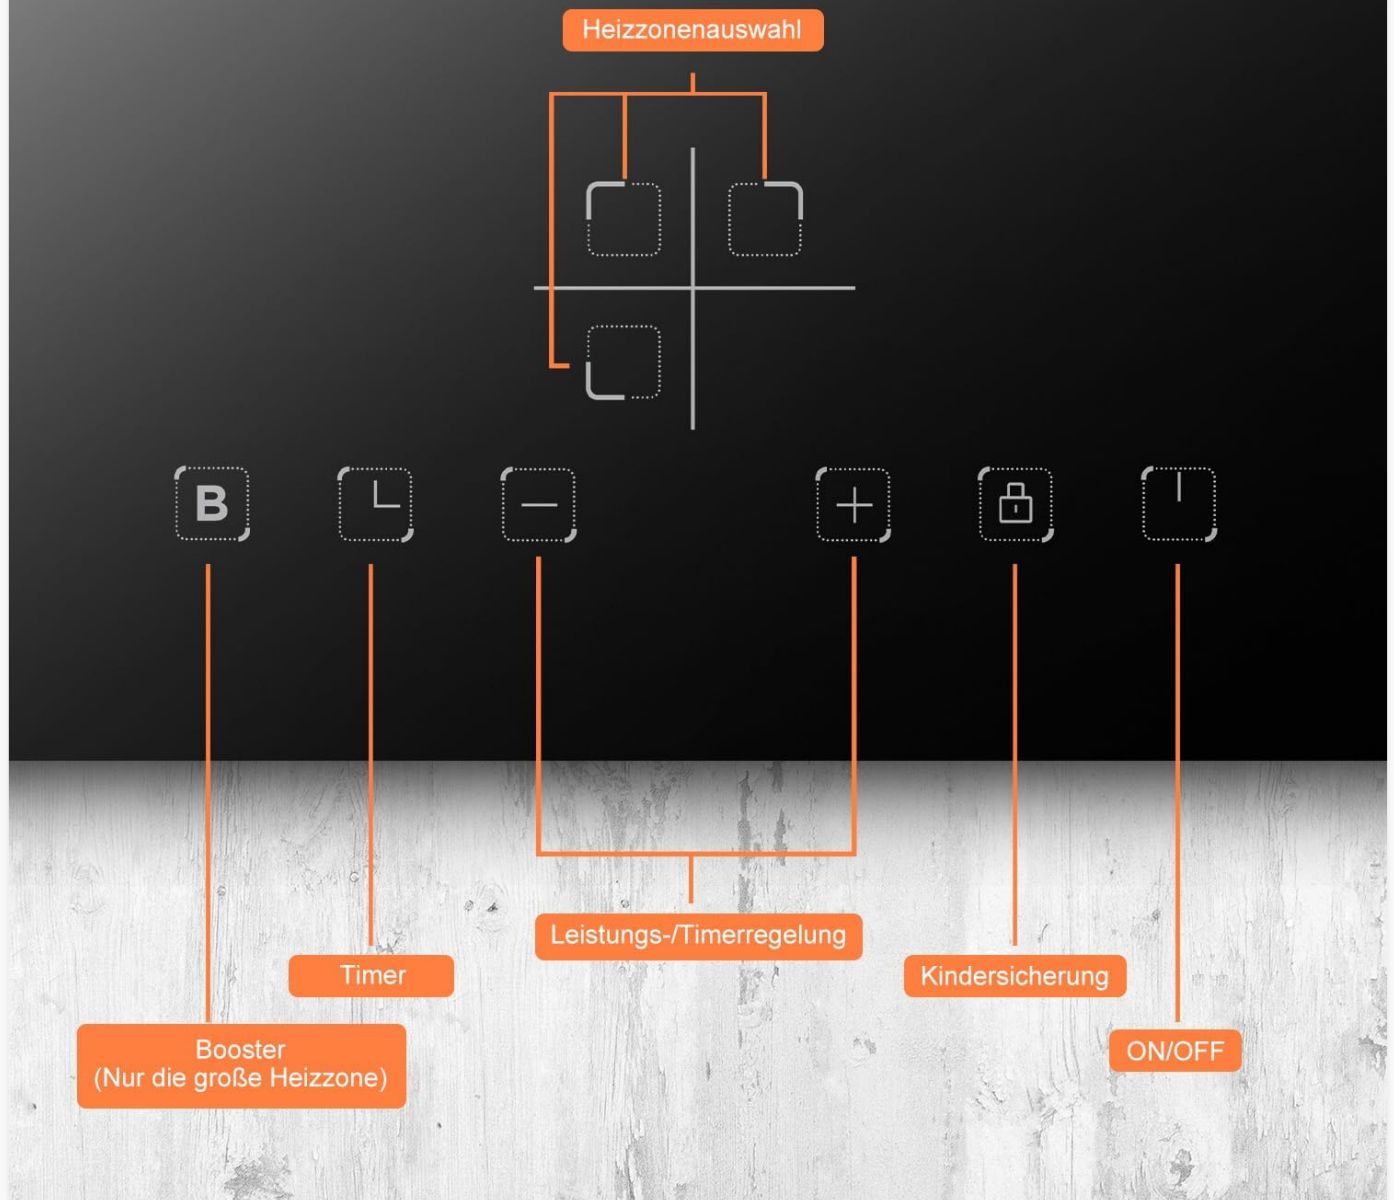

This diagram illustrates the touch control panel of the Karinear induction cooktop, detailing buttons for zone selection, power/timer control, booster, child lock, and ON/OFF.

Power Levels and Boost Function

- The cooktop offers 9 power levels, allowing precise temperature control from gentle simmering to rapid boiling.
- The Boost function provides maximum power to a selected cooking zone for a short period (e.g., 5 minutes), ideal for quickly boiling water. This function is typically available on larger heating zones.

Timer Function

- Set the timer for up to 99 minutes. Once the set time expires, the cooking zone will automatically turn off.
- To set the timer, select the cooking zone, then use the '+' or '-' buttons to adjust the time.

Child Lock

- To activate the child lock, press and hold the child lock button until the indicator lights up. This will disable all controls except the ON/OFF button.

- To deactivate, press and hold the child lock button again until the indicator turns off.

Hohe Leistung trifft auf unterschiedliche Kochstile

Mit 3 verschiedenen Power-Brennern können Sie ganz einfach köstliche und raffinierte Gerichte zubereiten



This image showcases the versatility of the Karinear induction cooktop, illustrating different cooking methods and the power output of its three heating zones (160mm/1400W, 180mm/1800W, 210mm/1800W BOOST 2000W).

COMPATIBLE COOKWARE

Induction cooktops require cookware with a magnetic base. To check if your cookware is compatible, hold a magnet to the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction.

Suitable Cookware Types:

- Cast iron pans
- Iron pots
- Stainless steel pots with a magnetic base

- Enamelled cast iron cookware

Unsuitable Cookware Types:

- Ceramic cookware
- Glass cookware
- Copper cookware
- Aluminum cookware (unless specifically designed for induction)

Kompatibel mit magnetischem Induktionskochgeschirr

Mit einem Magneten können Sie prüfen, ob das Kochgeschirr magnetisch ist und für dieses Kochfeld geeignet ist.



Compatible induction Cookware



Cast Iron Pan



Iron Pot



Stainless Steel Pot



Deep-Fry Pan



Ceramic Cookware



Glass Cookware



Copper Cookware



Aluminum Cookware

This visual guide demonstrates which types of cookware are suitable for induction cooktops, including cast iron, iron pots, and stainless steel pots, and which are not, such as ceramic, glass, copper, and aluminum.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

- **Daily Cleaning:** After each use, allow the cooktop to cool down. Wipe the ceramic glass surface with a damp cloth and a mild detergent. Dry thoroughly with a clean cloth.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a ceramic hob scraper or a specialized ceramic cooktop cleaner. Follow the product instructions for the cleaner.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Spills:** Clean up spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.



This image illustrates the ease of cleaning the smooth ceramic glass surface of the Karinear induction cooktop, showing a hand wiping it with a cloth.

If you encounter issues with your Karinear induction cooktop, refer to the following common troubleshooting tips:

- **Cooktop Not Turning On/Unresponsive Controls:** Ensure the cooktop is properly connected to the power supply. If controls are unresponsive, try resetting the appliance by turning off the main power at the circuit breaker for a few minutes, then turning it back on.
- **No Heat/Error Code:** Check if the cookware is induction-compatible and correctly placed on the cooking zone. If an error code appears, consult the full user manual for specific code meanings.
- **Unusual Noises:** A slight humming or buzzing sound during operation is normal for induction cooktops, especially at higher power settings, due to the electromagnetic field and cooling fan. This is not a defect.
- **Inconsistent Heating at Low Power:** At very low power settings, induction cooktops may cycle on and off to maintain the desired temperature, which can appear as intermittent heating. This is a normal characteristic of induction technology.
- **Cookware Detection Issues:** Ensure the base of your pot or pan covers at least the minimum diameter of the cooking zone.

If the problem persists after attempting these steps, please contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Manufacturer	Karinear
Model Number	KNI-B35226-01-DE
Product Dimensions	59 x 52 x 4.4 cm
Installation Type	Drop-In
Number of Heating Elements	3
Burner Type	Induction
Voltage	220 Volt
Wattage	5200 Watt
Operation Mode	Electricity
Surface Material	Ceramic Glass
Special Features	Overheating protection, 9 power levels, Intelligent timer, Child lock, Automatic shutdown
Color	Black (3 Zones)
Contents	Cooktop only

WARRANTY AND CUSTOMER SUPPORT

Your Karinear induction cooktop comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Karinear customer support through the retailer where you purchased the product or visit the official Karinear website for contact information.

© 2024 Karinear. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question